

MANUAL

INSTALLATION | OPERATION | MAINTENANCE

INTELLIGENT PRESSURE TRANSMITTER **LD291**

HART 
COMMUNICATION PROTOCOL



DEC/24 - VERSION 7

smar
Technology Company

LD291

Intelligent Pressure Transmitter



Consult our
subsidiary



Rua Dr. Antônio Furlan Junior, 1028 - Sertãozinho, SP - CEP: 14170-480
insales@smar.com.br | +55 (16) 3946-3599 | www.smar.com

© Copyright 2024, Nova Smar S/A. All rights reserved. June 2024.
Specifications and information are subject to change.
Updated addresses are available on our website.

smar
Technology Company

INTRODUCTION

The **LD291** is a smart pressure transmitter for gauge and level measurement. It is based on a field proven capacitive sensor that provides reliable operation and high performance. The digital technology used in the **LD291** enables an easy interface between the field and the control room and several interesting features that considerably reduce the installation, operation and maintenance costs.

The **LD291** is the economical alternative in routine gage pressure measurement. This lightweight design eliminates the need for mounting brackets and transmitter supports in many applications.

The model **LD291** offers digital HART[®] based communication simplifying calibration and providing remote diagnostics. Also, an optional LCD meter can be added to provide additional operations and local indication.

Its microprocessor- based electronics allow for total interchangeability with SMAR capacitive sensors. It automatically corrects sensor characteristic changes caused by temperature fluctuations.

The **LD291**, besides the normal functions offered by other smart transmitters, offers the following functions:

- ✓ **TABLE** - the pressure signal is custom linearized according to a 16-point table, enabling, e.g., conversion of level to volume of a horizontal cylindrical tank.
- ✓ **LOCAL ADJUSTMENT** - not only for lower and upper value, but input/output function, indication, as well.
- ✓ **PASSWORD** - three levels for different functions.
- ✓ **OPERATION COUNTER** - shows the number of changes in each function.
- ✓ **USER-UNIT** - indication in engineering unit of the property actually measured, e.g., level, flow or volume.
- ✓ **WRITE-PROTECT**- via hardware.

Get the best results of the LD291 by carefully reading these instructions.

Smar's pressure transmitters are protected by U.S. patents 6,433,791 and 6,621,443.

NOTE

This manual is compatible with version 7.XX.YY, where 7 indicates the software version, XX software release, and YY software emission. The indication 7.XX.YY means that this manual is compatible with any release of software version 7.

WARNING

To ensure that our products are safe and without risk to health, the manual must be read carefully before proceeding and warning labels on packages must be observed. Installation, operation, maintenance and servicing must only be carried out by suitably trained personnel and in accordance with the **Operation and Maintenance Instruction Manual**.

Waiver of responsibility

The contents of this manual abides by the hardware and software used on the current equipment version. Eventually there may occur divergencies between this manual and the equipment. The information from this document are periodically reviewed and the necessary or identified corrections will be included in the following editions. Suggestions for their improvement are welcome.

Warning

For more objectivity and clarity, this manual does not contain all the detailed information on the product and, in addition, it does not cover every possible mounting, operation or maintenance cases.

Before installing and utilizing the equipment, check if the model of the acquired equipment complies with the technical requirements for the application. This checking is the user's responsibility.

If the user needs more information, or on the event of specific problems not specified or treated in this manual, the information should be sought from Smar. Furthermore, the user recognizes that the contents of this manual by no means modify past or present agreements, confirmation or judicial relationship, in whole or in part.

All of Smar's obligation result from the purchasing agreement signed between the parties, which includes the complete and sole valid warranty term. Contractual clauses related to the warranty are not limited nor extended by virtue of the technical information contained in this manual.

Only qualified personnel are allowed to participate in the activities of mounting, electrical connection, startup and maintenance of the equipment. Qualified personnel are understood to be the persons familiar with the mounting, electrical connection, startup and operation of the equipment or other similar apparatus that are technically fit for their work. Smar provides specific training to instruct and qualify such professionals. However, each country must comply with the local safety procedures, legal provisions and regulations for the mounting and operation of electrical installations, as well as with the laws and regulations on classified areas, such as intrinsic safety, explosion proof, increased safety and instrumented safety systems, among others.

The user is responsible for the incorrect or inadequate handling of equipments run with pneumatic or hydraulic pressure or, still, subject to corrosive, aggressive or combustible products, since their utilization may cause severe bodily harm and/or material damages.

The field equipment referred to in this manual, when acquired for classified or hazardous areas, has its certification void when having its parts replaced or interchanged without functional and approval tests by Smar or any of Smar authorized dealers, which are the competent companies for certifying that the equipment in its entirety meets the applicable standards and regulations. The same is true when converting the equipment of a communication protocol to another. In this case, it is necessary sending the equipment to Smar or any of its authorized dealer. Moreover, the certificates are different and the user is responsible for their correct use.

Always respect the instructions provided in the Manual. Smar is not responsible for any losses and/or damages resulting from the inadequate use of its equipments. It is the user's responsibility to know and apply the safety practices in his country.

TABLE OF CONTENTS

SECTION 1 - INSTALLATION	1.1
GENERAL	1.1
MOUNTING.....	1.1
ELECTRONIC HOUSING	1.8
WIRING	1.9
LOOP CONECTIONS	1.10
INSTALLATION IN HAZARDOUS AREAS	1.12
SECTION 2 - OPERATION	2.1
FUNCTIONAL DESCRIPTION - SENSOR.....	2.1
FUNCTIONAL DESCRIPTION - HARDWARE	2.2
FUNCTIONAL DESCRIPTION - SOFTWARE.....	2.3
THE DISPLAY	2.5
SECTION 3 - CONFIGURATION	3.1
CONFIGURATION FEATURES.....	3.3
MANUFACTURING DATA AND IDENTIFICATION	3.3
PRIMARY VARIABLE TRIM - PRESSURE	3.3
PRIMARY VARIABLE CURRENT TRIM	3.4
TRANSMITTER ADJUSTMENT TO THE WORKING RANGE	3.5
ENGINEERING UNIT SELECTION	3.6
TABLE POINTS	3.7
EQUIPMENT CONFIGURATION	3.8
EQUIPMENT MAINTENANCE	3.8
SECTION 4 - PROGRAMMING USING LOCAL ADJUSTMENT	4.1
THE MAGNETIC TOOL	4.1
SIMPLE LOCAL ADJUSTMENT	4.2
ZERO AND SPAN RERANGING	4.2
COMPLETE LOCAL ADJUSTMENT	4.3
LOCAL PROGRAMMING TREE.....	4.3
CONFIGURATION [CONF].....	4.3
CONFIGURATION BRANCH (CONF)	4.4
RANGE (RANGE)	4.5
RANGE BRANCH (RANGE).....	4.5
FUNCTION (FUNCT)	4.7
PRESSURE TRIM [TRIM].....	4.8
ESCAPE LOCAL ADJUSTMENT [ESC]	4.10
SECTION 5 - MAINTENANCE PROCEDURES	5.1
GENERAL	5.1
DIAGNOSTIC WITH THE CONFIGURATOR	5.1
ERROR MESSAGES	5.1
DIAGNOSTIC WITH THE TRANSMITTER	5.2
DISASSEMBLY PROCEDURE	5.4
REASSEMBLY PROCEDURE	5.5
INTERCHANGEABILITY	5.6
RETURNING MATERIALS	5.6
SPARE PARTS	5.7
ORDERING CODE FOR HOUSING AND COVERS	5.9
ORDERING CODE FOR SENSOR	5.10
ISOLATION TEST ON EQUIPMENT HOUSING	5.13
SECTION 6 - TECHNICAL CHARACTERISTICS	6.1
ORDERING CODE	6.5


APPENDIX A - CERTIFICATIONS INFORMATIONS

A.1

APPENDIX B – SRF – SERVICE REQUEST FORM

B.1

INSTALLATION FLOWCHART

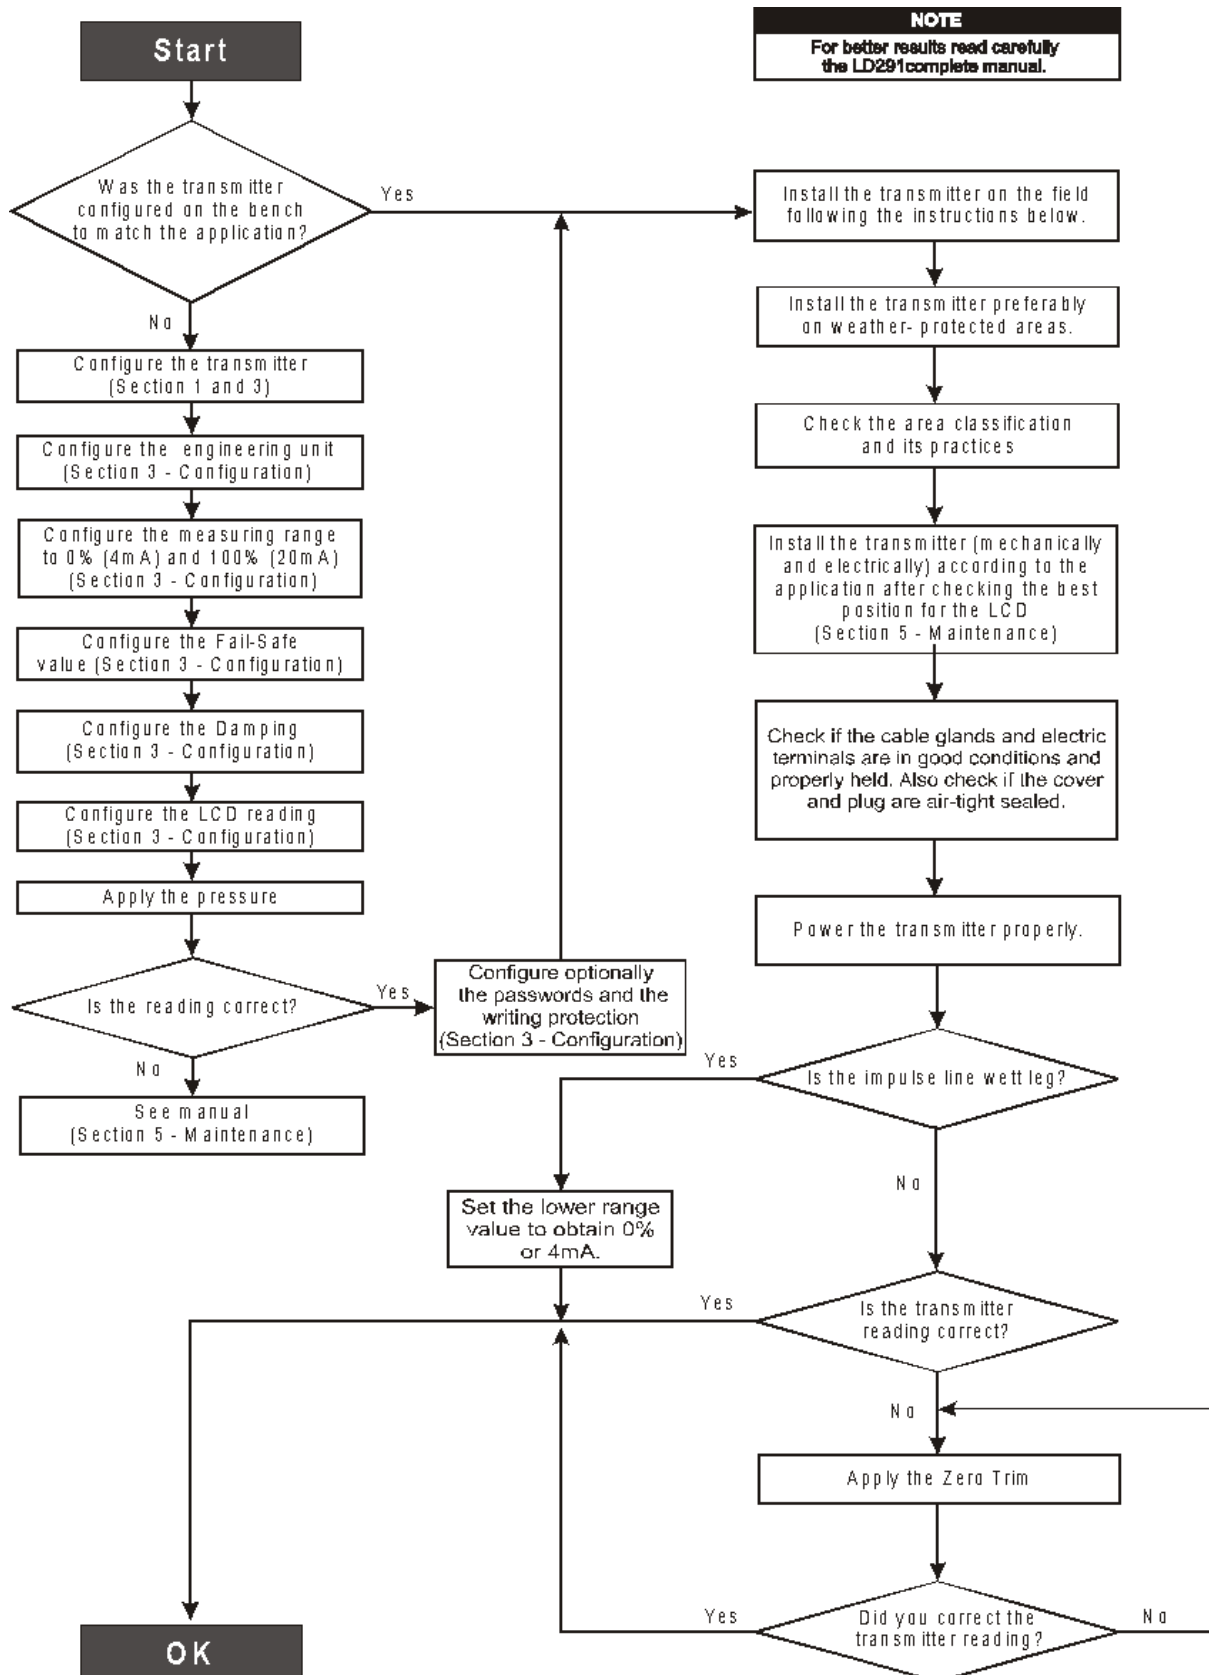

INSTALLATION

General

NOTE
The installation carried out in hazardous areas should follow the recommendations of the IEC60079-14 standard.

The overall accuracy of a flow, level, or pressure measurement depends on several variables. Although the transmitter has an outstanding performance, proper installation is essential to maximize its performance.

Among all factors, which may affect transmitter accuracy, environmental conditions are the most difficult to control. There are, however, ways of reducing the effects of temperature, humidity and vibration.

The **LD291** has a built-in temperature sensor to compensate for temperature variations. At the factory, each transmitter is submitted to a temperature cycle, and the characteristics under different temperatures are recorded in the transmitter memory. At the field, this feature minimizes the temperature variation effect.

Mounting

Putting the transmitter in areas protected from extreme environmental changes can minimize temperature fluctuation effects.

In warm environments, the transmitter should be installed to avoid, as much as possible, direct exposure to the sun. Installation close to lines and vessels subjected to high temperatures should also be avoided. Use longer sections of impulse piping between tap and transmitter whenever the process fluid is at high temperatures. Use of sunshades or heat shields to protect the transmitter from external heat sources should be considered, if necessary.

Proper winterization (freeze protection) should be employed to prevent freezing within the measuring chamber, since this will result in an inoperative transmitter and could even damage the cell.

Although the transmitter is virtually insensitive to vibration, installation close to pumps, turbines or other vibrating equipment should be avoided.

The transmitter has been designed to be both rugged and lightweight at the same time. This make its mounting easier mounting positions are shown in Figure 1.1.

Should the process fluid contain solids in suspension, install valves or rod-out fittings at regular intervals to clean out the pipes.

The pipes should be internally cleaned by using steam or compressed air, or by draining the line with the process fluid, before such lines are connected to the transmitter (blow-down).

NOTE
When installing or storing the level transmitter, the diaphragm must be protected avoid scratching-denting or perforation of its surface.

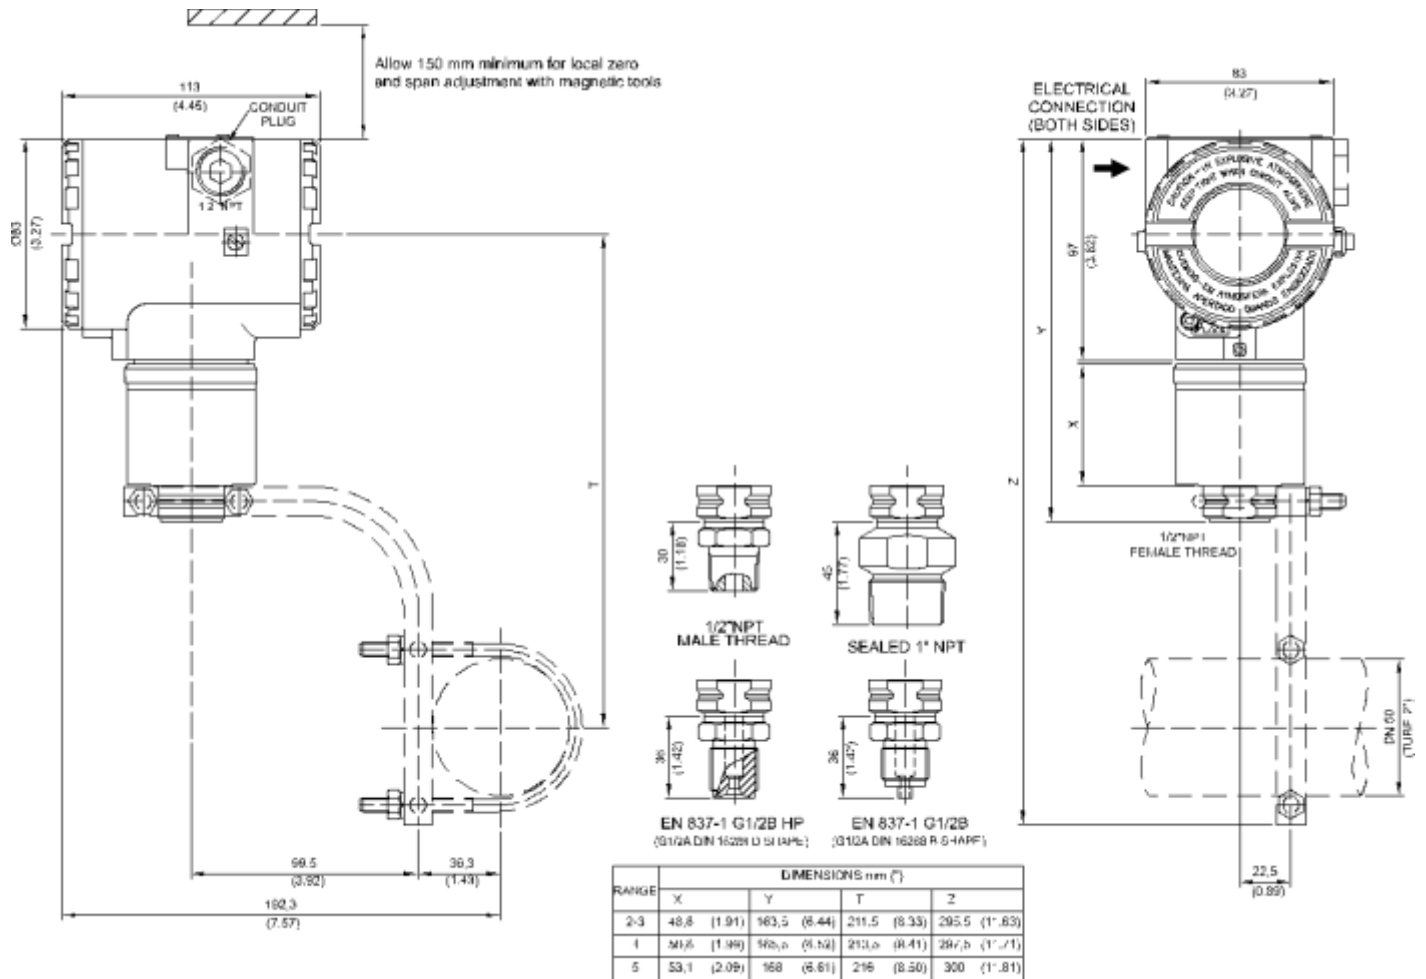


Figure 1.1(a) – Dimensional Drawing and Mounting Position for LD291


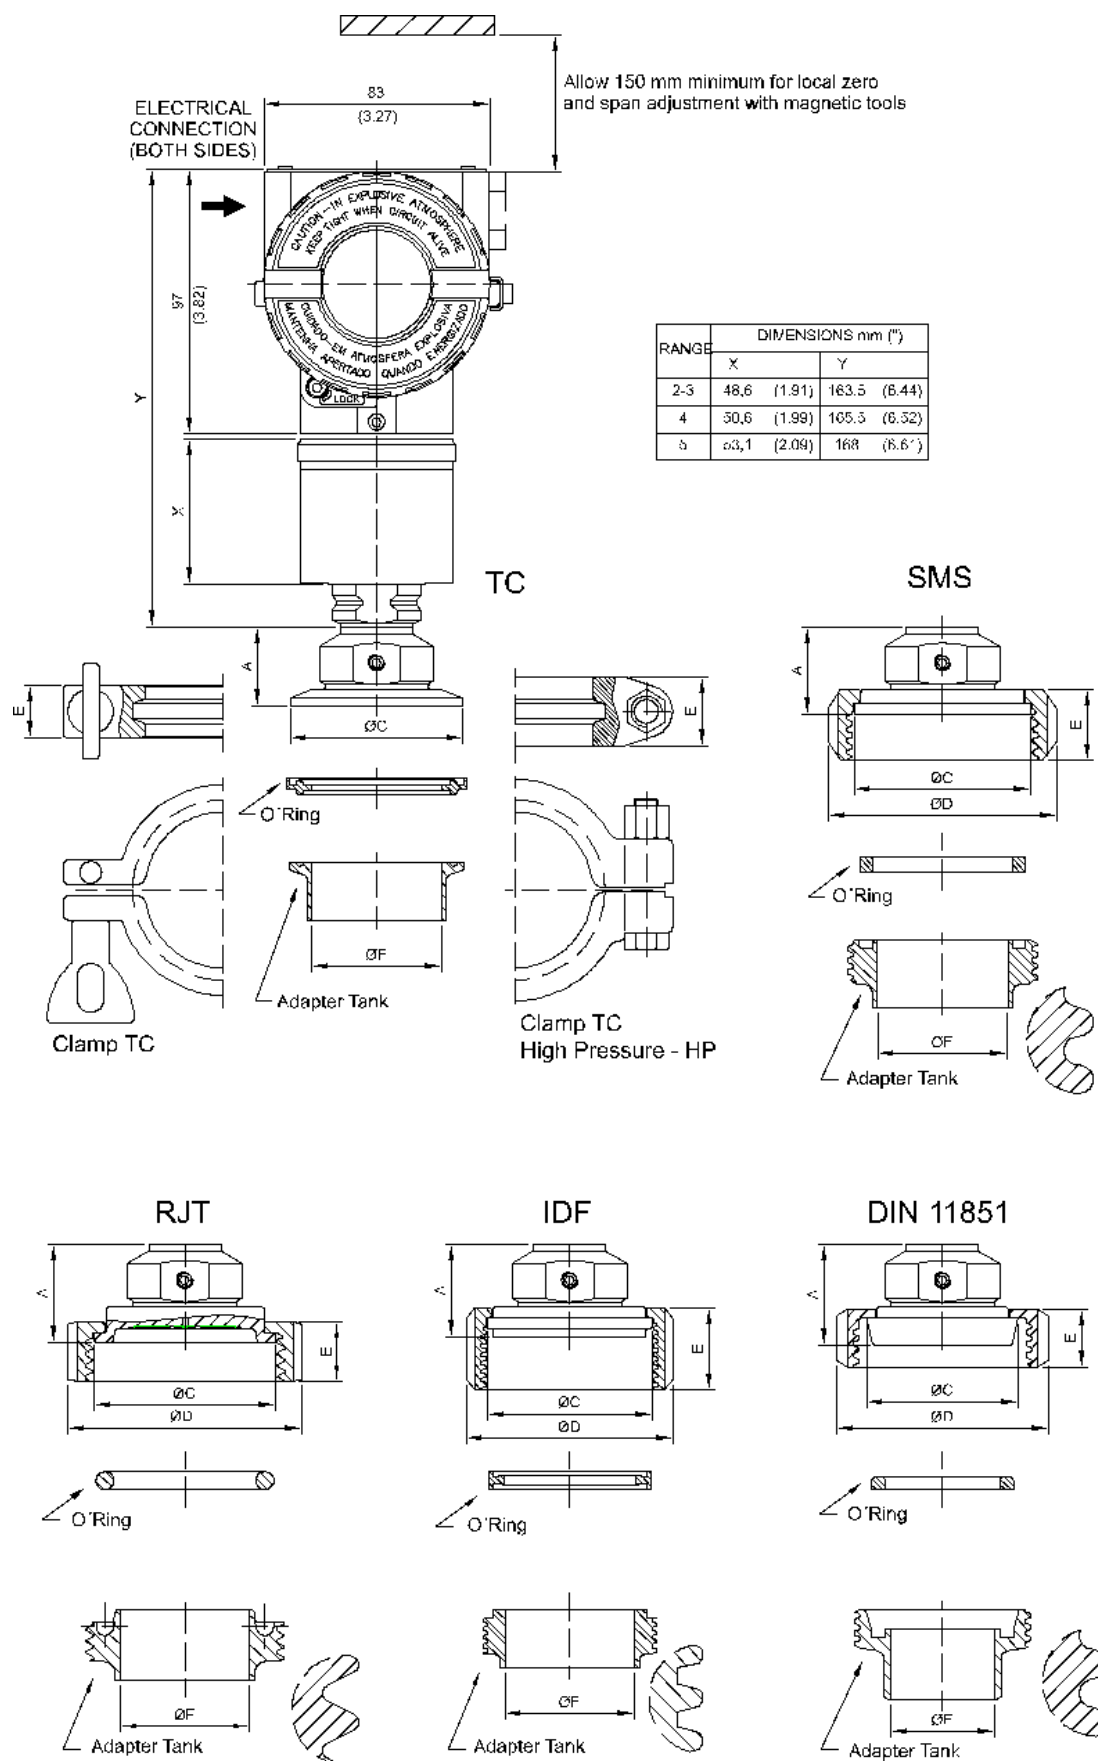


Figure 1.1(b) – Dimensional Drawing and Mounting Position for LD291 - Sanitary

LD290S - CONNECTIONS					
CONNECTION	Dimensions in mm (inches)				
	A	ØC	ØD	E	ØF
Tri-Clamp - 1 1/2" - without extension	27 (1.06)	50 (1.96)	61 (2.40)	18 (0.71)	35 (1.38)
Tri-Clamp - 1 1/2" HP - without extension	27 (1.06)	50 (1.96)	66 (2.59)	25 (0.98)	35 (1.38)
Tri-Clamp - 2" - without extension	29 (1.14)	63,5 (2.50)	76,5 (3.01)	18 (0.71)	47,6 (1.87)
Tri-Clamp - 2" HP - without extension	29 (1.14)	63,5 (2.50)	81 (3.19)	25 (0.98)	47,6 (1.87)
Threaded DN40 - DIN 11851 - without extension	37 (1.46)	56 (2.20)	78 (3.07)	21 (0.83)	38 (1.50)
Threaded DN50 - DIN 11851 - without extension	38 (1.50)	68,5 (2.70)	92 (3.62)	22 (0.86)	50 (1.96)
Threaded SMS - 1 1/2" - without extension	31 (1.22)	55 (2.16)	74 (2.91)	25 (0.98)	35 (1.38)
Threaded SMS - 2" - without extension	32 (1.26)	65 (2.56)	84 (3.30)	26 (1.02)	48,6 (1.91)
Threaded RJT - 2" - without extension	35 (1.38)	66,7 (2.63)	86 (3.38)	22 (0.86)	47,6 (1.87)
Threaded IDF - 2" - without extension	34 (1.34)	60.5 (2.38)	76 (2.99)	30 (1.18)	47,6 (1.87)

Figure 1.1(c) – Dimensional Drawing and Mounting Position for LD291 – Sanitary

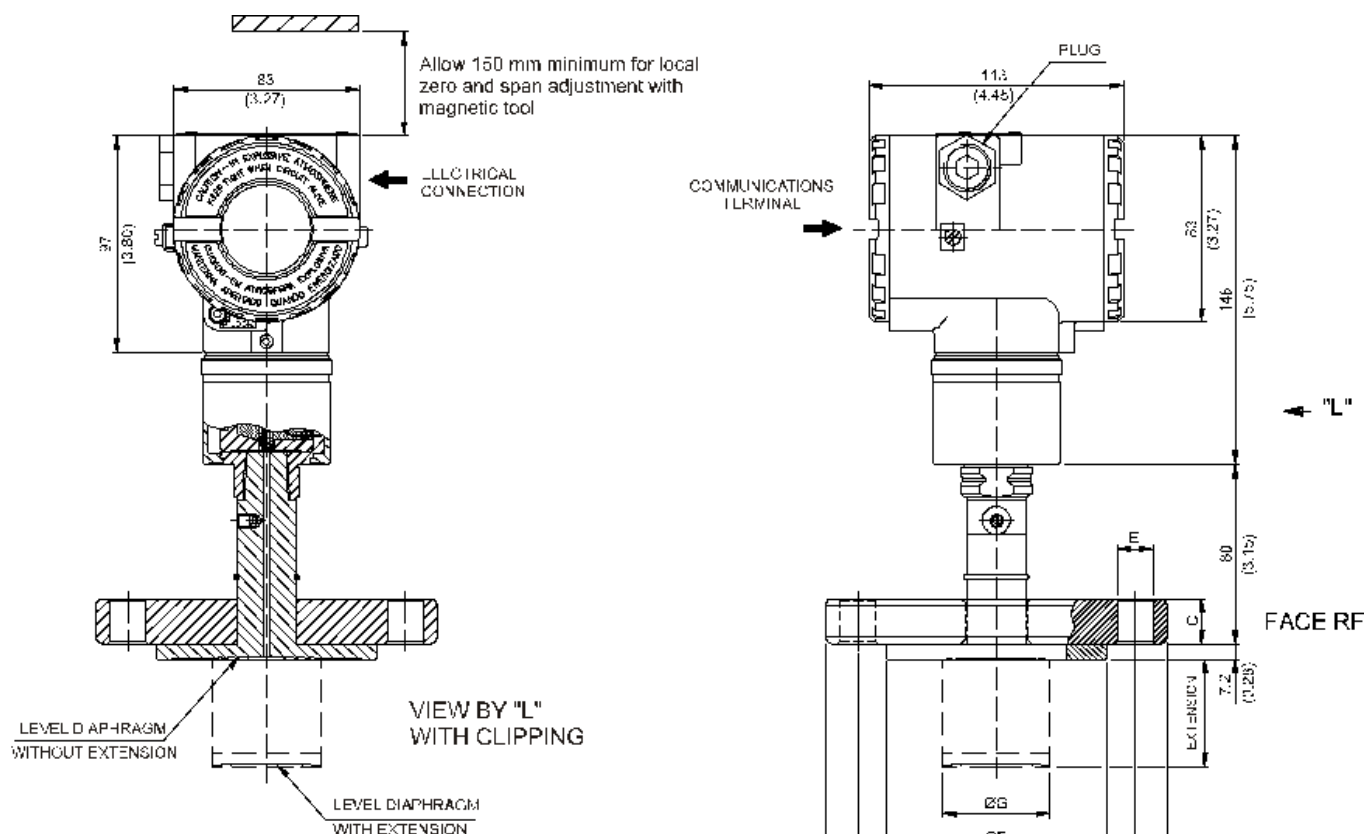

NOTES:

-EXTENSION LENGTH mm (in): 0, 50 (1.96), 100 (3.93), 150 (5.9) OR 200 (7.87)
-DIMENSIONS ARE mm (in)

ANSI-B 16.5 DIMENSIONS								
DN	CLASS	A	B	C	E	F (RF) (FF)	G	HOLES
1"	150	108 (4.25)	79.4 (3.13)	14.3 (0.56)	18 (0.63)	50.8 (2)	-	4
	300/400	124 (4.88)	98.0 (3.8)	17.5 (0.69)	19 (0.75)	50.8 (2)	-	4
1.1/2"	150	127 (5)	98.6 (3.88)	20 (0.78)	16 (0.63)	73.2 (2.88)	40 (1.57)	4
	300	155.4 (6.12)	114.3 (4.5)	21 (0.83)	22 (0.87)	73.2 (2.88)	40 (1.57)	4
	600	155.4 (6.12)	114.3 (4.5)	28.3 (1.11)	22 (0.87)	73.2 (2.88)	40 (1.57)	4
2"	150	152.4 (6)	120.7 (4.75)	17.5 (0.69)	19 (0.75)	92 (3.62)	48 (1.89)	4
	300	165.1 (6.5)	127 (5)	20.7 (0.81)	19 (0.75)	92 (3.62)	48 (1.89)	6
	600	165.1 (6.5)	127 (5)	25.4 (1)	19 (0.75)	92 (3.62)	48 (1.89)	6
3"	150	190.5 (7.5)	152.4 (6)	22.3 (0.87)	19 (0.75)	127 (5)	73 (2.87)	4
	300	209.5 (8.25)	168.1 (6.62)	27 (1.06)	22 (0.87)	127 (5)	73 (2.87)	6
	600	209.5 (8.25)	168.1 (6.62)	31.8 (1.25)	22 (0.87)	127 (5)	73 (2.87)	6
4"	150	228.6 (9)	190.5 (7.5)	22.3 (0.87)	19 (0.75)	158 (6.22)	89 (3.5)	6
	300	254 (10)	200 (7.87)	30.2 (1.18)	22 (0.87)	158 (6.22)	89 (3.5)	6
	600	273 (10.75)	215.9 (8.5)	38.1 (1.5)	25 (1)	158 (6.22)	89 (3.5)	6

EN 1092-1 / DIN2501 DIMENSIONS								
DN	PN	A	B	C	E	-	G	HOLES
25	10/40	115 (4.53)	85 (3.35)	18 (0.71)	14 (0.55)	68 (2.68)	-	4
40	10/40	150 (5.9)	110 (4.33)	20 (0.78)	16 (0.63)	88 (3.46)	40 (1.57)	4
50	10/40	165 (6.5)	125 (4.92)	20 (0.78)	18 (0.71)	102 (4.01)	48 (1.89)	4
80	10/40	200 (7.87)	160 (6.3)	24 (0.95)	18 (0.71)	138 (5.43)	73 (2.87)	6
100	10/18	220 (8.67)	180 (7.08)	20 (0.78)	18 (0.71)	152 (6.02)	89 (3.5)	6
	25/40	235 (9.25)	190 (7.5)	24 (0.95)	22 (0.87)	162 (6.38)	89 (3.5)	6

Figure 1.1(d) – Dimensional Drawing and Mounting Position for LD291 – Level

The figure 1.2 shows how to use the tool to fix the process transmitter tap.

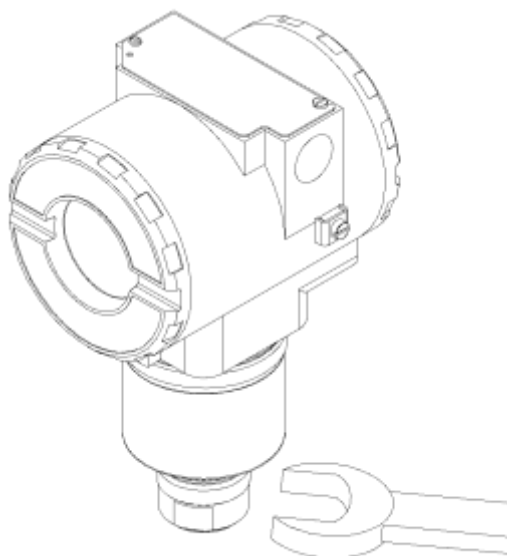


Figure 1.2 – Fixing of the Transmitter in the Tap

Observe operating safety rules during wiring, draining or blow-down.

WARNING

Normal safety precautions must be taken to avoid the possibility of an accident occurring when operating in conditions of high pressure and/or temperature.

Electrical shock can result in death or serious injury.

Avoid contact with the leads and terminals.

Process leaks could result in death or serious injury

Do not attempt to loosen or remove flange bolts while the transmitter is in service.

Replacement equipment or spare parts not approved by Smar could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.

Use only bolts supplied or sold by Smar as spare parts.

Some examples of installation, illustrating the position of the transmitter in relation to the taps, are shown in Figure 1.3.

The location of pressure taps and the relative position of the transmitter are indicated in Table 1.1.

Process Fluid	Location of Taps	Location of LD291 in Relation to the Taps
Gas	Top or Side	Above the Taps.
Liquid	Side	Below the Taps or at the Piping Centerline.
Steam	Side	Below the Taps using Sealing (Condensate) Pots.

Table 1.1 - Location of Pressure Taps

NOTE

Except for dry gases, all impulse lines should slope at the ratio 1:10, in order to avoid trapping bubbles in the case of liquids, or condensate for steam or wet gases.


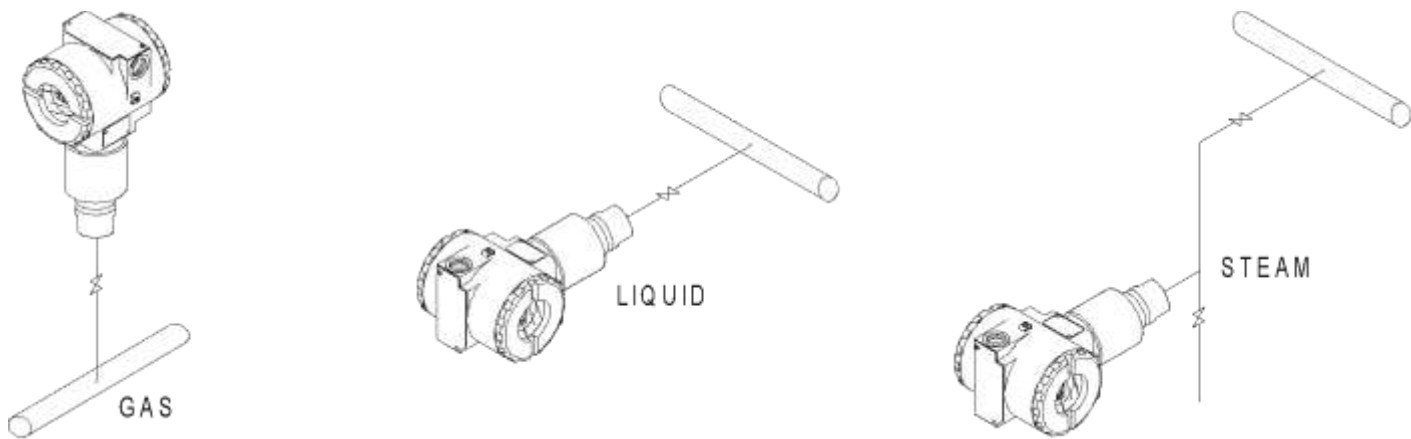


Figure 1.3 – Position of the Transmitter and Taps

NOTE

The transmitters are calibrated in the vertical position and a different mounting position displaces the zero point. Consequently, the indicator will indicate a different value from the applied pressure. In these conditions, it is recommended to do the zero pressure trim. The zero trim is to compensate the final assembly position and its performance, when the transmitter is in its final position. When the zero trim is executed, make sure the equalization valve is open and the wet leg levels are correct.

For the absolute pressure transmitter, the assembly effects correction should be done using the Lower trim, due to the fact that the absolute zero is the reference for these transmitters, so there is no need for a zero value for the Lower trim.

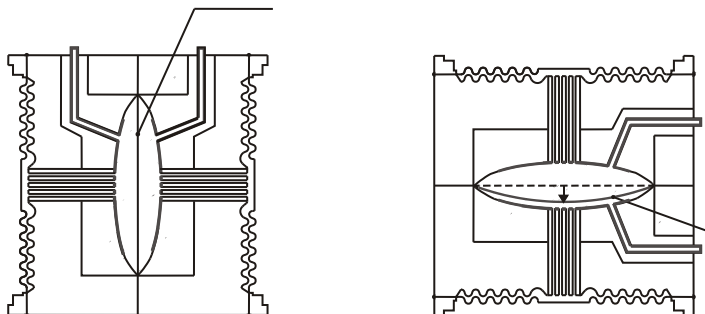

Electronic Housing

Humidity is fatal to electronic circuits. In areas subjected to high relative humidity, the O-rings for the electronic housing covers must be correctly placed and the covers must be completely closed by tightening them by hand until you feel the O-rings being compressed. Do not use tools to close the covers. Removal of the electronics cover in the field should be reduced to the minimum necessary, since each time it is removed; the circuits are exposed to the humidity.

The electronic circuit is protected by a humidity proof coating, but frequent exposures to humidity may affect the protection provided. It is also important to keep the covers tightened in place. Every time they are removed, the threads are exposed to corrosion, since painting cannot protect these parts. Code-approved sealing methods should be employed on conduit entering the transmitter.

WARNING

The unused cable entries should be plugged and sealed accordingly to avoid humidity entering, which can cause the loss of the product's warranty.

The electronic housing can be rotated to adjust the digital display on a better position. To rotate it, loose the Housing Rotation Set Screw, see Figure 1.4 (a). To prevent humidity entering, the electric housing and the sensor joint must have a minimum of 6 fully engaged threads. The provided joint allows 1 extra turn to adjust the position of the display window by rotating the housing clockwise. If the thread reaches the end before the desired position, then rotate the housing counterclockwise, but not more than one thread turn. Transmitters have a stopper that restricts housing rotation to one turn. See Section 4, Figure 4.1.

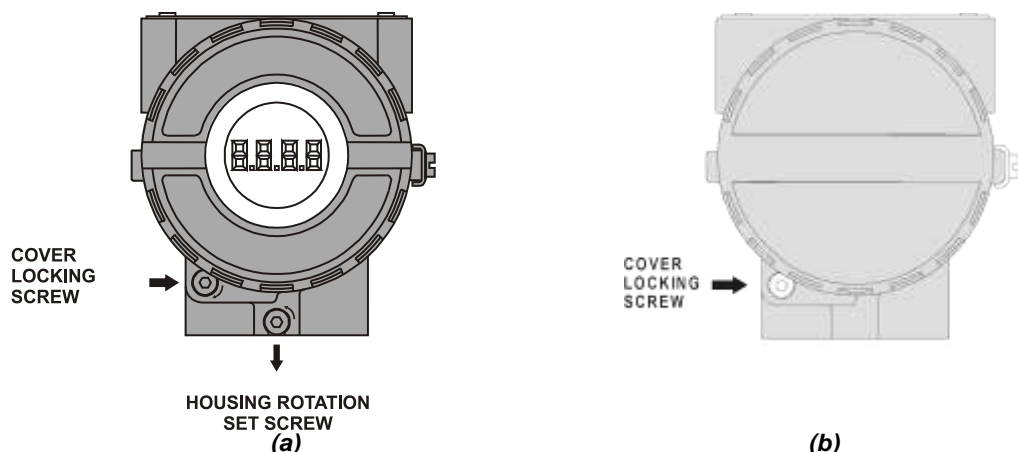


Figure 1.4 - Cover Locking and Housing Rotating Set Screw (a) Electronic Board Side (b) Terminal Connection Side

Wiring

To release the cover that gives access to the wiring block, turn the cover locking screw clock wise, see the direction of the arrow in the figure 1.4.

Test and **Communication terminals** allow, respectively, to measure the current in the 4 - 20 mA loop, without opening it, and to communicate with the transmitter. To measure it, connect a multimeter in the mA scale in the "-" and "+" terminals, and to communicate, use a **HART** configurator in the "COMM" and "-" terminals. The wiring block has screws on which fork or ring-type terminals can be fastened. See Figure 1.6.

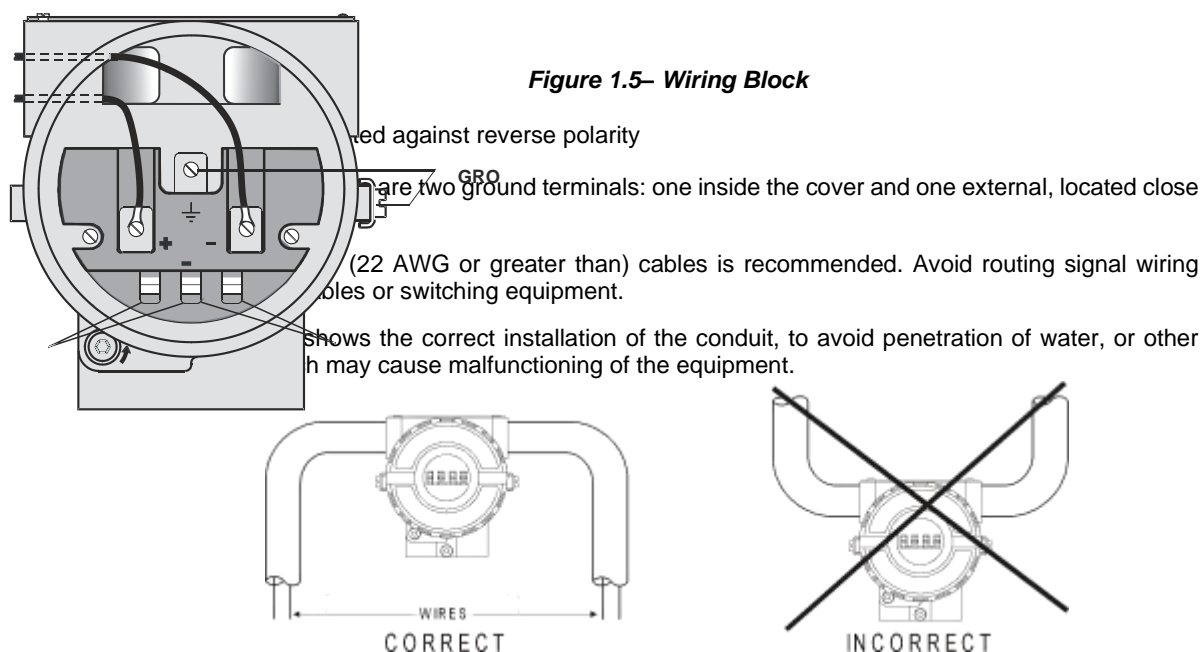


Figure 1.6 - Conduit Installation

Loop Connections

Connection of the **LD291** should be done as in Figure 1.7. Connection in multi-drop configuration should be done as in Figure 1.8. Note that a maximum of 15 transmitters can be connected on the same line and that they should be connected in parallel.

Take care to the power supply as well, when many transmitters are connected on the same line. The current through the 250 Ohm resistor will be high causing a high voltage drop. Therefore make sure that the power supply voltage is sufficient.

The configuration can be connected to the communication terminals of the transmitter or at any point of the signal line by using the alligator clips. It is also recommended to ground the shield of shielded cables at only one end. The ungrounded end must be carefully isolated.

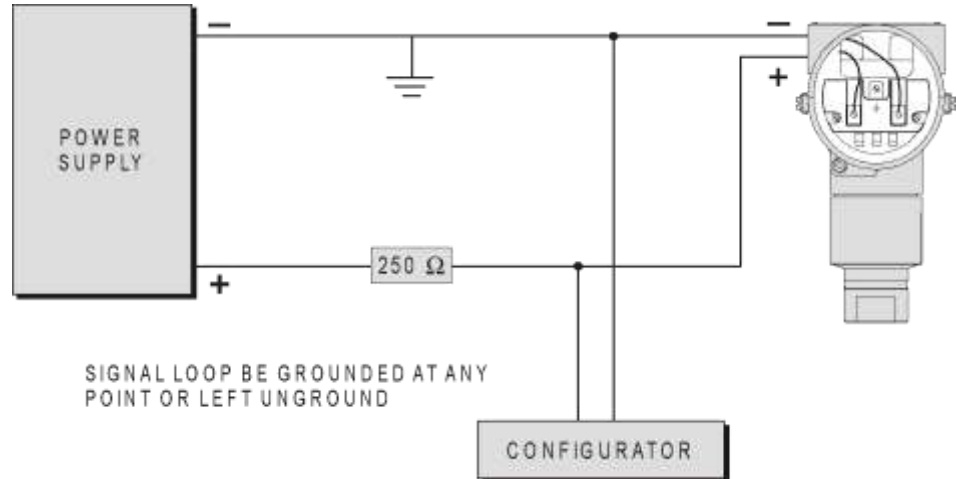


Figure 1.7 – Wiring Diagram for the LD291

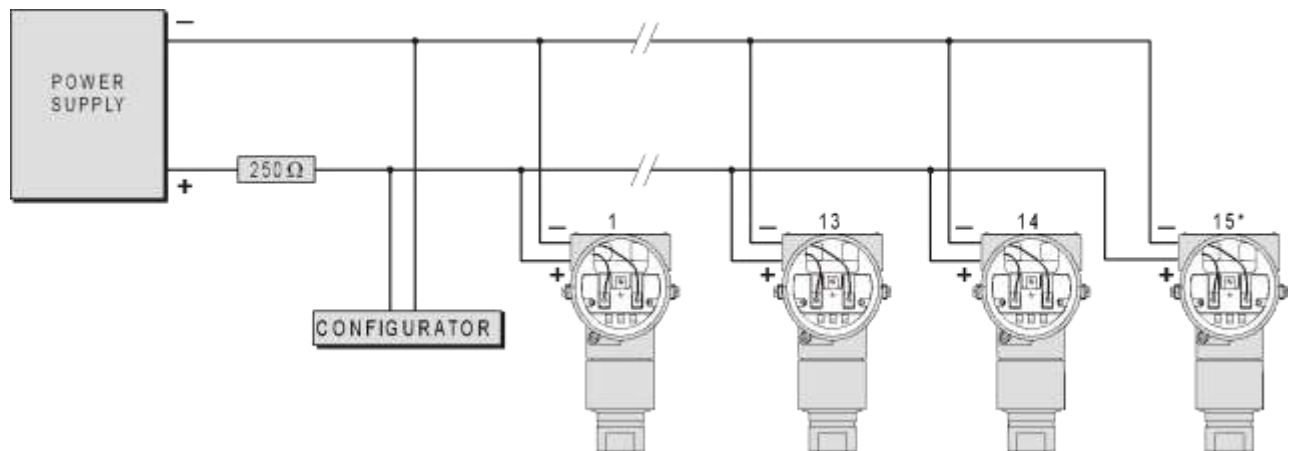


Figure 1.8 – Wiring Diagram for the LD291 in Multidrop Configuration

NOTE

Make sure that the transmitter is operating within the operating area as shown on the load curve (Figure 1.9). Communication requires a minimum load of 250 Ohm.

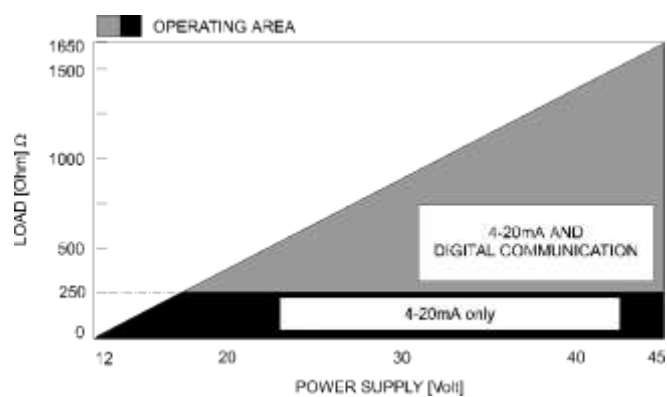


Figure 1.9 – Load Curve

Installation in Hazardous Areas

Consult the Appendix A for Hazardous Location Approvals.

OPERATION

Functional Description - Sensor

The **LD291** Series Intelligent Pressure Transmitters uses capacitive sensors (capacitive cells) as pressure sensing elements, as shown in Figure 2.1.

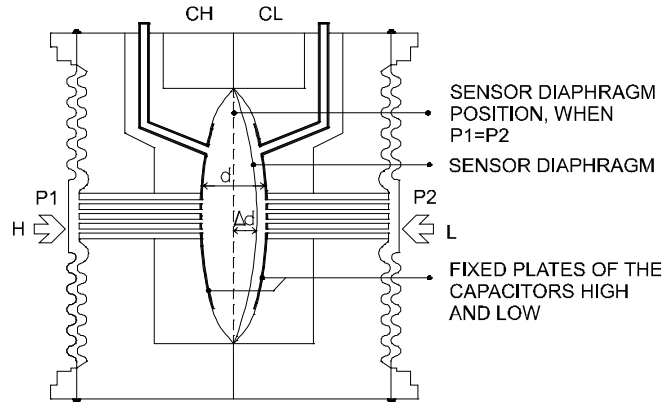


Figure 2.1 – Capacitive Cell

Where,

P_1 and P_2 are the pressures in chambers **H** and **L**

CH= capacitance between the fixed plate on P_1 side and the sensing diaphragm.

CL= capacitance between the fixed plate on the P_2 side and the sensing diaphragm.

d =distance between CH and CL fixed plates.

Δd= sensing diaphragm's deflection due to the differential pressure **ΔP = $P_1 - P_2$** .

The capacitance of a capacitor with flat, parallel plates is a function expressed by plate area (**A**) and distance (**d**) between the plates as:

$$C \approx \frac{\epsilon \times A}{d}$$

Where,

Σ= dielectric constant of the medium between the capacitor's plates.

CH and **CL** are capacitances from flat parallel plates with identical areas, then:

$$CH \approx \frac{\epsilon \times A}{(d/2) + \Delta d} \text{ and } \frac{\epsilon \times A}{(d/2) - \Delta d} \approx CL$$

However, should the differential pressure (**ΔP**) be applied to the capacitive cell not deflect the sensing diaphragm beyond $d/4$, it is possible to assume **ΔP** as proportional to **Δd**.

By developing the expression $(CL - CH) / (CL + CH)$, it follows that:

$$\Delta P = \frac{CL - CH}{CL + CH} = \frac{2\Delta d}{d}$$

Because the distance (d) between the fixed plates CH and CL is constant, it is possible to conclude that the expression $(CL - CH) / (CL + CH)$ is proportional to Δd and, therefore, to the differential pressure to be measured.

Thus, it is possible to conclude that the capacitive cell is a pressure sensor formed by two capacitors whose capacitances vary according to the applied differential pressure.

Functional Description - Hardware

Refer to the block diagram Figure 2.2. The function of each block is described below.

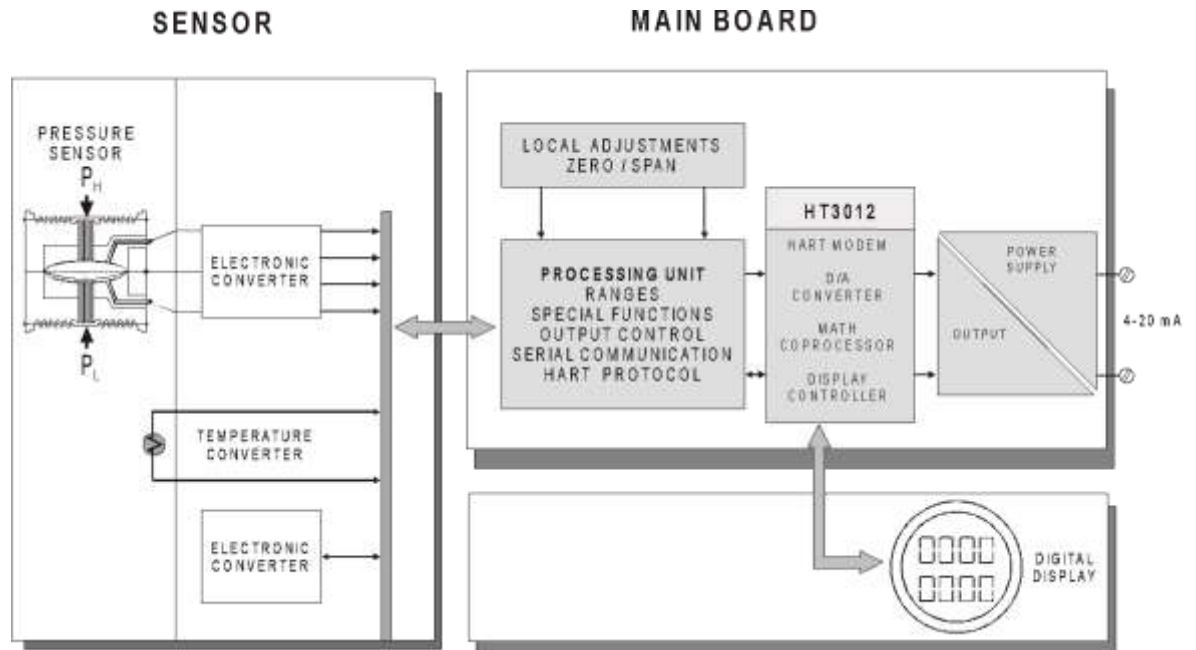


Figure 2.2 – LD291 Block Diagram Hardware

Oscillator

This oscillator generates a frequency as a function of sensor capacitance.

Signal Isolator

The Control signals from the CPU are transferred through optical couplers, and the signal from the oscillator is transferred through a transformer.

(CPU) Central Processing Unit and PROM

The CPU is the intelligent portion of the transmitter, being responsible for the management and operation of all other blocks, linearization, and communication.

The program is stored in an external PROM. For temporary storage of data, the CPU has an internal RAM. The data in the RAM is lost, if the power is switched off, however the CPU also has an internal nonvolatile EEPROM where data that must be retained is stored. Examples of such data are: calibration, configuration and identification data.

EEPROM

Another EEPROM is located within the sensor assembly. It contains data pertaining to the sensor's characteristics at different pressures and temperatures. This characterization is done for each sensor at the factory.

D/A Converter

Converts the digital data from the CPU to an analog signal with 14bits resolution.

Output

Control the current in the line feeding the transmitters.

It acts as a variable resistive load whose value depends on the voltage from the D/A converter.

Modem

This system provides the data exchange between the slave-master digital communications. The transmitter demodulates serial information transmitted by the configurator from the current line, and after treating it, modulates the response sending it over the line. A "1" is represented by 1200 Hz and

"0" by 2200 Hz. The frequency signal is symmetrical and does not affect the DC-level of the 4-20 mA signal.

Power Supply

Power shall be supplied to the transmitter circuit using the signal line (2-wire system). The transmitter quiescent consumption is 3.6 mA; during operation, consumption may be as high as 21 mA, depending on the measurement and sensor status.

The **LD291** shows failure indication at 3.6 mA, if configured for low signal failure. At 21 mA, it will show the indication when configured for high signal failure. In case of low saturation, it will indicate failure at 3.6 mA and for high saturation, 21 mA, and measurements, proportional to the applied pressure in the range between 3.8 mA and 20.5 mA. 4 mA corresponds to 0% of the working range and 20 mA to 100 % of the working range.

Power Supply Isolation

The sensor power supply is isolated from the main circuit by this module.

Display Controller

It receives the data from the CPU and activates the LCD segments. Also, it activates the back plane and the control signals for each segment.

Local Adjustment

Two switches magnetically activated. The magnetic tool without mechanical or electrical contact can activate them.

Functional Description - Software

Refer to the Figure 2.3. The function of each Block is described below.

Factory Characterization

Calculate the actual pressure from the capacitances and temperature readings obtained from the sensor using the factory characterization data stored in the sensor EEPROM.

Digital Filter

The digital filter is a low pass filter with an adjustable time constant. It is used to smooth noisy signals. The Damping value is the time required for the output reaching 63.2% for a step input of 100%.

Customer Characterization

The characterization TRIM points (P1 to P5) can be used to complement the transmitter's original characterization.

Pressure Trim

Here the values obtained by Zero Pressure TRIM and Upper Pressure TRIM corrects the transmitter for long term drift or the shift in zero or upper pressure reading due to installation or over pressure.

Ranging

It is used to set the pressure values corresponding to the output 4 and 20 mA. The LOWER-VALUE is the point corresponding to 4 mA, and UPPER-VALUE is the point corresponding to 20 mA.

Function

Depending on the application, the transmitter output or controller PV may have the following characteristics according to the applied pressure: Linear (for pressure, and level measurement). The function is selected with FUNCTION.

Customer Linearization

This block relates the output (4-20 mA) to the input (applied pressure) according to a lookup table from 2 to 16 points.

The output is calculated by the interpolation of these points. The points are given in the function "TABLE POINTS" in percent of the range (X_i) and in percent of the output (Y_i). It may be used to linearize, e.g., a level measurement to volume or mass. In flow measurement it can be used to correct for varying Reynolds number.

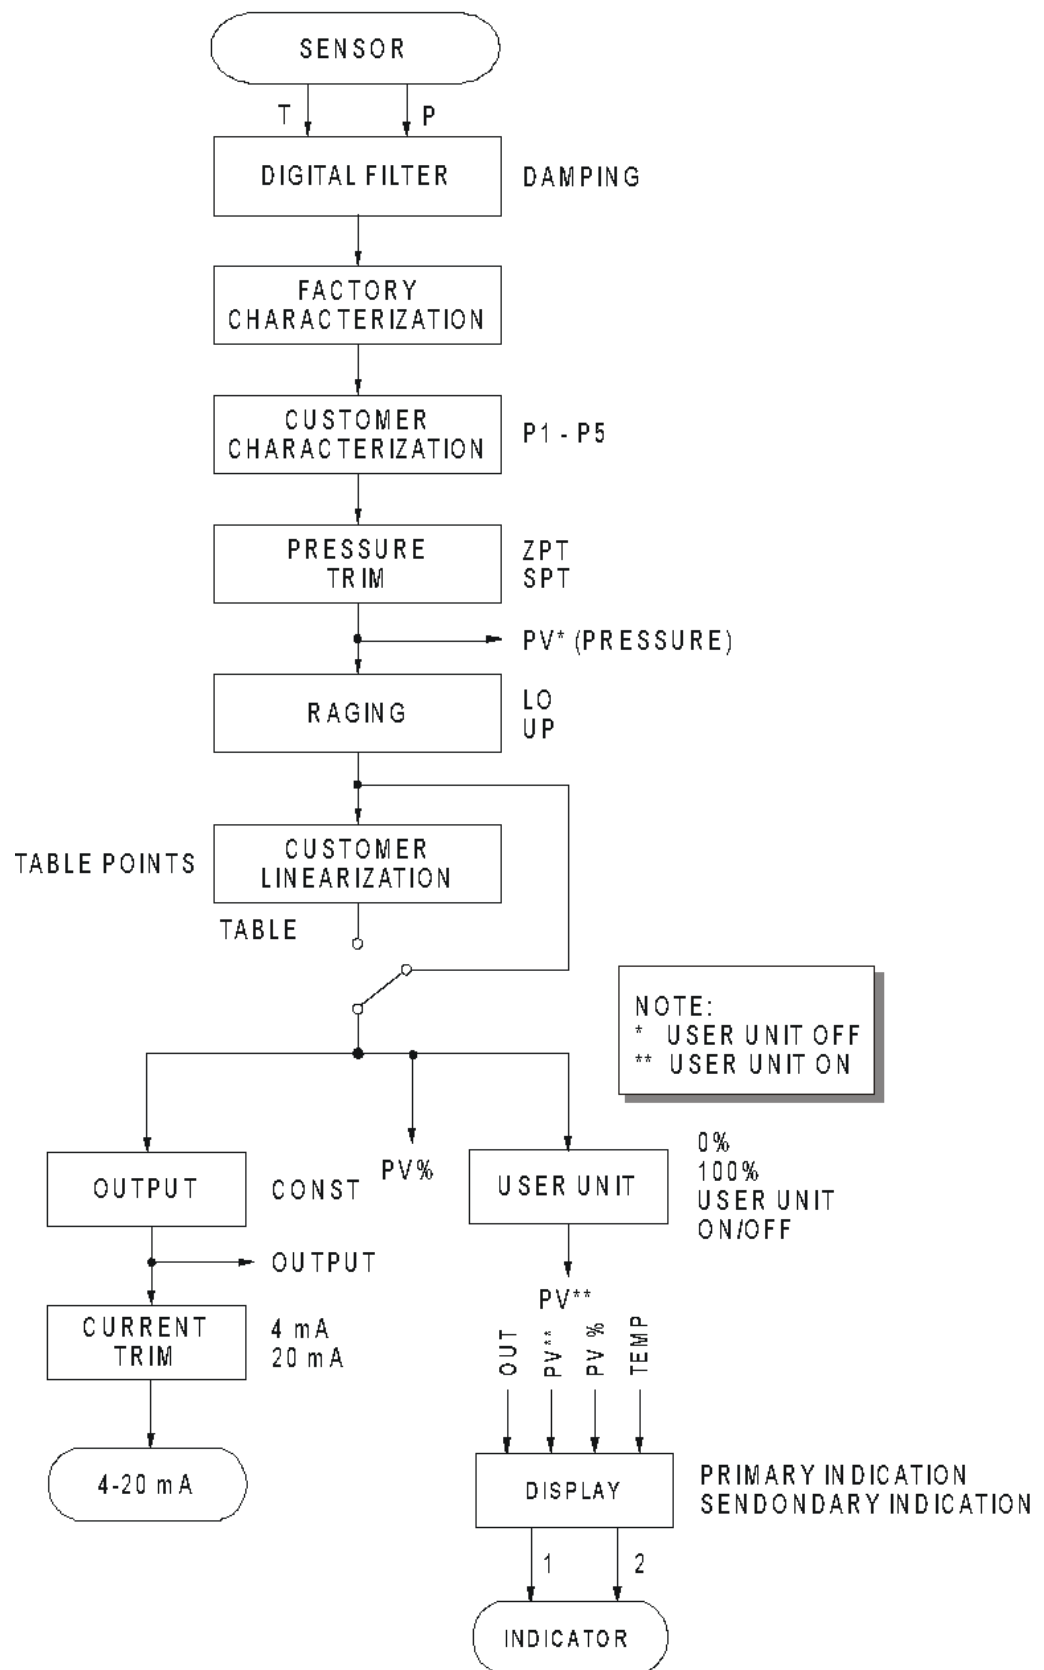


Figure 2.3 – LD291 – Software Block Diagram

Output

Calculates the current proportional to the process variable or manipulated variable to be transmitted on the 4-20 mA output depending on the configuration in OP-MODE. This block also contains the constant current function configured in OUTPUT. The output is physically limited to 3.6 to 21 mA.

Current Trim

The 4 mA TRIM and 20 mA TRIM adjustment is used to make the transmitter current comply with a current standard, should a deviation arise.

User Unit

Converts 0 and 100% of the process variable to a desired engineering unit read out available for the display and communication. It is used, e.g., to get a volume or from a level measurement, respectively. A unit for the variable can also be selected.

Display

Can alternate between two indications as configured in DISPLAY.

The Display

The integral indicator can display one or two variables, which are user selectable. When two variables are chosen, the display will alternate between the two with an interval of 3 seconds.

The liquid crystal display includes a field with 4 1/2 numeric digits, a field with 5 alphanumeric digits and an information field, as shown on Figure 2.4.

DISPLAY V6.00

The display controller, from release V6.00 on, is integral to the main board. Please observe the new spare parts codes.

Monitoring

During normal operation, the **LD291** is in the monitoring mode. In this mode, indication alternates between the primary and secondary variable as configured by the user. See Figure. 2.5. The display indicates engineering units, values, and parameters simultaneously with most status indicators.

The monitoring mode is interrupted when the user does complete local adjustment.

The display is also capable of displaying an error and other messages (See table 2.1).

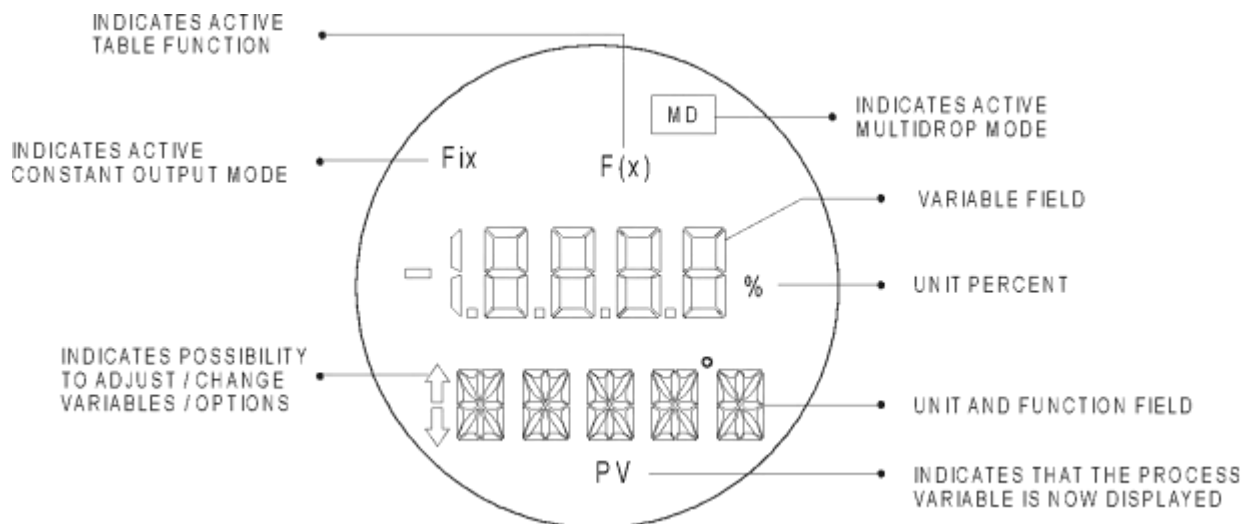


Figure 2.4 - Display



Figure 2.5 – Typical Monitoring Mode Display Showing PV, in this case 25.00 mmH₂O

DISPLAY	DESCRIPTION
INIT	The LD291 is in initializing after power on.
CHAR	The LD291 is characterization mode. See Section 3 – Trim.
FAIL SENS	Sensor failure. Refer to Section 5 - Maintenance.
SAT	Current output saturated in 3.8 or 20.5 mA. See Section 5 – Maintenance.

Table 2.1 - Display Messages

CONFIGURATION

The **LD291** Intelligent Pressure Transmitter is a digital instrument with the most up-to-date features a measurement device can possibly have. Its digital communication protocol (HART®) enables the instrument to be connected to a computer in order to be configured in a very simple and complete way. Such computers connected to the transmitters are called HOST computers. They can either be Primary or Secondary Masters. Therefore, even the HART® being a master-slave type of protocol, it is possible to work with up to two masters in a bus. The Primary HOST plays the supervisory role and the Secondary HOST plays the Configurator role.

The transmitters may be connected in a point-to-point or multidrop type network. In a point-to-point connection, the equipment must be in its "0" address so that the output current may be modulated in 4 to 20 mA, as per the measurement. In a multidrop network, if the devices are recognized by their addresses, the transmitters shall be configured with a network address between "1" and "15". In this case, the transmitter's output current is kept constant, with a consumption of 4 mA each. If the acknowledgement mechanism is via Tag, the transmitter's addresses may be "0" while their output current is still being controlled, even in a multidrop configuration.

In the case of the **LD291** the "0" address causes the **LD291** to control its output current and addresses "1" through "15" place the **LD291** in the multidrop mode with current control.

NOTE

In the case of multidrop network configuration for classified areas, the entity parameters allowed for the area shall be strictly observed. Therefore, the following shall be checked:

$$\begin{aligned} Ca &\geq \sum Ci_j + Cc & La &\geq \sum Li_j + Lc \\ Voc &\leq \min [Vmax_j] & Isc &\leq \min [Imax_j] \end{aligned}$$

Where:

Ca, La - Barrier Allowable Capacitance and Inductance

Ci_j, Li_j - Non protected internal Capacitance/Inductance of transmitter *j* (*j* = 1 up to 15)

Cc, Lc - Cable capacitance and Inductance

Voc - Barrier open circuit voltage

Isc - Barrier short circuit current

Vmax_j - Maximum allowable voltage to be applied to the instrument *j*

Imax_j - Maximum allowable current to be applied to the instrument *j*

The **LD291** Intelligent Pressure Transmitter includes a very encompassing set of HART® Command functions that make it possible to access the functionality of what has been implemented. Such commands comply with the HART® protocol specifications, and are grouped as Overall Commands, Common Practice Controls Commands and Specific Commands. A detailed description of such commands may be found in the manual entitled HART® Command Specification - **LD291** Intelligent Pressure Transmitter.

Smar developed the **CONF401** and **HPC301** software, the first one works in Windows platform (**95, 98, 2000, XP and NT**) and **UNIX**. The second one, **HPC301**, works in the most recent technology in PDA's. They bring easy configuration and monitoring of field devices, capacity to analyze data and to modify the action of these devices. **The operation characteristics and use of each one of the configurators are stated on their respective manuals.**

Figures 3.1 and 3.2 show the front of the Palm and the CONF401 screen, with the active configuration.

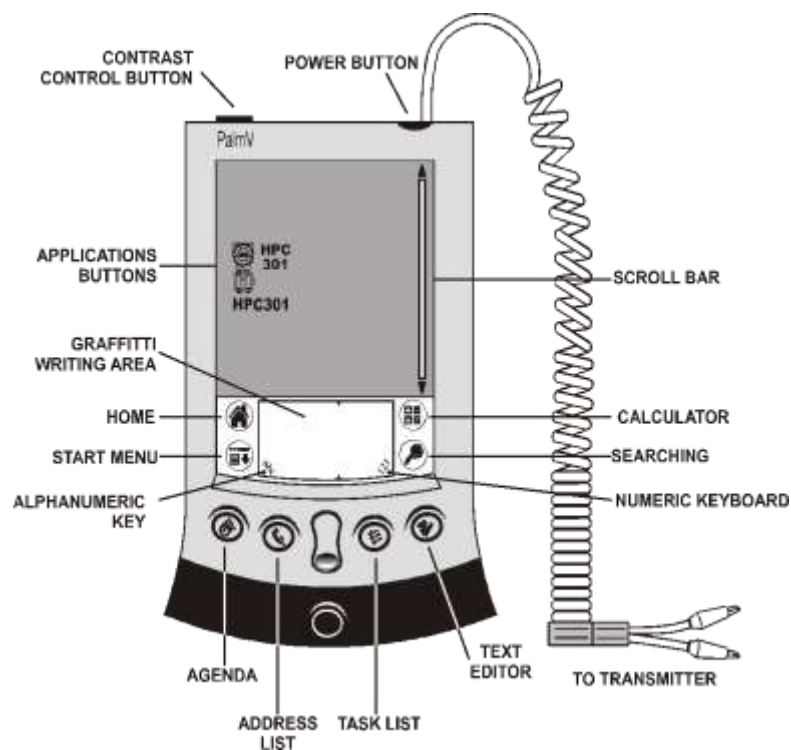


Figure 3.1 – Smar's Configurator

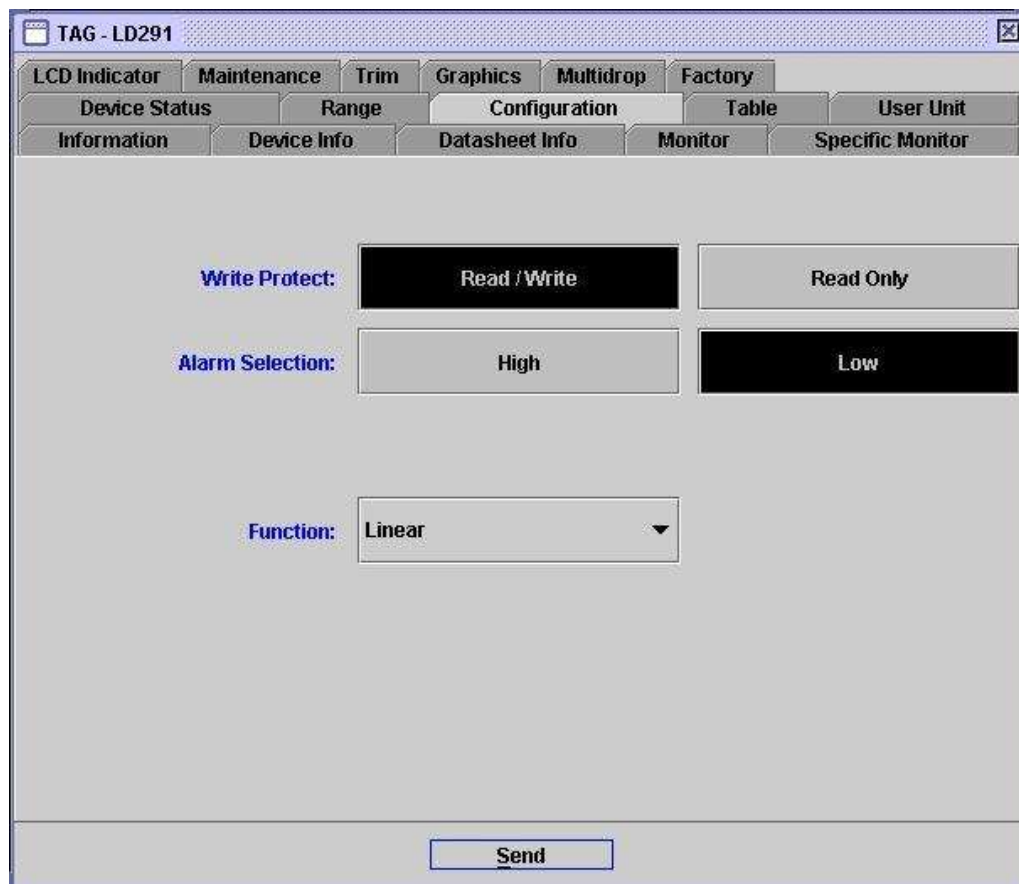


Figure 3.2 – Screen of the Configurator

Configuration Features

By means of the HART® Configurator, the **LD291** firmware allows the following configuration features to be accessed:

- ✓ Transmitter Identification and Manufacturing Data;
- ✓ Primary Variable Trim – Pressure;
- ✓ Primary Variable Trim – Current;
- ✓ Transmitter Adjustment to the Working Range;
- ✓ Engineering Unit Selection;
- ✓ Linearization Table;
- ✓ Device Configuration;
- ✓ Equipment Maintenance.

The operations, which take place between the configurator and the transmitter do not interrupt the Pressure measurement, and do not disturb the output signal. The configurator can be connected on the same pair of wires as the 4-20 mA signal, up to 2 km away from the transmitter.

Manufacturing Data and Identification

The following information about the **LD291** manufacturing and identification data is available:

TAG - 8 character alphanumeric field for identification of the transmitter;

DESCRIPTOR - 16 character alphanumeric field for additional identification of the transmitter. May be used to identify service or location;

DATE - The date may be used to identify a relevant date as the last calibration, the next calibration or the installation. The date is presented in the form of bytes where DD = [1,..31], MM = [1..12], AA = [0,..255], where the effective year is calculated by [Year = 1900 + AA];

MESSAGE - 32 character alphanumeric field for any other information, such as: the name of the person who made the last calibration, some special care to be taken, or if a ladder is needed for accessing;

INTEGRAL METER – Installed, Inert, Special, Unknown and None;

SENSOR FLUID* - Silicone, Inert, Special, Unknown and None;

SENSOR ISOLATING DIAPHRAGM* - 316 SST, Hastelloy C, Monel, Tantalum and Special;

SENSOR TYPE* - It shows the sensor type;

SENSOR RANGE* - It shows the sensor range in engineering units chosen by user. See Configuration Unit.

NOTE

Items marked with asterisk cannot be changed. They are read directly from the sensor memory.

Primary Variable Trim - Pressure

Pressure, defined as a Primary Variable, is determined from the sensor readout by means of a conversion method. This method uses parameters obtained during the fabrication process. They depend on the electric and mechanical characteristics of the sensor, and on the temperature change to which the sensor is submitted. These parameters are recorded in the sensor's EEPROM memory. When the sensor is connected to the transmitter, such information is made available to the transmitter's microprocessor, which sets a relationship between the sensor signal and the measured pressure.

Sometimes, the pressure shown on the transmitter's display is different from the applied pressure. This may be due to several reasons, among which the following can be mentioned:

- ✓ The transmitter mounting position;
- ✓ The user's pressure standard differs from the factory standard;
- ✓ Sensor's original characteristics shifted by overpressure, over temperature or by long-term drift.

NOTE

Some users prefer to use this feature for zero elevation or suppression when the measurement refers to a certain point of the tank or tap (wet tap). Such practice, however, is not recommended when frequent laboratory calibrations are required, because the equipment adjustment refers to a relative measurement, and not to an absolute one, as per a specific pressure standard.

The Pressure Trim, as described on this document, is the method used in order to adjust the measurement as related to the applied pressure, as per the user's pressure standard. The most common discrepancy found in transmitters is usually due to Zero displacement. This may be corrected by means of the Zero Trim or the Lower Trim.

There are four types of pressure trim available:

- ✓ **LOWER TRIM:** Is used to trim the reading at the lower range. The user informs to the transmitter the correct reading for the applied pressure via HART® configurator.

NOTE

Check on section 1, the note on the influence of the mounting position on the indicator. For better accuracy, the trim adjustment should be made in the lower and upper values of the operation range values.

- ✓ **UPPER TRIM:** Is used to trim the reading at the upper range. The user informs the transmitter the correct reading for the applied pressure via HART® configurator.

ATTENTION

The upper pressure trim shall always be done after the zero trim.

- ✓ **ZERO TRIM:** is similar to the LOWER TRIM, but is assumed that the applied pressure is zero. The reading equal to zero must be active when the pressures of differential transmitter cameras are equalized or when a manometric transmitter opened to atmosphere or when the absolute transmitter is applied to the vacuum. Therefore, the user does not need to enter with any value.
- ✓ **CHARACTERIZATION:** this is used to correct an eventual non-linearity intrinsic to the conversion process. Characterization is done by means of a linearization table, with up to five points. The user shall apply pressure and use the HART® configurators to inform the pressure value applied to each point of the table. In most cases, characterization is not required, due to the efficiency of the fabrication procedure. The transmitter will display "CHAR", thus indicating that the characterization process is activated. The LD291 has a parameter to enable or disable the use of the Characterization Table.

WARNING

The characterization trim changes the transmitter characteristics. Read the instructions carefully and certify that you are working with a pressure standard with accuracy 0.03% or better, otherwise the transmitter accuracy will be seriously affected.

Primary Variable Current Trim

When the microprocessor generates a 0 % signal, the Digital to Analog converter and associated electronics are supposed to deliver a 4 mA output. If the signal is 100 %, the output should be 20 mA.

There might be differences between the Smar current standards and your plant current Standard. In this case, the Current Trim adjustment shall be used, with a precision Ammeter as measurement reference. Two Current Trim types are available:

- ✓ **4 mA TRIM:** this is used to adjust the output current value corresponding to 0 % of the measurement;
- ✓ **20 mA TRIM:** this is used to adjust the output current value corresponding to 100 % of the measurement.

The Current Trim shall be carried out as per the following procedure:

- ✓ Connect the transmitter to the precision Ammeter;
- ✓ Select one of the Trim types;
- ✓ Wait a moment for the current to stabilize and inform the transmitter the current readout of the precision Ammeter.

NOTE

The transmitter presents a resolution that makes it possible to control currents as low as microamperes. Therefore, when informing the current readout to the transmitter, it is recommended that data input consider values up to tenth of microamperes.

Transmitter Adjustment to the Working Range

This function directly affects the transmitter's 4-20 mA output. It is used to define the transmitter's working range; in this document it is referred to as the transmitter's calibration. The **LD291** transmitter includes two calibration features:

- ✓ **CALIBRATION WITH REFERENCE:** this is used to adjust the transmitter's working range, using a pressure standard as a reference.
- ✓ **CALIBRATION WITHOUT REFERENCE:** this is used to adjust the transmitter's working range, simply by having limit values informed by the user.

Both calibration methods define the Working Range Upper and Lower values, in reference to some applied pressure or simply informed by entered values. **CALIBRATION WITH REFERENCE** differs from the Pressure Trim, since **CALIBRATION WITH REFERENCE** establishes a relationship between the applied pressure and the 4 to 20 mA signal, and the Pressure Trim is used to correct the measurement value.

In the transmitter mode, the Lower Value always corresponds to 4 mA and the Upper Value to 20 mA. In the controller mode, the Lower Value corresponds to PV = 0 % and the Upper Value to PV = 100 %.

The calibration process calculates the **LOWER** and the **UPPER** values in a completely independent way. The adjustment of value does not affect the other. The following rules shall, however, be observed:

- ✓ The Lower and Upper values shall be within the range limited by the Minimum and maximum Ranges supported by the transmitter. As a tolerance, values exceeding such limits by up to 24 % are accepted, although with some accuracy degradation.
- ✓ The Working Range Span, determined by modulus of the difference between the Upper and Lower Values, shall be greater than the minimum span, defined by [Transmitter Range / 120]. Values up to 0.75 of the minimum span are acceptable with slight accuracy degradation.

NOTE

If the transmitter is operating with a very small span, it will be extremely sensitive to pressure variations. Keep in mind that the gain will be very high and any pressure change, no matter how small, will be amplified.

If it is necessary to perform a reverse calibration, that is, to work with an UPPER VALUE smaller than the LOWER VALUE, proceed as follows:

- ✓ Place the Lower Limit in a value as far from the present Upper Value and from the new adjusted Upper value as possible, observing the minimum span allowed. Adjust the Upper Value at the desired point and, then, adjust the Lower Value.

This type of calibration is intended to prevent the calibration from reaching, at any moment, values not compatible with the range. For example: lower value equals to upper value or separated by a value smaller than the minimum span.

This calibration procedure is also recommended for zero suppression or elevation in those cases where the instrument installation results in a residual measurement in relation to a certain reference. This is the specific case of the wetted tap.

NOTE

In most applications with wetted taps, indication is usually expressed as a percentage. Should readout in engineering units with zero suppression be required, it is recommended to use the User Unit feature for such conversion.

Engineering Unit Selection

Transmitter **LD291** includes a selection of engineering units to be used in measurement indication.

For pressure measurements, the **LD291** includes an option list with the most common units. The internal reference unit is inH₂O @ 20 °C; should the desired unit be other than this one, it will be automatically converted using conversion factors included in Table 3.1.

As the **LD291** uses a 4 ½ digit display, the largest indication will be 19999. Therefore, when selecting a unit, make sure that it will not require readouts greater than this limit. For User reference, Table 3.1 presents a list of recommended sensor ranges for each available unit.

CONVERSION FACTOR	NEW UNITS	RECOMMEND RANGE
1.00000	Inches H ₂ O at 20 °C	1, 2, 3 & 4
0.0734241	Inches Hg at 0 °C	all
0.0833333	Feet H ₂ O at 20 °C	all
25.4000	Millimeters H ₂ O at 20 °C	1 & 2
1.86497	Millimeters Hg at 0 °C	1, 2, 3 & 4
0.0360625	Pound/square inch - psi	2, 3, 4, 5 & 6
0.00248642	Bar	3, 4, 5 & 6
2.48642	Millibar	1, 2, 3 & 4
2.53545	Gram/square centimeter	1, 2, 3 & 4
0.00253545	kilogram/square centimeter	3, 4, 5 & 6
248.642	Pascal	1
0.248642	KiloPascal	1, 2, 3 & 4
1.86497	Torr at 0 °C	1, 2, 3 & 4
0.00245391	Atmosphere	3, 4, 5 & 6
0.000248642	MegaPascal	4, 5 & 6
0.998205	Inches of water at 4 °C	1, 2, 3 & 4
25.3545	Millimeters of water at 4 °C	1 & 2

Table 3.1 - Available Pressure Units

In applications where the **LD291** will be used to measure variables other than pressure or in the cases where a relative adjustment has been selected, the new unit may be displayed by means of the User Unit feature. This is the case of measurements such as level, volume, and flow rate or mass flow obtained indirectly from pressure measurements.

The User Unit is calculated taking the working range limits as a reference, which is, defining a value corresponding to 0% and another corresponding to 100% of the measurement:

- ✓ **0%** - Desired readout when the pressure is equal to the Lower Value (PV% = 0%, or transmitter mode output equal to 4 mA).
- ✓ **100%** - Desired readout when the pressure is equal to the Upper Value (PV% = 100%, or transmitter mode output equal to 20 mA).

The user unit may be selected from a list of options included in the **LD291**. Table 3.2 makes it possible to associate the new measurement to the new unit so that all supervisory systems fitted with HART→ protocol can access the special unit included in this table. The user will be responsible for the consistency of such information. The **LD291** cannot verify if the values corresponding to 0% and 100% included by the user are compatible with the selected unit.

VARIABLE	UNITS
Pressure	inH ₂ O, InHg, ftH ₂ O, mmH ₂ O, mmHg, psi, bar, mbar, g/cm ² , kg/cm ² , Pa, kPa, Torr, atm, MPa, in H ₂ O ⁴ , mmH ₂ O ⁴
Volumetric Flow	ft ³ /min, gal/min, l/min, Gal/min, m ³ /h, gal/s, l/s, Ml/d, ft ³ /s, ft ³ /d, m ³ /s, m ³ /d, Gal/h, Gal/d, ft ³ /h, m ³ /min, bbl/s, bbl/min, bbl/h, bbl/d, gal/h, Gal/s, l/h, gal/d
Velocity	ft/s, m/s, m/h
Volume	gal, liter, Gal, m ³ , bbl, bush, Yd ³ , ft ³ , ln ³ , hl
Level	ft, m, in, cm, mm
Mass	gram, kg, Ton, lb, Sh ton, Lton
Mass Flow	g/s, g/min, g/h, kg/s, kg/min, kg/h, kg/d, Ton/min, Ton/h, Ton/d, lb/s, lb/min, lb/h, lb/d
Density	SGU, g/m ³ , kg/m ³ , g/ml, kg/l, g/l, Twad, Brix, Baum H, Baum L, API, % Solw, % Solv, Ball
Others	cSo, cPo, mA, %
special	5 characters

Table 3.2 – Available User Units

Should a special unit other than those presented on Table 3.2 be required, the **LD291** allows the user to create a new unit by entering up to 5 alphanumeric digits.

The **LD291** includes an internal feature to enable and disable the User Unit.

Example: transmitter **LD291** is connected to a horizontal cylindrical tank (6 meters long and 2 meters in diameter), linearized for volume measurement using camber table data in its linearization table. Measurement is done at the high-pressure tap and the transmitter is located 250 mm below the support base. The fluid to be measured is water at 20 °C. Tank volume is: $[(\pi \cdot d^2)/4] \cdot l = [(\pi \cdot 2^2)/4] \pi \cdot 6 = 18,85 \text{ m}^3$.

The wet tap shall be subtracted from the measured pressure in order to obtain the tank level. Therefore, a calibration without reference shall be carried out, as follows:

In Calibration:

Lower = 250 mmH₂O

Superior = 2250 mmH₂O

Pressure unit = mmH₂O

In User Unit:

User Unit 0% = 0

User Unit 100% = 18.85 m³

User Unit = m³

When activating the User's Unit, **LD291** it will start to indicate the new measurement.

Table Points

If the option TABLE is selected, the output will follow a curve given in the option TABLE POINTS. If you want to have your 4-20 mA proportional to the volume or mass of fluid inside a tank, you must transform the pressure measurement "X" into volume (or mass) "Y" using the tank strapping table, as shown in Table 3.3.

POINT	LEVEL (PRESSURE)	X	VOLUME	Y
1	-	-10%	-	-0.62%
2	250 mmH ₂ O	0%	0 m ³	0%
3	450 mmH ₂ O	10%	0.98 m ³	5.22%
4	750 mmH ₂ O	25%	2.90 m ³	15.38%
5	957.2 mmH ₂ O	35.36%	4.71 m ³	25%
6	1050 mmH ₂ O	40%	7.04 m ³	37.36%
7	1150 mmH ₂ O	45%	8.23 m ³	43.65%
8	1250 mmH ₂ O	50%	9.42 m ³	50%
...
15	2250 mmH ₂ O	100%	18.85 m ³	100%
16	-	110%	-	106%

Table 3.3 - Tank Strapping Table

As shown on the previous example, the points may be freely distributed for any desired value of X. In order to achieve a better linearization, the distribution should be concentrated in the less linear parts of the measurement.

The **LD291** includes an internal feature to enable and disable the Linearization Table.

Equipment Configuration

The **LD291** enables the configuration of not only its operational services, but of instrument itself. This group includes services related to: Input Filter, Burn Out, Addressing, Display Indication and Passwords.

- ✓ **INPUT FILTER** - The Input Filter, also referenced to as Damping, is a first class digital filter implemented by the firmware, where the time constant may be adjusted between 0 and 128 seconds. The transmitter's mechanical damping is 0.2 seconds.
- ✓ **BURN OUT** - The output current may be programmed to go to the maximum limit of 21 mA (Full Scale) or to the minimum limit of 3.6 mA in case of transmitter failure. Configuring the BURNOUT parameter for Upper or Lower may do this.
- ✓ **ADDRESSING** - The **LD291** includes a variable parameter to define the equipment address in a HART® network. Addresses may go from value "0" to "15"; addresses from "1" to "15" are specific addresses for multidrop connections. This means that, in a multidrop configuration, the **LD291** will display the message MDROP for addresses "1" to "15".

The **LD291** is factory configured with address "0".

- ✓ **DISPLAY INDICATION** - the **LD291** digital display is comprised of three distinct fields: an information field with icons indicating the active configuration status, a 4 ½ digit numeric field for values indication and a 5 digit alphanumeric field for units and status information.

The **LD291** may work with up to two display configurations to be alternately displayed at 2 second intervals. Parameters that may be selected for visualization are those listed on Table 3.4, below.

CURRENT	CURRENT IN MILLIAMPERES
CO	Analog Output Current in mA
PR	Pressure in pressure unit.
PV%	Process Variable in percentage.
PV	Process Variable in engineering units.
TE	Ambient temperature.
	NONE - No variable on display (only LCD_2)
ESC	Escape.

Table 3.4 - Variables for Display Indication

- ✓ **WRITING PROTECTION** - This feature is used to protect the transmitter configuration from changes via communication. All configuration data are writing protected.
The **LD291** include two write protection mechanisms: software and hardware locking; software locking has higher priority.
When the **LD291** writing software protection mechanism is enabled, it is possible, by means of specific commands, to enable or disable the write protection.
- ✓ **PASSWORDS** - this service enables the user to modify the operation passwords used in the **LD291**. Each password defines the access for a priority level (1 to 3); such configuration is stored in the **LD291** EEPROM.

Password Level 3 is hierarchically upper to password level 2, which is upper to level 1.

Equipment Maintenance

Here are grouped maintenance services related with the collection of information required for equipment maintenance. The following services are available: Order Code, Serial Number, Operation Counter and Backup/Restore.

- ✓ **ORDER CODE** - THE Order Code is the one used for purchasing the equipment, in accordance with the User specification. There are 13 characters available in the **LD291** to define this code.

EXAMPLE:

1	2	3	4	5	6	7	8	9	10	11	12	13
L	D	2	9	1	M	2	11	1	1	0	1	H1

LD291 Intelligent Pressure Transmitter (D); Range: 1.25 to 50 kPa **(2)**; Diaphragm of 316L SS, Silicone Oil Fill Fluid **(1)**, and Connection to the process with 316L SS **(11)**; with Digital Indicator **(1)**; Electrical Connection 1/2 - 14 NPT **(0)**; with Local Adjustment **(1)**; with Carbon Steel Bracket and accessories **(1)**; housing in SS **(H1)**.

- ✓ **SERIAL NUMBER** - Three serial numbers are stored:

Circuit Number - This number is unique to every main circuit board and cannot be changed.

Sensor Number - The serial number of the sensor connected to the **LD291** and cannot be changed. This number is read from the sensor every time a new sensor is inserted in the main board.

Transmitter Number - the number that is written at the identification plate each transmitter.

NOTE

The transmitter number must be changed whenever there is the main plate change to avoid communication problems.

- ✓ **OP_COUNT** - Every time a change is made, there is an increment in the respective change counter for each monitored variable, according to the following list. The counter is cyclic, from 0 to 255. The monitored items are:

LRV/URV: when any type of calibration is done;

Function: when any change in the transference function is done, e.g., linear, square root, const, table;

- ✓ **Trim_4mA**: when the current trim is done at 4 mA;
- ✓ **Trim_20mA**: when the current trim is done at 20 mA;
- ✓ **Trim_Zero/Lower**: when pressure trim is done at Zero or Lower Pressure;
- ✓ **Trim Upper Pressure**: when the trim is done at Upper Pressure;

Characterization: when any change is made in any point of the pressure characterization table in trim mode;

Multidrop: when any change is made in the communication mode, for example, multidrop or single transmitter;

Pswd/C-Level: when any change is made in the password or the level configuration.

- ✓ **BACKUP**
When the main board is replaced, after assembling and powering it, the data saved in the sensor memory are automatically copied to the main board memory.

- ✓ **RESTORE**

This option allows copying or restoring the data saved in the sensor memory to the main board memory.

Section 4

PROGRAMMING USING LOCAL ADJUSTMENT

The Magnetic Tool

Smar's magnetic tool is the second man machine interface. It comprises the advantage of the powerful HHT and the convenience of the magnetic tool.

If the transmitter is fitted with a display and configured for Complete Local Adjustment (using the internal jumper), the magnetic tool is almost as powerful as the HHT. It eliminates the need for an HHT in most basic applications.

If the transmitter is not fitted with a display or is configured for Simple Local Adjustment (using the internal jumper) the adjustment capability is reduced to ranging.

To select the function mode of the magnetic switches configures the jumpers located at the top of the main circuit board as indicated in Table 4.1.

SI/COM	OFF/ON	NOTE	WRITE PROTECT	SIMPLE LOCAL ADJUSTMENT	COMPLETE LOCAL ADJUSTMENT
• •	• •		Disables	Disables	Disables
• •	• •	1	Enables	Disables	Disables
• •	• •	2	Disables	Enables	Disables
• •	• •		Disables	Disables	Enables

Notes: 1 - If the hardware protection is selected, the EEPROM will be protected.
2 - The local adjustment default condition is simple enabled and write protect disabled.

Table 4.1 – Local adjustment Selection

The transmitter has, under the identification plate, holes for two magnetic switches activated by the magnetic tool (See Figure 4.1).



Figure 4.1 – Local Zero and Span Adjustment and Local Adjustment Switches

The holes are marked with **Z** (Zero) and **S** (Span) and from now on will be designated simply by **(Z)** and **(S)**, respectively. Table 4.2 shows the action performed by the magnetic tool while inserted in **(Z)** and **(S)** in accordance with the selected adjustment type.

Browsing the functions and their branches works as follows:

1. Inserting the handle of the magnetic tool in **(Z)**, the transmitter passes from the normal measurement state to the transmitter configuration state. The transmitter software automatically starts to display the available functions in a cyclic routine.
2. In order to reach the desired option, browse the options, wait until they are displayed and move the magnetic tool from **(Z)** to **(S)**. Refer to Figure 4.2 – Programming Tree Using Local Adjustment, in order to know the position of the desired option. By placing the magnetic tool once again in **(Z)**, it is possible to browse for other options within this new branch.
3. The procedure to reach the desired option is similar to the one described on the previous item, for the whole hierarchical level of the programming tree.

Action	Simple Local Adjustment	Complete Local Adjustment
Z	Selects the Lower Range Value	Moves among all the options
S	Selects the Upper Range Value	Activates the selected Functions

Table 4.2 - Local Adjustment Description

NOTE
For LD291 versions prior to a V6.00 , the digital display shall be number 214-0108 as per spare parts list for LD291 V6.XX . For LD291 versions V6.XX , the digital display shall be number 400-0559 , as per the updated spare parts list

Simple Local Adjustment

The **LD291** allows only the calibration of the values inferior and superior in this configuration.

Zero and Span Reranging

The **LD291** can be very easily calibrated. It requires only Zero and Span adjustment in accordance with the working range.

The jumpers shall be configured for simple local adjustment. In case the **LD291** display is not connected, the simple local adjustment is automatically activated.

Zero calibration with reference shall be done as follows:

- ✓ Apply the Lower Value pressure.
- ✓ Wait for the pressure to stabilize.
- ✓ Insert the magnetic tool in the ZERO adjustment hole. (See Figure 4.1)
- ✓ Wait about 2 seconds. The transmitter should be reading 4 mA.
- ✓ Remove the tool.

Zero calibration with reference does not affect the span. In order to change the span, the following procedure shall be observed:

- ✓ Apply the Upper Value pressure.
- ✓ Wait for the pressure to stabilize.
- ✓ Insert the magnetic tool in the SPAN adjustment hole.
- ✓ Wait 2 seconds. The transmitter should be reading 20 mA.
- ✓ Remove the tool.

Zero adjustment causes zero elevation / suppression and a new upper value (URV) is calculated in accordance with the effective span. In case the resulting URV is higher than the Upper Limit Value (URL), the URV will be limited to the URL value, and the span will be automatically affected.

Complete Local Adjustment

The transmitter must be fitted with the digital display for this function to be enabled. The following functions are available for local adjustment: Constant Current, Table Points Adjustment, User Units, and Fail-safe, Current Trim and Pressure, Address change and some items of function INFORMATION.

WARNING

When programming using local adjustment, the transmitter will not prompt, "**Control loop should be in manual!**" as it does when programming using the HART® configurator. Therefore it is a good idea, before configuration, to switch the loop to manual. And do not forget to return to auto after configuration is completed.

Local Programming Tree

The local adjustment uses a tree structure where, by placing the magnetic tool in **(Z)** it is possible to browse the options of a branch and by placing it in **(S)**; details of the chosen option are shown. Figure 4.2 shows the **LD291** available options.

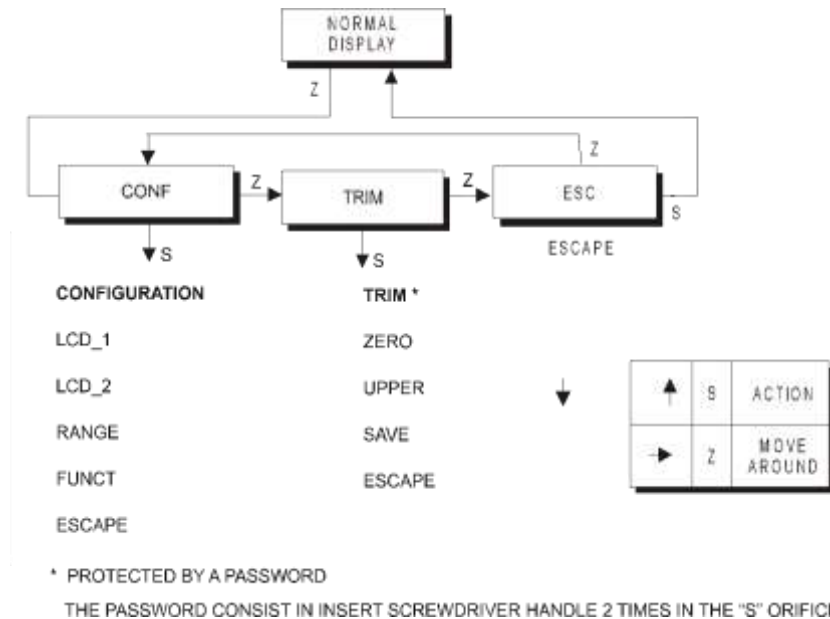


Figure 4.2 – Local Adjustment Programming Tree – Main Menu

CONFIGURATION (CONF) - Is the option where the output and display related parameters are configured: unit, primary and secondary display, calibration, and function.

TRIM (TRIM) – It is the option used to calibrate the "without reference" characterization and the digital reading.

ESCAPE (ESC) – It is the option used to go back to normal monitoring mode. The local adjustment is activated by actuation in **(Z)**.

Configuration [CONF]

Configuration functions affect directly the 4-20 mA output current and the display indication. The configuration options implemented in this branch are the following:

- ✓ Selection of the variable to be shown on Display 1 and / or Display 2;
- ✓ Working range calibration of work. Options With and Without Reference are available;
- ✓ Digital filter damping time configuration of the readout signal input.
- ✓ Selection of the transference function to be applied to the measured variable.

Figure 4.3 shows branch CONF with the available options.

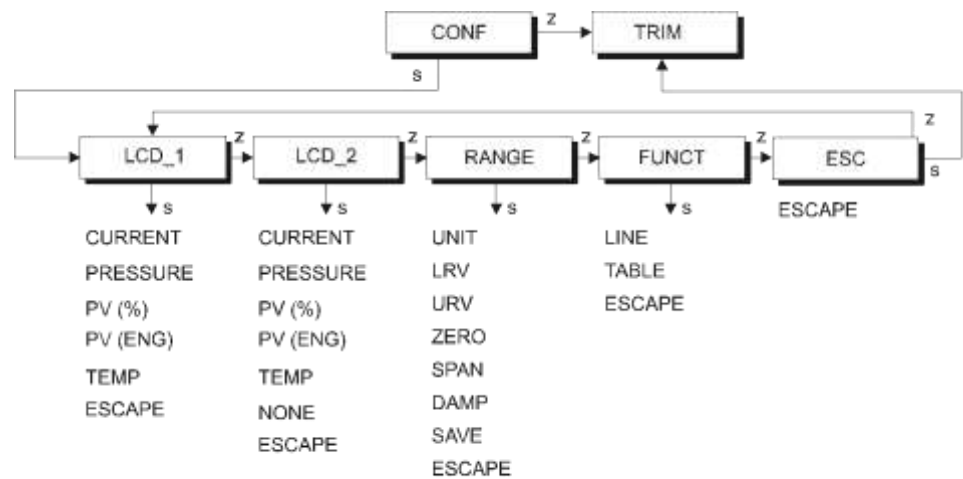


Figure 4.3 - Local Adjustment Configuration Tree

Configuration Branch (CONF)



- Z: Moves to the TRIM branch.
- S: Enters the CONFIGURATION branch, starting with function display (LCD_1).

Display 1 (LCD_1)



- Z: Moves to the function Display 2 (LCD_2).
- S: Starts selection of variable to be indicated as primary display. After activating (S), you can move around the options available in the following table by activating (Z). See table 4.3. The desired variable is activated using (S). Escape leaves primary variable unchanged.

Display 2 (LCD_2)



- Z: Moves to the RANGE function.
- S: Starts selection of variable to be indicated as secondary display. The procedure for selection is the same as for LCD_1, previous.

CURRENT	CURRENT IN MILIAMPERES
CO	Analog Output Current in mA
PR	Pressre in pressure unit.
PV%	Process Variable in percentage.
PV	Process Variable in engineering units.
TE	Ambient temperature.
	NONE - No variable on display (only LCD_2)
ESC	Escape.

Table 4.3 - Display Indication

Range (RANGE)

Function Calibration (RANGE) presents the calibration options as a tree branch, as described on Figure 4.4.

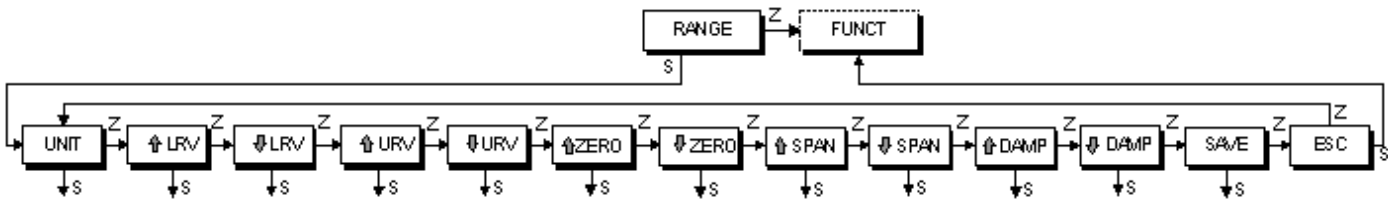


Figure 4.4 – Local Range Tree

Range Branch (RANGE)



Unit (UNIT)



- Z:** Moves to the FUNCT function from range branch.
- S:** Enters the RANGE branch, starting with the function UNIT.
- Z:** Moves to the LRV function.
- S:** Starts selection of engineering unit for process variable. After activating (S), you can move around the options available in the table below by activating (Z). Using (S) activates the desired unit. Escape leaves the unit unchanged.

UNIT	
DISPLAY	DESCRIPTION
InH ₂ O	Inches water column at 20 °C
InHg	Inches mercury column at 0 °C
ftH ₂ O	Feet water column at 20 °C
mmH ₂ O	Millimeter water column at 20 °C
mmHg	Millimeter mercury column at 0 °C
psi	Pounds per square centimeter
Bar	Bar
Mbar	Millibar
g/cm ²	Grams per square centimeter
k/cm ²	Kilograms per square centimeter
Pa	Pascals
kPa	Kilo Pascals
Torr*	Torr at 0 °C
atm	Atmospheres
ESC	Escape

* The **Torr** unit has been changed to mH₂O@20 °C for version 6.04 or greater.

Table 4.4 – Units

Lower Range Value Adjustment without Reference (LRV)



Z: Moves to the LRV DECREASE function.

S: Increases the Lower Value until the magnetic tool is removed or the maximum limit for the Lower Value is reached.



Z: Moves to the URV ADJUSTMENT function.

S: Decreases the Lower Value until the magnetic tool is removed or the minimum limit for the Lower Value is reached.

Upper Range Value Adjust without Reference (URV)



Z: Moves to the URV DECREASE function.

S: Increases the Upper Value until the magnetic tool is removed or the maximum limit for the Upper Value is reached.



Z: Moves to the ZERO ADJUSTMENT function.

S: Decreases the Upper Value until the magnetic tool is removed or the minimum limit for the Upper Value is reached.

Zero Adjust with Reference (ZERO)



Z: Moves to the ZERO DECREASE function.

S: Increases output in transmitter mode, decreases the Lower Pressure Value until the magnetic tool is removed or the maximum limit for the Lower Value is reached. The span is maintained.



Z: Moves to the SPAN ADJUSTMENT function.

S: Decreases Output in transmitter mode, increases the Lower Pressure Value until the magnetic tool is removed or the minimum limit for the Lower Value is reached. The span is maintained.

Span Adjust with Reference (SPAN)



Z: Moves to the SPAN DECREASE function.


S: Increases the Output in transmitter mode, decreases the Upper Pressure Value until the magnetic tool is removed or the maximum limit for the Upper Value is reached.



Z: Moves to the DAMPING function.

S: Decreases the Output in transmitter mode, increases the Upper Pressure Value until the magnetic tool is removed or the minimum limit for the Upper Value is reached.

Damping (DAMP)

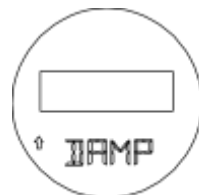

Z: Moves to the DAMPING DECREASE function.

S: Increases the damping time constant until the magnetic tool is removed or 128 seconds are reached.



Z: Moves to the SAVE function.

S: Decreases the damping time constant until the magnetic tool is removed or 0 second is reached.

Save (SAVE)



Z: Moves to the ESCAPE of RANGE menu.

S: Saves the LRV, URV, ZERO, SPAN and DAMP values in the transmitter EEPROM.

Escape (ESC)



Z: Moves to the UNIT function.

S: Moves to the FUNCT menu, of the MAIN menu.

Function (FUNCT)



Z: Moves to the ESCAPE function.

S: Starts selection of input function. After activating (**S**) you can move around the available options in the table below by activating (**Z**).

FUNCTIONS	
DISPLAY	DESCRIPTION
LINE	Linear to Pressure.
TABLE	16 Point Table.
ESC	ESC to Escape from the superior Branch.

Table 4.5 – Functions

The desired function is activated using (S). Escape leaves function unchanged.



- Z: Recycles for menu LCD – 1.
- S: Moves to the CONF function of the main menu.

Pressure Trim

[TRIM]

This field of the tree is used to adjust the digital reading according to the applied pressure. The pressure TRIM differs from RANGING WITH REFERENCE, since the TRIM is used to correct the measure and RANGING WITH REFERENCE reach only the applied pressure with the output signal of 4 to 20 mA.

Figure 4.5 shows the options available to run the pressure TRIM.

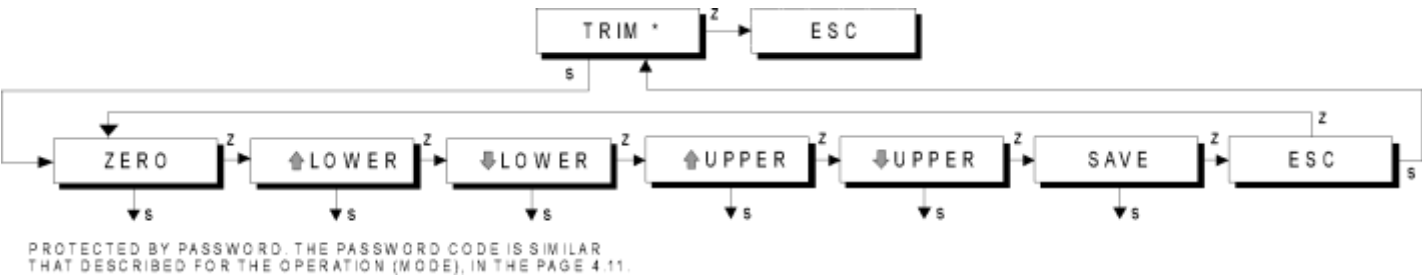


Figure 4.5 – Pressure Trim Tree

Trim Branch (TRIM)




- Z: Moves to ESC function.
- S: These functions are protected by a "password." When prompted PSWD activates (S) 2 times to proceed. After entering the password, the TRIM branch starting with the Zero Trim function is accessed.

NOTE

Check on section 1, the note on the influence of the mounting position on the indicator. For better accuracy, the trim adjustment should be made in the lower and upper values of the operation range values.

Zero Pressure Trim (ZERO)

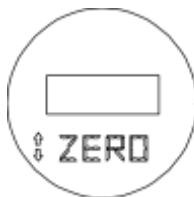


- Z: Moves to the LOWER pressure TRIM function.
- S: Trims the transmitters' internal reference to read 0 at the applied pressure.

Lower Pressure Trim (LOWER)



Z: Moves to option DECREASES THE LOWER PRESSURE VALUE.

S: Adjusts the transmitter's internal reference, increasing the displayed value that will be interpreted as the Lower Pressure value corresponding to the applied pressure.

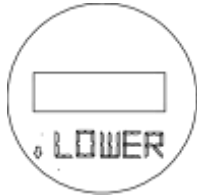

Z: Moves on to function SAVE if the Lower Pressure Trim (LOWER) is running or to the Upper Pressure Trim (UPPER).

S: Adjusts the transmitter's internal reference, decreasing the displayed value that will be interpreted as the Lower Pressure value corresponding to the applied pressure.

Upper Pressure Trim (UPPER)



Z: Moves to the decrease Upper Pressure reading.

S: Sets the transmitters' internal reference increasing to the value on the display, which is the reading of the applied pressure.



Z: Moves to the SAVE function.

S: Sets the transmitters' internal reference decreasing to the value on the display, which is the reading of the applied pressure.



Z: Moves to the ESCAPE from TRIM menu.

S: Saves the LOWER and UPPER TRIM point in the transmitter EEPROM and actualize the internal parameters pressure measurement.

Escape (ESC)



Z: Moves to the ZERO TRIM function.

S: Escapes to the MAIN menu.

Escape Local Adjustment [ESC]

This branch of the main tree is used to leave the Local Adjustment mode, placing the Transmitter or Controller in the monitoring mode.



Z: Selects the OPERATION branch.

S: Escapes to NORMAL DISPLAY mode.

MAINTENANCE PROCEDURES

General

NOTE

Equipment installed in hazardous atmospheres must be inspected in compliance with the IEC60079-17 standard.

SMAR LD291 intelligent pressure transmitters are extensively tested and inspected before delivery to the end user. Nevertheless, its design includes additional information for diagnosis purposes, to provide an easier fault detection capability and, as a consequence, an easier maintenance.

In general, it is recommended that end users do not try to repair printed circuit boards. Spare circuit boards may be ordered from **SMAR** whenever necessary.

The sensor has been designed to operate for many years without malfunctions. Should the process application require periodic cleaning of the transmitter, the flanges may be easily removed and reinstalled.

Should the sensor eventually require maintenance, it may not be changed in the field. In this case, the possibly damaged sensor should be returned to **SMAR** for evaluation and, if necessary, repair. Refer to the item "Returning Materials" at the end of this Section.

Diagnostic with the Configurator

Should any problem be noticed relating to the transmitter output, the configurator may carry out investigation, if power is supplied, and communication and the processing unit are operating normally (see Table 5.1).

The configurator should be connected to the transmitter according to the wiring diagram shown on Section 1, Figures 1.10 and 1.11.

Error Messages

When communicating using the CONFIGURATOR the user will be informed about any problem found by the transmitter self-diagnostics.

Table 5.1 presents a list of error messages with details for corrective actions that may be necessary.

ERROR MESSAGES	POTENTIAL SOURCE OF PROBLEM
UART RECEIVER FAILURE:	<ul style="list-style-type: none">• The line resistance is not according to load curve.• Excessive noise or ripple in the line.• Low level signal.• Interface damaged.• Power supply with inadequate voltage.
• PARITY ERROR	
• OVERRUN ERROR	
• ERROR CHECK SUM	
• FRAMING ERROR	
CONFIGURATOR RECEIVES NO ANSWER FROM TRANSMITTER	<ul style="list-style-type: none">• Transmitter line resistance is not according to load curve;• Transmitter not powered;• Interface not connected or damaged;• Repeated bus address;• Transmitter polarity is reversed;• Interface damaged;• Power supply with inadequate voltage.
CMD NOT IMPLEMENTED	<ul style="list-style-type: none">• Software version not compatible between configurator and transmitter. Configurator is trying to carry out a LD291 specific command in a transmitter from another manufacturer.
TRANSMITTER BUSY	<ul style="list-style-type: none">• Transmitter carrying out an important task, e.g., local adjustment.
XMTR MALFUNCTION	<ul style="list-style-type: none">• Sensor disconnected.• Sensor failure.
COLD START	<ul style="list-style-type: none">• Start-up or Reset due to power supplies failure.

ERROR MESSAGES	POTENTIAL SOURCE OF PROBLEM
OUTPUT FIXED	<ul style="list-style-type: none"> • Output in Constant Mode. • Transmitter in Multidrop mode.
OUTPUT SATURATED	<ul style="list-style-type: none"> • Pressure out of calibrated Span or in fail-safe state (Output current in 3.8 or 20.5 mA).
SV OUT OF LIMITS	<ul style="list-style-type: none"> • Temperature out of operating limits. • Temperature sensor damaged.
PV OUT OF LIMITS	<ul style="list-style-type: none"> • Pressure out of operation limits. • Sensor damaged or sensor module not connected. • Transmitter with false configuration.
LOWER RANGE VALUE TOO HIGH	<ul style="list-style-type: none"> • Lower value exceeds 24% of the Upper Range Limit.
LOWER RANGE VALUE TOO LOW	<ul style="list-style-type: none"> • Lower value exceeds 24% of the Lower Range Limit.
UPPER RANGE VALUE TOO HIGH	<ul style="list-style-type: none"> • Upper value exceeds 24% of the Upper Range Limit.
UPPER RANGE VALUE TOO LOW	<ul style="list-style-type: none"> • Upper value exceeds 24% of the Lower Range Limit.
UPPER & LOWER RANGE VALUES OUT OF LIMITS	<ul style="list-style-type: none"> • Lower and Upper Values are out of the sensor range limits.
SPAN TOO SMALL	<ul style="list-style-type: none"> • The difference, between the Lower and Upper values is less than the 0.75 x (minimum span).
APPLIED PRESURE TOO HIGH	<ul style="list-style-type: none"> • The pressure applied was above the 24% upper range limit.
APPLIED PRESURE TOO LOW	<ul style="list-style-type: none"> • The pressure applied was below the 24% lower range limit.
EXCESS CORRECTION	<ul style="list-style-type: none"> • The trim value entered exceeded the factory-characterized value by more than 10%.
PASSED PARAMETER TOO LARGE	<ul style="list-style-type: none"> • Parameter above operating limits.
PASSED PARAMETER TOO SMALL	<ul style="list-style-type: none"> • Parameter below operating limits.

Table 5.1 - Error Messages and Potential Source

Diagnostic with the Transmitter

Symptom: NO LINE CURRENT

Probable Source of Trouble:

✓ Transmitter Connections

- Check wiring polarity and continuity;
- Check for shorts or ground loops;
- Check if the power supply connector is connected to main board.

✓ Power Supply

- Check power supply output. The voltage must be between 12 and 45 Vdc at transmitter terminals.

✓ Electronic Circuit Failure

- Check the main board for defect by using a spare one.

Symptom: NO COMMUNICATION

Probable Source of Trouble:

✓ Terminal Connections

- Check the terminal interface connection of the configurator.

- Check if the interface is connected to the wires leading to the transmitter or to the terminals [+]
and [-].
- Check if the interface is models IF3 (for Hart protocol).

✓ **Transmitter Connections**

- Check if connections are according to wiring diagram.
- Check if there is resistance in the 250 Ω line.

✓ **Power Supply**

- Check output of power supply. The voltage at the **LD291** terminals must be between 12 and 45 Vdc, and ripple less than 500 mV.

✓ **Electronic Circuit Failure**

- Locate the failure by alternately testing the transmitter circuit and the interface with spare parts.

✓ **Transmitter Address**

- Check if the transmitter address is compatible with the one expected by the configurator.

Symptom: CURRENT OF 21.0 mA or 3.6 mA

Probable Source of Trouble:

✓ **Pressure Tap (Piping)**

- Verify if blocking valves are fully open;
- Check for gas in liquid lines or for liquid in dry lines;
- Check the specific gravity of process fluid;
- Check process flanges for sediments;
- Check the pressure connection;
- Check if bypass valves are closed;
- Check if pressure applied is not over upper limit of transmitter's range.

Sensor to Main Circuit Connection

- Check connection (male and female connectors).

✓ **Electronic Circuit Failure**

- Check the sensor circuit for damage by replacing it with a spare one.
- Replace sensor.

Symptom: INCORRECT OUTPUT

Probable Source of Trouble:

✓ **Transmitter Connections**

- Check power supply voltage.
- Check for intermittent short circuits, open circuits, and grounding problems.

✓ **Noise Measurement Fluid**

- Adjust damping

✓ **Pressure Tap**

- Check for gas in liquid lines and for liquid in steam or gases lines.
- Check the integrity of the circuit by replacing it with a spare one.

✓ **Calibration**

- Check calibration of the transmitter.

NOTE

A 21.0 or 3.6 mA current indicates that the transmitter is in Burnout (TRM) or safety output. Use the configurator to investigate the source of the problem.

Symptom: DISPLAY INDICATES "FAIL SENS"**Probable Error Source:**✓ **Sensor Connection to the Main Board**

Check the connection (flat cable, male and female connectors).

✓ **Type of Sensor Connected to the Main Board**

Check if the sensor connected to the main board is the one specified for the **LD291** model: sensor type shall be hyper - High Performance.

✓ **Electronic Circuit Failure**

Check if the sensor set is damaged, replacing it for a spare one.

Disassembly Procedure

WARNING

Do not disassemble with power on.

Figure 5.3 shows transmitter's exploded view and will help you to visualize the following:

ELECTRONIC CIRCUIT

With the transmitter power off, remove the cover with window (1). To remove the circuit board (3), loosen the two screws that anchor the board and hold the spacers in the other side to avoid losing them.

WARNING

The board has CMOS components, which may be damaged by electrostatic discharges. Observe correct procedures for handling CMOS components. It is also recommended to store the circuit boards in electrostatic-proof cases.

Pull the main board out of the housing and disconnect the power supply cable and the sensor flat cable. Loosen the sensor lock screw (5) and then remove it.

SENSOR

To have access to the sensor for cleaning purposes, the transmitter should be removed from its process connections.

Loosen the sensor screw (5) and carefully unscrew the electronic housing from the sensor, observing that the flat cable is not excessively twisted.

WARNING

To avoid damage do not rotate the electronic housing more than 270° starting from the fully threaded without disconnecting the electronic circuit from the sensor and from the power supply. See Figure 5.1.



Figure 5.1 – Safety Housing Rotation

Reassembly Procedure

WARNING

Do not assemble with power on.

SENSOR

When mounting the sensor, it is recommended to make use of a new set of gaskets compatible with the process fluid.

O-rings should be lightly lubricated with silicone oil before they are fitted into their recesses. Use halogen grease for inert fill applications.

The fitting of the sensor must be done with the main board out of the electronic housing. Mount the sensor to the housing turning it clockwise until it stops. Tighten the screw (5) to lock the body to the sensor.

ELECTRONIC CIRCUIT

Plug sensor connector and power supply connector to main board. The display can be installed in any of the 4 possible positions (See Figure 5.2). The "▲" mark indicates up position.

Pass the screws through the main board holes (3) and the spacers as shown on Figure 5.3 and tighten them to the housing.

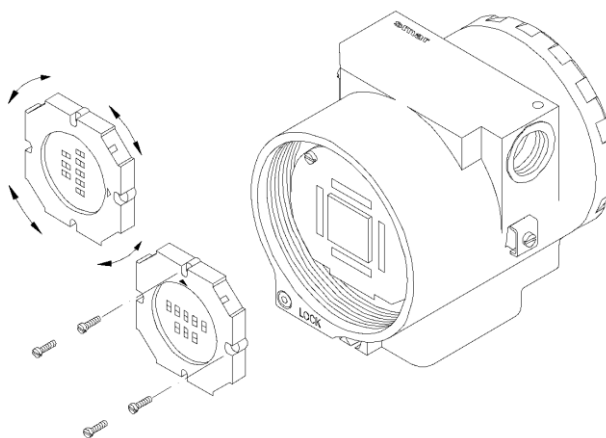


Figure 5.2 – Four Possible Positions of the Display

After tightening the protective cover (1), mounting procedure is complete. The transmitter is ready to be energized and tested. It is recommended that adjustment be done on the ZERO TRIM and on the UPPER PRESSURE TRIM.

Interchangeability

To obtain an accurate and better temperature compensated response, each sensor is submitted to a characterization process and the specific data is stored in an EEPROM located in the sensor body.

The main board, in this operation, reads the sensor serial number and compares it with the number stored in the main board. In case they do not match, the circuit considers that the sensor has been changed and will probe the memory of the new sensor for the following information:

- ✓ Temperature compensation coefficients;
- ✓ Sensor trim data, including 5-point characterization curve;
- ✓ Sensor characteristics: type, range, diaphragm material and fill fluid.

Information not transferred during sensor replacement will remain unchanged in the main board memory. Thus, information such as Upper Value, Lower Value, Damping, Pressure Unit and replaceable transmitter parts (Flange, O-ring, etc.) shall be updated, depending on whether the correct information is that of the sensor or the main board. In the case of a new sensor, the main board will have the most updated information about the process; in the opposite case, the sensor will have it. Depending on the situation, the updating shall be from one or the other.

Data transference from the main board to the sensor or vice versa, can also be forced by function BACKUP/RESTORE from sensor.


Returning Materials

Should it become necessary to return the transmitter and/or configurator to **SMAR**, simply contact our office, informing the defective instrument serial number, and return it to our factory.

If it becomes necessary to return the transmitter and/or configurator to Smar, simply contact our office, informing the defective instrument's serial number, and return it to our factory. To speed up analysis and solution of the problem, the defective item should be returned with the Service Request Form (SRF – Appendix B) properly filled with a description of the failure observed and with as much details as possible. Other information concerning to the instrument operation, such as service and process conditions, is also helpful.

Instruments returned or to be revised outside the warranty term should be accompanied by a purchase order or a quote request.

SPARE PARTS

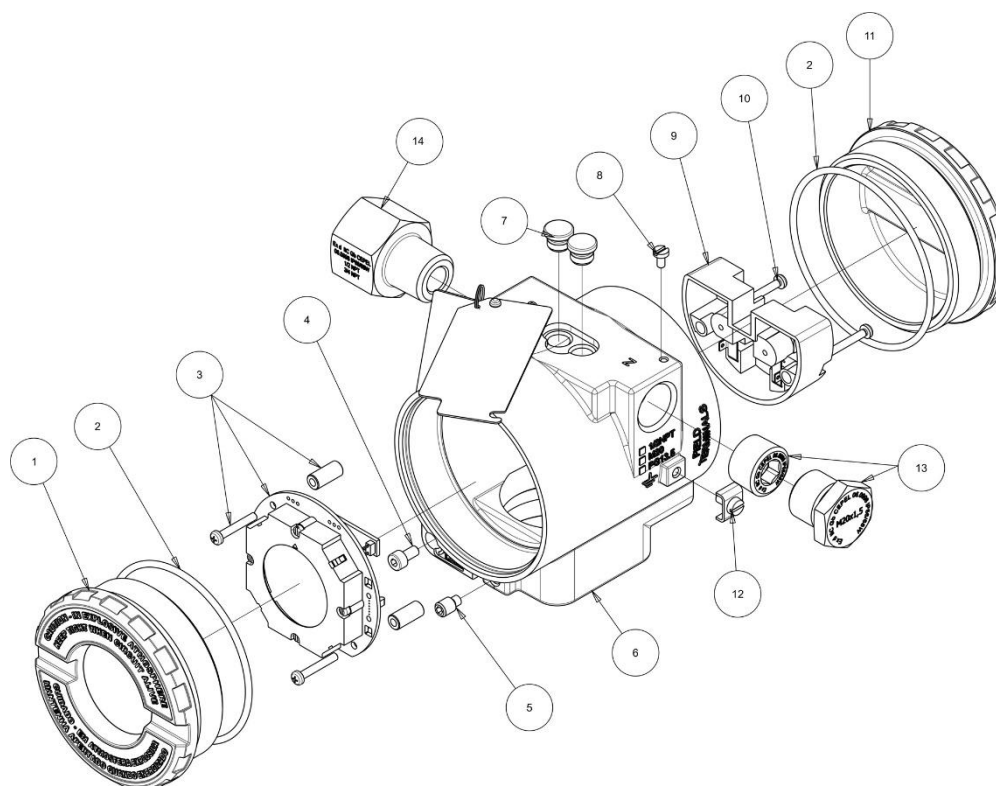

The letters x, after the codes indicate continuation, see complete code in the manual.

14	1	3/4NPT AISI316 adapter BR-Exd	400-0812
13	1	PG13.5 plug AISI 316	400-0811
13	1	M20x1,5 plug AISI 316 BR-EXD	400-0810
13	1	1/2NPT plug AISI316 BR-EXD	400-1484
12	1	ground screw	204-0124
11	1	cover without window	400-1307-0xx
10	1	terminal block insulator screw	204-0119
9	1	terminal block insulator	400-0058
8	1	identification plate screw	204-0116
7	2	local adjust (Z e S) cover	204-0114
6	1	Electronic Housing	400-1314-1xxxxxx
5	1	sensor lock screw	400-1121
4	2	cover lock screw	204-0120
3	1	etectronic board	Note
2	1	cover oring	204-0122
1	1	cover with window	400-1307-1xx
ITEM	QTY	DESCRIPTION	CODE

Figure 5.3 – Exploded View

ITEM 3 NOTE


Go to www.smar.com.br/en/support

In general support, check for compatibility note and refer to the document.

ITEM 13 NOTE


The spare part 400-1484, Internal Hexagonal Plug 1/2" NPT SST316 BR-Ex-d, was standardized in SST316 material and will be used in all line of housings (aluminum, copper free aluminum or SST316). With or without CEPEL certificate.

ACCESSORIES	
ORDERING CODE	DESCRIPTION
SD-1	Magnetic Tool for local adjustment.
DEVCODROID	Uses DDs to access the data stored in memory and configure the HART equipment.
HPI311	HART® interface.

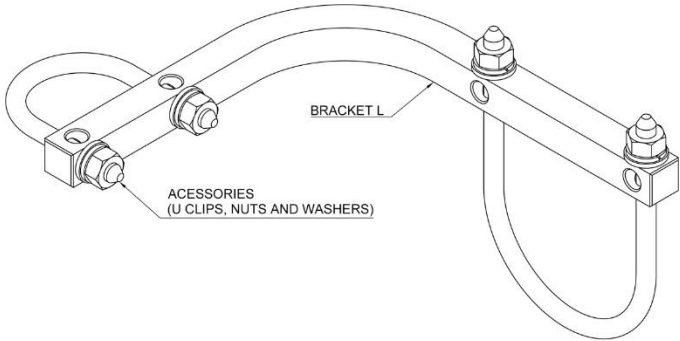

1	1	Mounting bracket and accessories in carbon steel	209-0801
2	1	Mounting bracket and accessories in 316 SST	209-0802
3	1	Mounting bracket in Carbon Steel with accessories in 316SST	209-0803
ITEM	QTY	DESCRIPTION	CODE

Figure 5.4 – LD291 Support

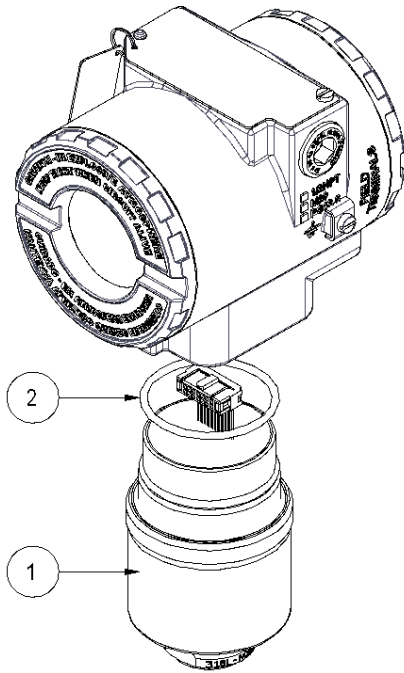

2	1	Buna N O'ring for sensor/housing	204-0113
1	1	Sensor	209-0241-Mxxxx
ITEM	QTY	DESCRIPTION	CODE

The letters x after codes indicate continuation. See complete code in the following tables.

Ordering Code for Housing and Covers

CODE	DESCRIPTION	
400-1314 - 2	HOUSING: LD291	
	Option	Communication Protocol
	H	HART and 4-20 mA
	Option	Electrical Connection
	0	½ NPT
	A	M20 X 1.5
	B	PG13.5
	Option	Material
	H0	Aluminum (IP/Type)
	H1	316 SST (IP/Type)
	H2	Aluminum – for saline atmospheres (IPW/Type X)
	H4	Aluminum Copper Free (IPW/Type X)
	Option	Painting
	P0	Gray Munsell N 6.5 Polyester
	P1	Safety Blue Epoxy – Immersion Condition-Petrobras N1021
	P2	Safety Blue Epoxy – Atmospheric Zone - Petrobras N1021
	P3	Black Polyester
	P8	Without Painting
	P9	Blue Safety Epoxy
	PG	Orange Safety Epoxy

400-1314 - 2	H	0	H0	P0
--------------	---	---	----	----

CODE	DESCRIPTION	
400-1307	Cover	
	Code	Window
	0	Without window
	1	With window
	Code	Material
	H0	Aluminum (IP/TYPE)
	H1	SST 316 (IP/TYPE)
	Code	Painting
	P0	Gray Munsell N 6.5 Polyester
	P1	Safety Blue Epoxy – Immersion Condition-Petrobras N1021
	P2	Safety Blue Epoxy – Atmospheric Zone - Petrobras N1021
	P3	Black Polyester
	P8	Without Painting
	P9	Blue Safety Epoxy
	PG	Orange Safety Epoxy

400-1307	*	*	*	Typical model
----------	---	---	---	---------------

Ordering Code for Sensor

209-0241-M		SPARE PART NUMBER FOR PRESSURE GAGE SENSOR			
	CODE	Type	Range Limits		
		Min.	Max.	Unit	
	2	Gage	12.5	500	mbar
	3	Gage	-1000	2500	mbar
	4	Gage	-1	25	bar
	5	Gage	-1	250	bar
	CODE	Diaphragm Material and Fill Fluid			
	1	316L SST - Silicone Oil		E	Hastelloy C276 – Inert Krytox Oil (1) (2)
	2	316L SST – Inert Fluorolube Oil (2)		Q	316L SST – Inert Halocarbon 4.2 Oil (2)
	3	Hastelloy C276 - Silicone Oil (1)		R	Hastelloy C276 – Inert Halocarbon 4.2 Oil (1) (2)
	4	Hastelloy C276 – Inert Fluorolube Oil (1) (2)		Z	User's specifications
	D	316L SST – Inert Krytox Oil (2)			
	CODE	Process Connections Material			
	H	Hastelloy C276 (1)		I	316L SST
				Z	User's specifications
		CODE	Process Connections		
	1	1/2 - 14 NPT - Female		U	1/2 BSP – Male
	A	M20 X 1,5 Male		X	1" NPT Sealed
	G	DIN EN 837-1 G1/2B Male (3)		Z	User's specifications
	H	DIN EN 837-1 G1/2B HP Macho (3)			
	M	1/2 - 14 NPT - Male			
209-0241-M	2	1	I	A	Typical Model Number

NOTE

- 1) Meets NACE MR - 01 - 75/ISO 15156 recommendations.
- 2) Inert Fluid: safe for oxygen service.
- 3) The DIN 16288 standards were replaced by the DIN EN 837-1.

209-0241-S SPARE PART NUMBER FOR SANITARY PRESSURE SENSOR										
CODE	Type	Range Limits			Range Limits					
		Min.	Max.	Unit	Min.	Max.	Unit			
2	Sanitary	12.5	500	mbar	5.02	201.09	inH ₂ O			
3	Sanitary	62.5	2500	mbar	25.13	1005.45	inH ₂ O			
4	Sanitary	0.625	25	bar	157.1	10054.5	inH ₂ O			
5	Sanitary	6.25	55.15	bar	90.65	799.89	psi			
CODE	Diaphragm Material									
I	316L SST									
CODE	Fill Fluid (Low Side)									
S	Silicone DC-200/20 Oil									
CODE	Process Connections									
F	Tri-clamp – 1.1/2"				C	Thread RJT – 2"				
Q	Tri-clamp – 1.1/2" HP				5	Thread RJT – 2" – with extension				
D	Tri-Clamp – 2"				B	Thread IDF – 2"				
P	Tri-Clamp – 2" HP				4	Thread IDF – 2" – with extension				
6	Tri-Clamp – 2" – with extension				8	Thread DN25 – DIN 11851 – with extension				
N	Tri-Clamp – 2" HP – with extension				H	Thread DN40 – DIN 11851				
A	Tri-Clamp DN50 – with extension				9	Thread DN40 – DIN 11851 – with extension				
O	Tri-Clamp DN50 HP – with extension				U	Thread DN50 – DIN 11851				
G	Tri-Clamp – 3"				V	Thread DN50 – DIN 11851 – with extension				
R	Tri-Clamp – 3" HP				Y	According special option				
S	Thread SMS – 1.1/2"				Z	User's specifications				
E	Thread SMS – 2"									
7	Thread SMS – 2" – with extension									
CODE	Sanitary ring									
0	Without o-ring									
B	Buna-N									
T	PTFE									
V	Viton									
CODE	Tank Adapter									
0	Without Adapter									
1	With SST 316 adapter									
CODE	TRICLAMP									
0	Without Clamp									
2	With SST304 Clamp									
CODE	Sanitary Diaphragm									
I	SST 316L									
H	Hastelloy C276									
CODE	Sanitary Connection Fill Fluid									
D	Silicone DC-304 Oil									
F	Fluorolube MO-10									
N	Propylene Glycol Neobee M20 Oil									
S	Silicone DC-200/20 Oil									
T	Syltherm 800									
209-0241-S	2	I	S	D	B	1	0	I	N	Typical Model Number

Typical Model Number

209-0241-L SPARE PART NUMBER FOR FLANGED PRESSURE SENSOR										
CODE	Type	Range Limits		Min. Span	Unit	Range Limits		Min. Span	Unit	
		Min.	Max.			Min.	Max.			
2	Level	-50	50	1,25	kPa	-200	200	5	inH ₂ O	Note: The range can be extended up to 0.75 LRL and 1.2 URL with small degradation of accuracy. The upper range value must be limited to the flange rating.
3	Level	-250	250	2,08	kPa	-36	36	0,3	psi	
4	Level	-2500	2500	20,83	kPa	-360	360	3	psi	
5	Level	-25000	25000	208,30	kPa	-3625	3625	30,2	psi	
CODE	Diaphragm Material (Sensor) and Fill Fluid (Sensor)									
1	316L SST - Silicone Oil									
CODE	Process Connection									
U	1" 150# (ASME B16.5) (6)					C	3" 600# (ASME B16.5)			
V	1" 300# (ASME B16.5) (6)					3	4" 150# (ASME B16.5)			
W	1" 600# (ASME B16.5) (6)					4	4" 300# (ASME B16.5)			
O	1½" 150# (ASME B16.5)					D	4" 600# (ASME B16.5)			
P	1½" 300# (ASME B16.5)					E	DN50 PN10/40 (DIN EN 1092-1)			
Q	1½" 600# (ASME B16.5)					6	DN80 PN10/40 (DIN EN 1092-1)			
9	2" 150# (ASME B16.5)					7	DN100 PN10/16 (DIN EN 1092-1)			
A	2" 300# (ASME B16.5)					8	DN100 PN25/40 (DIN EN 1092-1)			
B	2" 600# (ASME B16.5)					X	3" 900# (ASME B16.5)			
1	3" 150 # (ASME B16.5)					Z	User's specifications			
2	3" 300# (ASME B16.5)									
CODE	Type and Material Flange									
2	316L SST Fixed Flange					D	Duplex (UNS 31803/32205)			
3	Hastelloy C276 Fixed Flange					S	Super Duplex (UNS 32750/32760)			
						Z	User's specifications			
CODE	Extension Length									
0	0 mm (0")					3	150 mm (6")			
1	50 mm (2")					4	200 mm (8")			
2	100 mm (4")					Z	User's specifications			
CODE	Diaphragm Material/Extension (Process Connection)									
1	316 L SST / 316 SST					5	Titanium / 316 SST (3)			
2	Hastelloy C276 / 316 SST					L	316L SST with Halar Lining			
3	Monel 400 / 316 SST (4)					S	Super Duplex (UNS 32750/32760)			
4	Tantalum / 316 SST (3)					Z	User's specifications			
CODE	Fill Fluid (Process Connection)									
S	Silicone DC-200/20 Oil (1)					H	Halocarbon 4.2 Oil (5)			
F	Inert Fluorolube MO-10 Oil (2)(4)					N	Propylene Glicol (Neobee) Oil			
D	Silicone DC-704 Oil (1)					T	Syltherm 800 Oil			
K	Krytox Oil (5)					Z	User's specifications			
CODE	Lower Housing Material									
0	Without Lower Housing					4	Duplex (UNS 31803/32205)			
1	316L SST					5	304L SST			
2	Hastelloy C276					Z	User's specifications			
3	Super Duplex (UNS 32750/32760)									
CODE	Gasket Material									
0	Without Gasket					T	Teflon (PTFE)			
G	Grafoil (Flexible Lead)					Z	User's specifications			
209-0241-L	2	1	1	6	0	1	S	1	0	Typical Model Number

209-0241-L 2 1 1 6 0 1 S 1 0 Typical Model Number

Optional Items

Special Procedure	C0 - Standard C1 – Cleaning for use in oxygen/hydrogen peroxide/chlorine.
Flange Face	Q0 – Raised Face – RF Q1 – Flat Face - FF Q2 – For sealing ring - RTJ
Lower Housing Connection	U0 – With 1 1/4" NPT Flush Connection (if supplied with gasket) U1 – With 2 Flush 1/4" NPT Connections at 180° U3 – With 2 1/2" - 14 NPT Flush Connections at 180° (with plug) U4 – Without Flush Connections

NOTES

- (1) Silicone Oils not recommendations for Oxygen (O₂) or Chlorine service.
- (2) Not applicable for vacuum service.
- (3) Attention, check corrosion rate for the process, tantalum, and Titanium plate 0.1 mm, AISI 316L extension 3 to 6mm.
- (4) Fluorolube fill fluid is not available for Monel diaphragm.
- (5) Inert Fluid: Safe for oxygen service.

Isolation Test on Equipment Housings

1. Power off the equipment in the field, remove its back cover and disconnect all field cables from the transmitter terminal block, isolating them safely.
2. It is not necessary to remove the main board and display.
3. Jumper (connect) the power terminals (positive and negative) with the cable coming from the Megohmmeter (megger).
4. Configure the megohmmeter for 500 Vdc scale and check the isolation between the housing and the cable that short-circuits all the terminals.

ATTENTION



Never test with a voltage greater than 500 Vdc.

5. The value obtained must be greater than or equal to $2G\Omega$ and the voltage application time must be at least 1 second and at most 5 seconds.
6. If the value obtained by the megohmmeter is below $2G\Omega$, the possibility of moisture entering the electrical connection compartment must be analyzed.
7. It is possible to loosen the two screws that secure the terminal block to the housing and carry out a superficial cleaning and dry the surface well. Afterwards, the isolation can be tested again.
8. If the isolation test still shows that the isolation has been compromised, the housing must be replaced and sent to Nova Smar S.A. for analysis and retrieval.

IMPORTANT

- a) For equipment certified Exd and Exi (Explosion Proof and Intrinsically Safe) the standards advise not to carry out repairs in the field of the housing electronic components, only at Nova Smar S.A.
- b) In normal use, the housing components must not cause failures that affect its isolation. For this reason, it is important to verify whether there are traces of water entering the housing and, if so, an assessment of the electrical installations and the sealing rings of the covers must be carried out. Nova Smar S.A. has a team ready to support the assessment of facilities, if necessary.

Section 6

TECHNICAL CHARACTERISTICS

Functional Specifications																																																													
Process Fluid	Liquid, gas, or steam.																																																												
Output Signal and Protocol Communication	Two-wire, 4-20 mA controlled according to NAMUR NE43 Specification and with superimposed digital communication (HART Protocol). See the figure below.																																																												
Power Supply	12 to 45 Vdc.																																																												
Load Limitation	<p>The graph illustrates the load limitation for the transmitter. The y-axis represents Load in Ohms (0 to 1650), and the x-axis represents Power Supply in Volts (12 to 45). Two operating areas are defined: a shaded gray area for '4-20mA AND DIGITAL COMMUNICATION' and a white area for '4-20mA only'. The shaded area starts at 12V and 0Ω, rising linearly to 45V and 1650Ω. The white area starts at 12V and 0Ω, rising linearly to 20V and 250Ω, then remains constant at 250Ω up to 45V.</p>																																																												
Indicator	Optional 4½-digit numerical and 5-character alphanumerical LCD indicator.																																																												
Hazardous Area Certifications	See appendix A																																																												
European Directive Information	See appendix A																																																												
Temperature Limits	<table><tr><th colspan="6">Temperature Limits</th></tr><tr><td rowspan="2">Ambient</td><td>-40</td><td>to</td><td>85 °C</td><td>-40</td><td>to 185 °F</td></tr><tr><td>-15</td><td>to</td><td>85 °C</td><td>-59</td><td>to 185 °F</td></tr><tr><td rowspan="5">Process</td><td>-40</td><td>to</td><td>100 °C</td><td>-40</td><td>to 212 °F</td></tr><tr><td>0</td><td>to</td><td>85 °C</td><td>32</td><td>to 185 °F</td></tr><tr><td>-25</td><td>to</td><td>85 °C</td><td>-13</td><td>to 185 °F</td></tr><tr><td>-40</td><td>to</td><td>150 °C</td><td>-40</td><td>to 302 °F</td></tr><tr><td>-15</td><td>to</td><td>150 °C</td><td>-59</td><td>to 302 °F</td></tr><tr><td>Storage</td><td>40</td><td>to</td><td>100 °C</td><td>-40</td><td>to 212 °F</td></tr><tr><td rowspan="2">Digital Display</td><td>-20</td><td>to</td><td>80 °C</td><td>-4</td><td>to 176 °F</td></tr><tr><td>-40</td><td>to</td><td>85 °C</td><td>-40</td><td>to 185 °F</td></tr></table>	Temperature Limits						Ambient	-40	to	85 °C	-40	to 185 °F	-15	to	85 °C	-59	to 185 °F	Process	-40	to	100 °C	-40	to 212 °F	0	to	85 °C	32	to 185 °F	-25	to	85 °C	-13	to 185 °F	-40	to	150 °C	-40	to 302 °F	-15	to	150 °C	-59	to 302 °F	Storage	40	to	100 °C	-40	to 212 °F	Digital Display	-20	to	80 °C	-4	to 176 °F	-40	to	85 °C	-40	to 185 °F
Temperature Limits																																																													
Ambient	-40	to	85 °C	-40	to 185 °F																																																								
	-15	to	85 °C	-59	to 185 °F																																																								
Process	-40	to	100 °C	-40	to 212 °F																																																								
	0	to	85 °C	32	to 185 °F																																																								
	-25	to	85 °C	-13	to 185 °F																																																								
	-40	to	150 °C	-40	to 302 °F																																																								
	-15	to	150 °C	-59	to 302 °F																																																								
Storage	40	to	100 °C	-40	to 212 °F																																																								
Digital Display	-20	to	80 °C	-4	to 176 °F																																																								
	-40	to	85 °C	-40	to 185 °F																																																								
Turn-on Time	Performs within specifications in less than 5 seconds after power is applied to the transmitter.																																																												
Communication and Zero and Span Adjustments	Through digital communication (HART protocol), using configuration software. It can also be configured through local adjustment, only if the equipment is provided with a display.																																																												
Failure Alarm	In case of sensor or circuit failure, the self-diagnostics drives the output to 3.6 or 21.0 mA, according to the user's choice.																																																												
Volumetric Displacement	Less than 0.15 cm ³ (0.01 in ³)																																																												

14 MPa (138 bar) for ranges 2, 3, 4.
31 MPa (310 bar) for range 5.

Overpressures above will not damage the transmitter, but a new calibration may be necessary.

WARNING

It is described here only the maximum pressures of the materials referenced in each rule, it cannot be manufactured on request.

Temperatures above 150°C are not available in standard models.

PRESSURES TABLE FOR SEAL AND LEVEL FLANGES DIN EN 1092-1 2018 STANDARD

Material Group	Pressure Class	Maximum Temperature Allowed						
		RT*	100	150	200	250	300	350
		Maximum Pressure Allowed (bar)						
10E0 AISI 304/304L	PN 16	16	13.7	12.3	11.2	10.4	9,6	9.2
	PN 25	25	21.5	19.2	17.5	16.3	15.1	14.4
	PN 40	40	34.4	30.8	28	26	24.1	23
	PN 63	63	54,3	48,6	44,1	41,1	38,1	36,3
	PN 100	100	86.1	77.1	70	65.2	60.4	57.6
	PN 160	160	137.9	123.4	112	104.3	96.7	92.1
	PN 250	250	215.4	192.8	175	163	151.1	144

Material Group	Pressure Class	Maximum Temperature Allowed						
		RT*	100	150	200	250	300	350
		Maximum Pressure Allowed (bar)						
14E0 AISI 316/316L	PN 16	16	16	14.5	13.4	12.7	11.8	11.4
	PN 25	25	25	22.7	21	19.8	18.5	17.8
	PN 40	40	40	36.3	33.7	31.8	29.7	28.5
	PN 63	63	63	57.3	53.1	50.1	46.8	45
	PN 100	100	100	90.9	84.2	79.5	74.2	71.4
	PN 160	160	160	145.5	134.8	127.2	118.8	114.2
	PN 250	250	250	227.3	210.7	198.8	185.7	178.5

Material Group	Pressure Class	Maximum Temperature Allowed						
		RT*	100	150	200	250	300	350
		Maximum Pressure Allowed (bar)						
16E0 1.4410 Super Duplex 1.4462 Duplex	PN 16	16	16	16	16	16	-	-
	PN 25	25	25	25	25	25	-	-
	PN 40	40	40	40	40	40	-	-
	PN 63	63	63	63	63	63	-	-
	PN 100	100	100	100	100	100	-	-
	PN 160	160	160	160	160	160	-	-
	PN 250	250	250	250	250	250	-	-

* RT = Reference Temperature (-10 to 50 °C)

PRESSURES TABLE FOR SEAL AND LEVEL FLANGES ASME B16.5 2020 STANDARD

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
Hastelloy C276	150	20	19.5	17.7	15.8	13.8	12.1	10.2	9.3	8.4
	300	51.7	51.7	51.5	50.3	48.3	46.3	42.9	41.4	40.3
	600	103.4	103.4	103	100.3	96.7	92.7	85.7	82.6	80.4
	1500	258.6	258.6	257.6	250.8	241.7	231.8	214.4	206.6	201.1
	2500	430.9	430.9	429.4	418.2	402.8	386.2	357.1	344.3	335.3

Overpressure Limits for Flanges

Overpressure Limits for Flanges (continuation)	<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="9">Maximum Temperature Allowed</th></tr><tr><th>-29 to 38</th><th>50</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>325</th><th>350</th></tr><tr><th colspan="9">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="5">S31803 Duplex S32750 Super Duplex</td><td>150</td><td>20</td><td>19.5</td><td>17.7</td><td>15.8</td><td>13.8</td><td>12.1</td><td>10.2</td><td>9.3</td><td>8.4</td></tr><tr><td>300</td><td>51.7</td><td>51.7</td><td>50.7</td><td>45.9</td><td>42.7</td><td>40.5</td><td>38.9</td><td>38.2</td><td>37.6</td></tr><tr><td>600</td><td>103.4</td><td>103.4</td><td>101.3</td><td>91.9</td><td>85.3</td><td>80.9</td><td>77.7</td><td>76.3</td><td>75.3</td></tr><tr><td>1500</td><td>258.6</td><td>258.6</td><td>253.3</td><td>229.6</td><td>213.3</td><td>202.3</td><td>194.3</td><td>190.8</td><td>188.2</td></tr><tr><td>2500</td><td>430.9</td><td>430.9</td><td>422.2</td><td>382.7</td><td>355.4</td><td>337.2</td><td>323.8</td><td>318</td><td>313.7</td></tr></table>	Material Group	Pressure Class	Maximum Temperature Allowed									-29 to 38	50	100	150	200	250	300	325	350	Maximum Pressure Allowed (bar)									S31803 Duplex S32750 Super Duplex	150	20	19.5	17.7	15.8	13.8	12.1	10.2	9.3	8.4	300	51.7	51.7	50.7	45.9	42.7	40.5	38.9	38.2	37.6	600	103.4	103.4	101.3	91.9	85.3	80.9	77.7	76.3	75.3	1500	258.6	258.6	253.3	229.6	213.3	202.3	194.3	190.8	188.2	2500	430.9	430.9	422.2	382.7	355.4	337.2	323.8	318	313.7
				Material Group	Pressure Class	Maximum Temperature Allowed																																																																											
						-29 to 38	50	100	150	200	250	300	325	350																																																																			
		Maximum Pressure Allowed (bar)																																																																															
		S31803 Duplex S32750 Super Duplex	150	20	19.5	17.7	15.8	13.8	12.1	10.2	9.3	8.4																																																																					
			300	51.7	51.7	50.7	45.9	42.7	40.5	38.9	38.2	37.6																																																																					
			600	103.4	103.4	101.3	91.9	85.3	80.9	77.7	76.3	75.3																																																																					
			1500	258.6	258.6	253.3	229.6	213.3	202.3	194.3	190.8	188.2																																																																					
			2500	430.9	430.9	422.2	382.7	355.4	337.2	323.8	318	313.7																																																																					
		<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="9">Maximum Temperature Allowed</th></tr><tr><th>-29 to 38</th><th>50</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>325</th><th>350</th></tr><tr><th colspan="9">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="5">AISI316L</td><td>150</td><td>15.9</td><td>15.3</td><td>13.3</td><td>12</td><td>11.2</td><td>10.5</td><td>10</td><td>9.3</td><td>8.4</td></tr><tr><td>300</td><td>41.4</td><td>40</td><td>34.8</td><td>31.4</td><td>29.2</td><td>27.5</td><td>26.1</td><td>25.5</td><td>25.1</td></tr><tr><td>600</td><td>82.7</td><td>80</td><td>69.6</td><td>62.8</td><td>58.3</td><td>54.9</td><td>52.1</td><td>51</td><td>50.1</td></tr><tr><td>1500</td><td>206.8</td><td>200.1</td><td>173.9</td><td>157</td><td>145.8</td><td>137.3</td><td>130.3</td><td>127.4</td><td>125.4</td></tr><tr><td>2500</td><td>344.7</td><td>333.5</td><td>289.9</td><td>261.6</td><td>243</td><td>228.9</td><td>217.2</td><td>212.3</td><td>208.9</td></tr></table>	Material Group	Pressure Class	Maximum Temperature Allowed									-29 to 38	50	100	150	200	250	300	325	350	Maximum Pressure Allowed (bar)									AISI316L	150	15.9	15.3	13.3	12	11.2	10.5	10	9.3	8.4	300	41.4	40	34.8	31.4	29.2	27.5	26.1	25.5	25.1	600	82.7	80	69.6	62.8	58.3	54.9	52.1	51	50.1	1500	206.8	200.1	173.9	157	145.8	137.3	130.3	127.4	125.4	2500	344.7	333.5	289.9	261.6	243	228.9	217.2	212.3
Material Group	Pressure Class				Maximum Temperature Allowed																																																																												
					-29 to 38	50	100	150	200	250	300	325	350																																																																				
			Maximum Pressure Allowed (bar)																																																																														
AISI316L	150		15.9	15.3	13.3	12	11.2	10.5	10	9.3	8.4																																																																						
	300		41.4	40	34.8	31.4	29.2	27.5	26.1	25.5	25.1																																																																						
	600		82.7	80	69.6	62.8	58.3	54.9	52.1	51	50.1																																																																						
	1500		206.8	200.1	173.9	157	145.8	137.3	130.3	127.4	125.4																																																																						
	2500		344.7	333.5	289.9	261.6	243	228.9	217.2	212.3	208.9																																																																						
<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="9">Maximum Temperature Allowed</th></tr><tr><th>-29 to 38</th><th>50</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>325</th><th>350</th></tr><tr><th colspan="9">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="5">AISI316</td><td>150</td><td>19</td><td>18.4</td><td>16.2</td><td>14.8</td><td>13.7</td><td>12.1</td><td>10.2</td><td>9.3</td><td>8.4</td></tr><tr><td>300</td><td>49.6</td><td>48.1</td><td>42.2</td><td>38.5</td><td>35.7</td><td>33.4</td><td>31.6</td><td>30.9</td><td>30.3</td></tr><tr><td>600</td><td>99.3</td><td>96.2</td><td>84.4</td><td>77</td><td>71.3</td><td>66.8</td><td>63.2</td><td>61.8</td><td>60.7</td></tr><tr><td>1500</td><td>248.2</td><td>240.6</td><td>211</td><td>192.5</td><td>178.3</td><td>166.9</td><td>158.1</td><td>154.4</td><td>151.6</td></tr><tr><td>2500</td><td>413.7</td><td>400.9</td><td>351.6</td><td>320.8</td><td>297.2</td><td>278.1</td><td>263.5</td><td>257.4</td><td>252.7</td></tr></table>	Material Group		Pressure Class	Maximum Temperature Allowed									-29 to 38	50	100	150	200	250	300	325	350	Maximum Pressure Allowed (bar)									AISI316	150	19	18.4	16.2	14.8	13.7	12.1	10.2	9.3	8.4	300	49.6	48.1	42.2	38.5	35.7	33.4	31.6	30.9	30.3	600	99.3	96.2	84.4	77	71.3	66.8	63.2	61.8	60.7	1500	248.2	240.6	211	192.5	178.3	166.9	158.1	154.4	151.6	2500	413.7	400.9	351.6	320.8	297.2	278.1	263.5	257.4	252.7
		Material Group		Pressure Class	Maximum Temperature Allowed																																																																												
					-29 to 38	50	100	150	200	250	300	325	350																																																																				
	Maximum Pressure Allowed (bar)																																																																																
	AISI316	150	19	18.4	16.2	14.8	13.7	12.1	10.2	9.3	8.4																																																																						
		300	49.6	48.1	42.2	38.5	35.7	33.4	31.6	30.9	30.3																																																																						
		600	99.3	96.2	84.4	77	71.3	66.8	63.2	61.8	60.7																																																																						
		1500	248.2	240.6	211	192.5	178.3	166.9	158.1	154.4	151.6																																																																						
		2500	413.7	400.9	351.6	320.8	297.2	278.1	263.5	257.4	252.7																																																																						
	Pressure Limits for Sanitary Connections	PRESSURES TABLE FOR TRICLAMP CONNECTIONS BS4825 P3																																																																															
<table><tr><th rowspan="3">DN</th><th colspan="2">PN normal</th><th colspan="2">HP (High pressure)</th></tr><tr><th>20°C (68°F)</th><th>120°C (248°F)</th><th>20°C (68°F)</th><th>120°C (248°F)</th></tr><tr><th colspan="4">Maximum Temperature Allowed (bar)</th></tr><tr><td>1.1/2"</td><td>34</td><td>20</td><td>100</td><td>60</td></tr><tr><td>2" – DN50</td><td>28</td><td>17</td><td>70</td><td>42</td></tr><tr><td>3"</td><td>22</td><td>13</td><td>70</td><td>42</td></tr></table>		DN	PN normal		HP (High pressure)		20°C (68°F)	120°C (248°F)	20°C (68°F)	120°C (248°F)	Maximum Temperature Allowed (bar)				1.1/2"	34	20	100	60	2" – DN50	28	17	70	42	3"	22	13	70	42																																																				
			DN	PN normal		HP (High pressure)																																																																											
				20°C (68°F)	120°C (248°F)	20°C (68°F)	120°C (248°F)																																																																										
		Maximum Temperature Allowed (bar)																																																																															
		1.1/2"	34	20	100	60																																																																											
2" – DN50		28	17	70	42																																																																												
3"		22	13	70	42																																																																												
PRESSURES TABLE FOR THREADED CONNECTIONS																																																																																	
<table><tr><th colspan="5">Sanitary Threads – Temperature Limits</th></tr><tr><th rowspan="4">DN</th><th>RJT</th><th>IDF</th><th>SMS</th><th>DIN</th></tr><tr><td>120°C (248°F)</td><td>120°C (248°F)</td><td>120°C (248°F)</td><td>120°C (248°F)</td></tr><tr><td>BS4825 P5</td><td>BS4825 P4</td><td>SMS1145</td><td>DIN11851</td></tr><tr><th colspan="4">Maximum Temperature Allowed (bar)</th></tr><tr><td>DN25</td><td>--</td><td>--</td><td>--</td><td>40</td></tr><tr><td>1.1/2"-DN40</td><td>10</td><td>16</td><td>40</td><td>40</td></tr><tr><td>2-DN50</td><td>10</td><td>16</td><td>25</td><td>25</td></tr><tr><td>3-DN80</td><td>10</td><td>16</td><td>25</td><td>25</td></tr></table>		Sanitary Threads – Temperature Limits					DN	RJT	IDF	SMS	DIN	120°C (248°F)	120°C (248°F)	120°C (248°F)	120°C (248°F)	BS4825 P5	BS4825 P4	SMS1145	DIN11851	Maximum Temperature Allowed (bar)				DN25	--	--	--	40	1.1/2"-DN40	10	16	40	40	2-DN50	10	16	25	25	3-DN80	10	16	25	25																																						
	Sanitary Threads – Temperature Limits																																																																																
	DN	RJT	IDF	SMS	DIN																																																																												
		120°C (248°F)	120°C (248°F)	120°C (248°F)	120°C (248°F)																																																																												
		BS4825 P5	BS4825 P4	SMS1145	DIN11851																																																																												
		Maximum Temperature Allowed (bar)																																																																															
	DN25	--	--	--	40																																																																												
	1.1/2"-DN40	10	16	40	40																																																																												
	2-DN50	10	16	25	25																																																																												
3-DN80	10	16	25	25																																																																													
Damping Adjustment	0 to 128 seconds in addition to intrinsic sensor response time (0.2 s) (via digital communication).																																																																																
Humidity Limits	0 to 100% RH.																																																																																

Performance Specifications	
Reference Conditions	Range starting at zero, temperature 25 °C (77 °F), atmospheric pressure, power supply of 24 Vdc, silicone oil fill fluid, isolating diaphragms in 316L SS and digital trim equal to lower and upper range values.
Accuracy	<p>For ranges 2, 3, 4 and 5: $\pm 0.075\%$ of span (for span ≥ 0.1 URL) $\pm [0.0375 + 0.00375 \text{ URL/SPAN}] \%$ of span (for span < 0.1 URL)</p> <p>For Level Transmitter: $\pm 0.08 \%$ of span (for span ≥ 0.1 URL) $\pm [0.0504 + 0.0047 \text{ URL/span}] \%$ of span (for span < 0.1 URL)</p> <p>For Insertion Transmitter: $\pm 0.2\%$ of span</p> <p>Linearity effects, hysteresis and repeatability are included.</p>
Stability	$\pm 0.15\%$ of URL for 5 years
Temperature Effect	$\pm [0.02 \text{ URL} + 0.06\% \text{ of span}]$, per 20 °C (68 °F) for span ≥ 0.2 URL $\pm [0.023 \text{ URL} + 0.045\% \text{ of span}]$, per 20°C (68 °F) for span < 0.2 URL <p>For Level Transmitter: 6 mmH₂O per 20°C for 4" and DN100. 17 mmH₂O per 20°C for 3" and DN80.</p>
Power Supply Effect	$\pm 0.005\%$ of calibrated span per volt.
Mounting Position Effect	Zero shift of up to 250 Pa (1 inH ₂ O), which can be calibrated out. No span effect.
Electromagnetic Interference Effect	Designed according to IEC61326-1:2006, IEC61326-2-3:2006, IEC61000-6-4:2006, IEC61000-6-2:2005 standards.

Physical Specifications	
Electrical Connection	1/2 - 14 NPT, PG 13.5 or M20 x 1.5.
Process Connection	See options in ordering code.
Wetted Parts	Isolating Diaphragms and Process Connection 316L SST or Hastelloy C276.
Nonwetted Parts	<p>Electronic Housing Aluminum or 316 SST with polyester or epoxy painting or 316 SST without painting housing. Complies with NEMA 4X/6P, IP66 or IP66W*, IP68 or IP68W*. <i>*The IP68 sealing test (immersion) was performed at 10m for 24 hours.</i> <i>The W condition or 4X was tested for 200h and refer to saline atmosphere.</i></p> <p>Level Flange (LD291L) 316L SST, Hastelloy C276, Duplex (UNS 31803/32205), and Super Duplex (UNS 32750/32760)</p> <p>Fill Fluid Silicone DC-200/20, Silicone - DC704, Fluorolube MO-10, Krytox, Halocarbon 4.2, Propylene Glycol (Neobee), and Syltherm 800 oils.</p> <p>Cover O-Rings Buna N.</p> <p>Mounting Bracket Optional universal mounting bracket for surface or vertical/horizontal 2" - pipe (DN50) Carbon Steel with polyester painting or 316 SST. Accessories (bolts, nuts, washers, and U-clamp) in Carbon Steel or 316 SST.</p> <p>Identification Plate 316 SST.</p>
Approximate Weights	< 2.0kg (4 lb): aluminum housing without mounting bracket.

Ordering Code

MODEL	GAGE PRESSURE TRANSMITTERS									
LD291M	4-20 mA + HART®									
CODE	Type	Range Limits			Unit					
		Min.	Max.							
2	Gage	12.5	500	mbar						
3	Gage	-1000	2500	mbar						
4	Gage	-1	25	bar						
5	Gage	-1	250	bar						
CODE	Diaphragm Material and Fill Fluid									
1	316L SST - Silicone Oil									
2	316L SST – Inert Fluorolube Oil (2)									
3	Hastelloy C276 - Silicone Oil (1)									
4	Hastelloy C276 – Inert Fluorolube Oil (1) (2)									
D	316L SST – Inert Krytox Oil (2)									
E	Hastelloy C276 – Inert Krytox Oil (1)(2)									
Q	316L SST – Inert Halocarbon 4.2 Oil (2)									
R	Hastelloy C276 – Inert Halocarbon 4.2 Oil (1)(2)									
CODE	Process Connections Material									
H	Hastelloy C276 (1)									
I	316L SST									
Z	User's specifications									
CODE	Local Indicator									
0	Without Indicator			1	With Indicator					
CODE	Process Connections									
1	1/2 - 14 NPT - Female			R	Remote Seal					
2	1" BSP – Male			U	1/2 BSP – Male					
3	1" BSP - Female			V	Valve Manifold integrated to the transmitter					
A	M20 X 1,5 Male			X	1" NPT Sealed (SS316 / DC200-20)					
B	1/4 - 18 NPT Female			Y	1.1/2 NPT Sealed Male (316L SST					
C	1/4 - 18 NPT Male			Z	Diaphragm Silicone DC200/20 Fluid					
G	DIN EN 837-1 G1/2B Male (3)				User's specifications					
H	DIN EN 837-1 G1/2B HP Male (3)									
M	1/2 - 14 NPT - Male									
CODE	Electrical Connections									
0	1/2 - 14 NPT (4)			A	M20 X 1.5 (4)					
1	1/2 - 14 NPT X 3/4 NPT (316 SST) - with adapter (5)			B	PG 13.5 DIN (6)					
2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (6)			Z	User's specifications					
3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (6)									
CODE	Mounting Bracket									
0	Without Mounting Bracket									
1	Carbon Steel Mounting Bracket with Carbon Steel accessories									
2	316 SST Mounting Bracket with 316 SST accessories									
7	Carbon Steel Mounting Bracket with 316 SST accessories									
CODE	Continues Next Page									
LD291M	2	1	I	1	1	A	0	*	Typical Model Number	

Typical Model Number

* Leave blank for no optional items.

MODEL	GAGE PRESSURE TRANSMITTER (CONTINUATION)									
LD291M	CODE	Output Signal								
	G0	4-20 mA								
	CODE	Housing Material								
	H0	Aluminum (IP/TYPE)				H4	316 SST for Saline Atmosphere (IPW/TYPEX)			
	H1	316 SST (IP/TYPE)				H3	Copper Free Aluminum (IPW/TYPEX)			
	H2	Aluminum for Saline Atmosphere (IPW/TYPEX)								
	CODE	Identification Plate								
	I1	FM: XP, IS, NI, DI				IC	IECEX MINING			
	I4	ATEX (EX-I, EX-D) GAS				IF	IECEX			
	I5	INMETRO (EX-D, EX-I) GAS				IJ	ATEX (EX-D) GAS			
	I6	Without Certification				IO	INMETRO (EX-T) DUST			
	I7	ATEX (EX-I) MINING								
	CODE	Memory Configuration								
	M1	Without PID				M5	Calibration with 10 points			
	M4	Calibration with reading on the top and bottom (Hysteresis)				M6	Special Acquisition Method Disabled			
	CODE	Painting								
	P0	Munsell N 6,5 Gray				P8	Without Painting			
	P2	Blue Safety Epoxy – Atmospheric Zone - Petrobras N1021				P9	Blue Safety Epoxy			
	P3	Polyester Black								
	CODE	Manufacturing Standard								
	S0	SMAR								
	CODE	Display Unit								
	Y0	Percentage				Y4	Display 2: Current (mA)			
	Y1	Display 1: Current (mA)				Y5	Display 2: Pressure (Eng. Unit)			
	Y2	Display 1: Pressure (Eng. Unit)				Y6	Display 2: Temperature (°C)			
	Y3	Display 1: Temperature (°C)				YU	User's specification (7)			
	CODE	Tag Plate								
	J0	With TAG				J2	User's specification			
	J1	Without TAG								
LD291M	G0	H0	I1	M1	P0	S0	Y0	J0	Typical Model Number	

* Leave blank for no special procedure

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)
Special Characteristics	ZZ – User Specification
Burnout	BD – Down scale BU – Up scale

NOTES

- (1) Meets NACE material recommendation per MR-01-75.
- (2) Inert fluid: safe for oxygen service.
- (3) Standard DIN16288 was replaced by DIN EN 837-1.
- (4) Certification EX-d for FM / ATEX / IECEx / INMETRO
- (5) Certification EX-d for INMETRO.
- (6) Not certified for use in hazardous locations.
- (7) Limited values to 4 ½ digits; limited units to 5 characters.

MODEL	SANITARY PRESSURE TRANSMITTERS																	
LD291S	4-20 mA + HART®																	
CODE	Type	Range Limits			Range Limits			Unit										
		Min.	Max.	Unit	Min.	Max.	Unit											
2	Sanitary	12.5	500	mbar	5.02	201.09	inH ₂ O											
3	Sanitary	62.5	2500	mbar	25.13	1005.45	inH ₂ O											
4	Sanitary	0.625	25	bar	157.10	10054.50	inH ₂ O											
5	Sanitary	6.25	55.15	bar	90.65	799.89	psi											
CODE	Diaphragm Material																	
I	316L SST																	
CODE	Fill Fluid																	
S	Silicone DC-200/20 Oil																	
CODE	Local Indicator																	
0	Without Indicator																	
1	With Indicator																	
CODE	Process Connections																	
F	Tri-Clamp – 1.1/2"						7	Thread SMS – 2" – with extension										
Q	Tri-Clamp – 1.1/2" HP						C	Thread RJT – 2"										
D	Tri-Clamp – 2"						5	Thread RJT – 2" – with extension										
P	Tri-Clamp – 2" HP						B	Thread IDF – 2"										
6	Tri-Clamp – 2" – with extension						4	Thread IDF – 2" – with extension										
N	Tri-Clamp – 2" HP – with extension						8	Thread DN25 – DIN 11851 – with extension										
G	Tri-Clamp – 3"						H	Thread DN40 – DIN 11851										
H	DN40 - DIN 11851						9	Thread DN40 – DIN 11851 – with extension										
A	Tri-Clamp DN50 DIN11851 with extension						U	Thread DN50 – DIN 11851										
O	Thread SMS – 2" – with extension						V	Thread DN50 – DIN 11851 – with extension										
R	Tri-Clamp - 3" HP						Y	Special option connection										
S	Thread SMS – 1.1/2"						Z	User's specifications										
E	Thread SMS – 2"																	
CODE	Electrical Connections																	
0	1/2 - 14 NPT (1)						A	M20 X 1.5 (1)										
1	1/2 - 14 NPT X 3/4 NPT (316 SST) - with adapter (2)						B	PG 13.5 DIN (3)										
2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (3)						Z	User's specifications										
3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (3)																	
CODE	O'Ring Material																	
0	Without O'Ring						V	Viton										
B	Buna-N																	
T	Teflon																	
CODE	Tank adapter																	
0	Without adapter																	
1	With 316 SST adapter																	
CODE	Tri-Clamp Connection																	
0	Without Clamp																	
2	With 304 SST Clamp																	
CODE	Sanitary Diaphragm Material																	
H	Hastelloy C276 (4)																	
I	SST 316L																	
CODE	Fill Fluid Sanitary Connection																	
N	Propylene glycol (neobee) max.: 200 °C																	
S	Silicone Oil DC-200/20 max. 150 °C																	
CODE	Continues Next Page																	
LD291S	2	I	N	1	D	0	V	1	2	I	N	*	Typical Model Number					

LD291S 2 I N 1 D 0 V 1 2 I N * Typical Model Number

*Leave blank for no optional items.

MODEL	SANITARY PRESSURE TRANSMITTERS (CONTINUATION)										
LD291S	CODE	Output Signal									
	G0	4-20 mA									
		CODE	Housing Material								
		H0	Aluminum (IP/TYPE)					H3	316 SST for Saline Atmosphere (IPW/TYPEX) (3)		
		H1	316 SST (IP/TYPE)					H4	Copper Free Aluminum (IPW/TYPEX) (3)		
		H2	Aluminum for Saline Atmosphere (IPW/TYPEX) (3)								
		CODE	Identification Plate								
		I1	FM: XP, IS, NI, DI				IC	IECEX MINING			
		I4	EXAM (DMT): Ex-ia; NEMKO: Ex-d				IF	IECEX			
		I5	CEPEL: Ex-d, Ex-ia				IJ	NEMKO - EEX-D			
		I6	Without Certification				IO	CEPEL (Combustible Dust)			
		I7	EXAM (DMT) Grupo I, M1 Ex-ia				IR	TIBR CJSC - GOST RUSSIA: EX-D, EX-IA			
		CODE	Memory Configuration								
		M1	Without PID					M5	Calibration with 10 points		
		M4	Calibration with reading on the top and bottom (Hysteresis)					M6	Special Acquisition Method Disabled		
		CODE	Painting								
		P0	Munsell N 6,5 Gray								
		P2	Blue Safety Epoxy – Atmospheric Zone - Petrobras N1021								
		P3	Polyester Black								
		P8	Without Painting								
		P9	Blue Safety Base Epoxy – Electrostatic Painting								
		CODE	Manufacturing Standard								
		S0	SMAR								
		CODE	Display Unit								
		Y0	Percentage				Y4	Display 2: Current (mA)			
		Y1	Display 1: Current (mA)				Y5	Display 2: Pressure (Eng. Unit)			
		Y2	Display 1: Pressure (Eng. Unit)				Y6	Display 2: Temperature (°C)			
		Y3	Display 1: Temperature (°C)				YU	User's specification (5)			
		CODE	Tag Plate								
		J0	With TAG								
		J1	Without TAG								
		J2	User's specification								
		CODE	Process Connection and Material (High side)								
		K0	Without special connection								
		K2	Varivent 68								
LD291S	G0	H0	I1	M1	P0	S0	Y0	J0	K0	Typical Model Number	

LD291S G0 H0 I1 M1 P0 S0 Y0 J0 K0 Typical Model Number

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)
Burnout	BD – Down scale
	BU – Up scale

NOTES

- (1) Certification EX-d for FM / ATEX / IECEx / INMETRO
- (2) Certification EX-d for INMETRO
- (3) Not certified for use in hazardous locations
- (4) Meets NACE material recommendation per MR-01-75.
- (5) Limited values to 4 ½ digits; limited units to 5 characters.

MODEL	LEVEL FLANGED PRESSURE TRANSMITTER												
LD291L	4-20 mA + HART®												
CODE	Type	Range Limits		Unit	Range Limits		Unit						
		Min.	Max.		Min.	Max.							
2	Level	12.5	500	mbar	5.02	201.09	inH ₂ O						
3	Level	62.5	2500	mbar	25.13	1005.45	inH ₂ O						
4	Level	0.625	25	bar	157.10	10054.5	inH ₂ O						
5	Level	6.25	250	bar	90.65	3625.94	psi						
CODE	Diaphragm Material (Sensor) and Fill Fluid (Sensor)												
1	316L SST - Silicone Oil												
CODE	Local Indicator												
0	Without Indicator				1	With Digital Indicator							
CODE	Process Connection												
U	1" 150# (ASME B16.5) (9)					C	3" 600# (ASME B16.5)			F	3" 900# (ASME B16.5)		
V	1" 300# (ASME B16.5) (9)					3	4" 150# (ASME B16.5)			I	1" 1500# (ASME B16.5)		
W	1" 600# (ASME B16.5) (9)					4	4" 300# (ASME B16.5)			J	2" 1500# (ASME B16.5)		
O	1½" 150# (ASME B16.5) 1½"					D	4" 600# (ASME B16.5)						
P	300# (ASME B16.5)					5	DN25 PN 10/40						
Q	1½" 600# (ASME B16.5)					R	DN40 PN 10/10						
9	2" 150# (ASME B16.5)					E	DN50 PN10/40						
A	2" 300# (ASME B16.5)					6	DN80 PN25/40						
B	2" 600# (ASME B16.5)					7	DN100 PN10/16						
1	3" 150 # (ASME B16.5)					8	DN100 PN25/40						
2	3" 300# (ASME B16.5)					Z	User's specifications						
CODE	Electrical Connection												
0	1/2 - 14 NPT (1)						A	M20 X 1.5 (1)					
1	1/2 - 14 NPT X 3/4 NPT (AI316) - with adapter (2)						B	PG 13.5 DIN (3)					
2	1/2 - 14 NPT X 3/4 BSP (AI316) - with adapter (3)						Z	User's specifications					
3	1/2 - 14 NPT X 1/2 BSP (AI316) - with adapter (3)												
CODE	Type and Material Flange												
2	316L SST Integral Flange						S	Super Duplex (UNS 32750/32760)					
3	Hastelloy C276 Integral Flange						Z	Special – See notes					
D	Duplex (UNS 31803/32205)												
CODE	Extension Length												
0	0 mm (0")			2	100 mm (4")			4	200 mm (8")				
1	50 mm (2")			3	150 mm (6")			Z	User's specifications				
CODE	Diaphragm Material / Extension (Process Connection)												
1	316 L SST / 316 SST						B	Tantalum with Teflon Lining					
2	Hastelloy C276 / 316SST (4)						C	Hastelloy C276 with Teflon Lining					
3	Monel 400 / 316 SST						L	316L SST with Halar Lining					
4	Tantalum / 316 SST (7)						S	Super Duplex (UNS 32750/32760)					
5	Titanium / 316 SST (7)						Z	User's specifications					
6	316L SST with Teflon Lining												
CODE	Fill Fluid (Process Connection)												
S	Silicone DC-200/20 Oil						H	Halocarbon 4.2 Oil (5)					
F	Inert Fluorolube MO-10 Oil (5)(6)(8)						N	Propileno Glicol (Neobee) Oil					
D	Silicone DC-704 Oil						T	Syltherm 800 Oil					
K	Krytox Oil						Z	User's specifications					
CODE	Lower Housing Material												
0	Without Lower Housing												
1	316L SST												
2	Hastelloy C276												
3	Super Duplex (UNS 32750/32760)												
4	Duplex (UNS 31803)												
Z	User's specifications												
CODE	Gasket Material												
0	Without Gasket						T	Teflon (PTFE)					
G	Grafoil (Flexible Lead)						Z	User's specifications					
CODE	Continues Next Page												
LD291L	2	1	1	1	0	6	2	1	S	1	T	*	Typical Model Number

LD291L 2 1 1 1 0 6 2 1 S 1 T * Typical Model Number

*Leave it blank when there are not optional items.

MODEL	LEVEL FLANGED PRESSURE TRANSMITTER (CONTINUATION)											
LD291L	CODE	Output Signal										
	G0	4-20 mA										
	G1	0-20 mA										
	CODE	Housing Material										
	H0	Aluminum (IP/TYPE)										
	H1	316 SST (IP/TYPE)										
	H2	Aluminum for saline atmosphere (IPW/TYPEX)										
	H3	316 SST for saline atmosphere (IPW/TYPEX)										
	H4	Copper Free Aluminum (IPW/TYPEX)										
	CODE	Identification Plate										
	I1	FM: XP, IS, NI, DI					IC	IECEX MINING				
	I4	ATEX (EX-I, EX-D) GAS					IF	IECEX				
	I5	INMETRO (EX-D, EX-I) GAS					IJ	ATEX (EX-D) GAS				
	I6	Without Certification					IO	INMETRO (EX-T) DUST				
	I7	ATEX (EX-I) MINING										
	CODE	Memory Configuration										
	M0	With PID (Available and Disabled)					M6	Special Acquisition Method Disabled				
	M1	Without PID (PID unavailable)										
	CODE	Painting										
	P0	Gray Munsell N 6,5							P7	Beige Epoxy		
	P1	Safety Blue Epoxy – Immersion Condition-Petrobras N1021							P8	Without Painting		
	P2	Safety Blue Epoxy – Atmospheric Zone - Petrobras N1021							P9	Blue Safety Epoxy		
	P3	Black Polyester							PH	Special Painting		
	CODE	Manufacturing Standard										
S0	SMAR											
CODE	Display Unit											
Y0	Percentage					Y4	Display 2: Current (mA)					
Y1	Display 1: Current (mA)					Y5	Display 2: Pressure (Eng. Unit)					
Y2	Display 1: Pressure (Eng. Unit)					Y6	Display 2: Temperature (°C)					
Y3	Display 1: Temperature (°C)					YU	User's specification (7)					
CODE	Tag Plate											
J0	With TAG					J2	User's specification					
J1	Without TAG											
CODE	Flange Face											
Q0	Raised Face RF (ASME DIN)					Q2	Ring Joint Face (RTJ)					
Q1	Flat Face FF (ASME DIN)											
CODE	Lower Housing Connection											
U0	With 1 Flush Connection 1/4" NPT (if supplied with lower housing)											
U1	With 2 Flush connections 1/4NPT per 180°											
U3	With 2 Flush connections 1/2NPT per 180° (with cover)											
U4	Without flush connections											
U5	With 1 Flush Connection 1/2" NPT (with cover)											
CODE	Special Options											
ZZ	See notes											
LD291L	G0	H0	I1	M1	P0	S0	Y0	J0	Q0	U0	ZZ	Typical Model Number

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)										
	C2 - For vacuum service										
Burnout	BD – Down scale										
	BU – Up scale										

NOTES

- (1) Certification EX-d for FM / ATEX / IECEx / INMETRO
- (2) Certification EX-d for INMETRO
- (3) Not certified for use in hazardous locations.
- (4) Meets NACE material recommendation per MR-01-75.
- (5) Inert Fluid: Safe for oxygen service
- (6) Not applicable for vacuum service
- (7) Attention, check corrosion rate for the process, tantalum, and titanium plate 0.1 mm, AISI 316L extension 3 to 6mm
- (8) Fluorolube fill fluid is not available for Monel diaphragm.
- (9) Process connection 1" DN25 only available without extension.
- (11) Limited values to 4 1/2 digits; limited unit to 5 characters.

MODEL	PRESSURE TRANSMITTER WITH EXTENDED PROBE										
LD291I	4-20 mA										
	CODE	Type	Range Limits								
			Min.	Max.	Unit						
	2	Level	12.5	500	mbar						
		CODE	Diaphragm Material and Fill Fluid								
		1	316L SST – Silicon Oil								
		CODE	Local Indicator								
		0	Without Indicator								
		1	With Indicator								
		CODE	Fixing Transmitter								
		1	Bracket in L					Z	User's specification		
		2	Flanged Bracket								
		3	Tri-clamp 3"								
		CODE	Electrical Connection								
		0	1/2 - 14 NPT (1)					A	M20 X 1.5 (1)		
		1	1/2 - 14 NPT X 3/4 NPT (316 SST) – with adapter (2)					B	PG 13.5 DIN (3)		
		2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (3)								
		3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (3)								
		CODE	Probe Material/Diaphragm (Wetted Parts)								
		A	304L SST / 316L SST								
		H	304L SST / Hastelloy C276								
		I	316L SST / 316L SST								
		U	316L SST / Hastelloy C276								
		Z	User's specification								
		CODE	Probe Length								
		1	500 mm					6	1600 mm		
		2	630 mm					7	2000 mm		
		3	800 mm					8	2500 mm		
		4	1000 mm					9	3200 mm		
		5	1250 mm					Z	User's specification		
		CODE	Probe Fill Fluid								
		N	Propylene Glycol Oil (Neobee M20)								
		Z	Special – See notes								
		CODE	Continues Next Page								
LD291I	2	1	1	3	A	I	1	N	*	Typical Model Number	

Typical Model Number

*Leave blank for no optional items.

MODEL	PRESSURE TRANSMITTER WITH EXTENDED PROBE (CONTINUATION)										
LD291I	CODE	Output Signal									
	G0	4-20 mA									
	G1	0-20 mA									
	CODE	Housing Material									
	H0	Aluminum (IP/TYPE)					H3	316 SST for saline atmosphere (IPW/TYPEX)			
	H1	316 SST (IP/TYPE)					H4	Copper Free Aluminum (IPW/TYPEX)			
	H2	Aluminum for saline atmosphere (IPW/TYPEX)									
	CODE	Identification Plate									
	I1	FM: XP, IS, NI, DI				IC	IECEX MINING				
	I4	ATEX (EX-I, EX-D) GAS				IF	IECEX				
	I5	INMETRO (EX-D, EX-I) GAS				IJ	ATEX (EX-D) GAS				
	I6	Without Certification				IO	INMETRO (EX-T) DUST				
	I7	ATEX (EX-I) MINING									
	CODE	Painting									
	P0	Munsell N 6,5 Gray					P9	Blue Safety Epoxy			
	P2	Blue Safety N4845 (standard 1735 Petrobras)					PC	Blue Safety Polyester			
	P3	Black Polyester					PE	Green Munsell 5G 8/4 - Epoxy			
	P7	Beige Epoxy					PG	Orange Safety Epoxy			
	P8	Without Painting									
	CODE	Manufacturing Standard									
	S0	SMAR									
	CODE	Display Unit									
	Y0	Percentage					Y4	Current 2: Current (mA)			
	Y1	Current 1: Current (mA)					Y5	Current 2: Pressure (Eng. Unit)			
	Y2	Current 1: Pressure (Eng. Unit)					Y6	Current 2: Temperature (°C)			
	Y3	Current 1: Temperature (°C)					YU	User Specification (4)			
	CODE	Tag Plate									
	J0	With TAG					J2	User Specification			
	J1	Without TAG									
LD291I	G0	H0	I5	P0	S0	Y0	J0	Typical Model Number			

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)
Special Characteristics	ZZ – User Specification
Burnout	BD – Down scale BU – Up scale
Memory Configuration	M1 – Without PID (PID unavailable)

NOTES

- (1) Certification EX-d for FM / ATEX / IECEx / INMETRO
 (2) Certification EX-d for INMETRO
 (3) Not certified for use in hazardous locations.
 (4) Limited values to 4 1/2 digits; limited unit to 5 characters.

CERTIFICATIONS INFORMATION

European Directive Information

Consult www.Smar.com for the EC declarations of conformity and certificates.

Authorized representative/importer located within the Community:

Smar Europe BV De Oude Wereld 116 2408 TM Alphen aan den Rijn Netherlands

ATEX Directive 2014/34/EU - "Equipment for explosive atmospheres"

The EC-Type Examination Certificate is released by DNV Product Assurance AS (NB 2460) and DEKRA Testing and Certification GmbH (NB 0158).

Designated certification body that monitors manufacturing and released QAN (Quality Assurance Notification) is UL International Demko AS (NB 0539).

LVD Directive 2014/35/EU – "Low Voltage"

According to the LVD directive Annex II, electrical equipment for use in an explosive atmosphere is outside the scope of this directive.

According to IEC standard: IEC 61010-1 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements.

PED Directive 2014/68/EU - "Pressure Equipment"

This product is in compliance with Article 4 paragraph 3 of the Pressure Equipment Directive 2014/68/EU and was designed and manufactured in accordance with the sound engineering practice. This equipment cannot bear the CE marking related to PED compliance. However, the product bears the CE marking to indicate compliance with other applicable European Community Directives.

ROHS Directive 2011/65/EU - "Restriction of the use of certain hazardous substances in electrical and electronic equipment"

For the evaluation of the products the following standards were consulted: EN IEC 63000.

EMC Directive 2014/30/EU - "Electromagnetic Compatibility"

For products evaluation, the standard IEC 61326-1 were consulted and to comply with the EMC directive the installation must follow these special conditions:

Use shielded, twisted-pair cable for powering the instrument and signal wiring.

Keep the shield insulated at the instrument side, connecting the other one to the ground.

Hazardous locations general information

Ex Standards:

IEC 60079-0 General Requirements

IEC 60079-1 Flameproof Enclosures "d"

IEC 60079-7 Increased Safe "e"

IEC 60079-11 Intrinsic Safety "i"

IEC 60079-18 Encapsulation "m"

IEC 60079-26 Equipment with Separation Elements or combined Levels of Protection

IEC 60079-31 Equipment dust ignition protection by enclosure "t"

IEC 60529 Classification of degrees of protection provided by enclosures (IP Code)

IEC 60079-10 Classification of Hazardous Areas

IEC 60079-14 Electrical installation design, selection and erection

IEC 60079-17 Electrical Installations, Inspections and Maintenance

IEC 60079-19 Equipment repair, overhaul and reclamation

ISO/IEC 80079-34 Application of quality systems for equipment manufacture

Warning:

Explosions could result in death or serious injury, besides financial damage.

Installation of this instrument in hazardous areas must be in accordance with the local standards and type of protection. Before proceedings with installation make sure that the certificate parameters are in accordance with the classified hazardous area.

Maintenance and Repair

The instrument modification or replaced parts supplied by any other supplier than authorized representative of Smar is prohibited and will void the Certification.

Marking Label

The instrument is marked with type of protection options. The certification is valid only when the type of protection is indicated by the user. Once a particular type of protection is installed, do not reinstall it using any other type of protection.

Intrinsic Safety / Non Incendive application

Only connect the equipment with the "Intrinsic safety" protection type to a circuit intrinsically safe. If the equipment has already been used in circuits not intrinsically safe or if the electrical specifications have not been respected, the safety of the equipment is no longer guaranteed for "Intrinsic Safety" installations.

In hazardous areas with intrinsic safety or or non-incendive requirements, the circuit entity parameters and applicable installation procedures must be observed.

The instrument must be connected to a proper intrinsic safety barrier. Check the intrinsically safe parameters involving the barrier and equipment including the cable and connections. Associated apparatus ground bus shall be insulated from panels and mounting enclosures. Shield is optional, when using shielded cable, be sure to insulate the end not grounded.

Cable capacitance and inductance plus Ci and Li must be smaller than Co and Lo of the Associated Apparatus.

It is recommended do not remove the housing covers when powered on.

Explosionproof / Flameproof application

Only use Explosionproof/Flameproof certified Plugs, Adapters and Cable glands.

The electrical connections entries must be connected using a conduit with sealed unit or closed using metal cable gland or metal blanking plug with at least IP66.

Do not remove the housing covers when powered on.

Enclosure

The electronic housing and sensor threads installed in hazardous areas must have a minimum of 6 fully engaged threads.

The covers must be tightening with at least 8 turns, to avoid the penetration of humidity or corrosive gases, and until it touches the housing. Then, tighten more 1/3 turn (120°) to guarantee the sealing.

Lock the housing and covers using the locking screw.

The enclosure contains aluminum and is considered to present a potential risk of ignition by impact or friction.

Care must be taken during installation and use to prevent impact or friction.

Degree of Protection of enclosure (IP)

IPx8: Second numeral meaning continuous immersion in water under special condition defined as 10m for a period of 24 hours (Ref: IEC60529).

IPW/ TypeX: Supplementary letter W or X meaning special condition defined as saline environment tested in saturated solution of NaCl 5% w/w at 35°C for a period of 200 hours (Ref: NEMA 250/ IEC60529).

For enclosure with IP/IPW/TypeX applications, all NPT threads must apply a proper water-proof sealant (a non-hardening silicone group sealant is recommended).

Hazardous Locations Approvals

FM Approvals

FM20US0149X

XP Class I Division 1, Groups A, B, C, D

DIP Class II, III Division 1, Groups E, F, G

IS Class I, II, III Division 1, Groups A, B, C, D, E, F, G

NI Class I, Division 2, Groups A, B, C, D

T4A; Ta = -25°C < Ta < 60°C; Type 4, 4X, 6

Electrical parameters: 30Vdc

Entity Parameters/Nonincendive Field Wiring Parameters:

Supply terminals: Vmax = 30 V dc, Imax = 110 mA, Ci = 5nf, Li = 0

Overpressure Limits: 2000 psi for ranges 2, 3 and 4 and 3600 psi for range 5

Special conditions for safe use:

The enclosure contains aluminum and is considered to present a potential risk of ignition by impact or friction.

Care must be taken during installation and use to prevent impact or friction.

Drawing 38A-2075, 102A-1213, 102A-1336, 102A-1632, 102A-1633

ATEX DNV

Explosion Proof (PRESAFE 18 ATEX 12410X)

II 2 G Ex db IIC T6 Gb

Ta -20 °C to +60 °C

Options: IP66/68W or IP66/68

Special Conditions for Safe Use

Repairs of the flameproof joints must be made in compliance with the structural specifications provided by the manufacturer. Repairs must not be made on the basis of values specified in tables 1 and 2 of EN/IEC 60079-1.

The Essential Health and Safety Requirements are assured by compliance with:

EN IEC 60079-0:2018 General Requirements

EN 60079-1:2014 Flameproof Enclosures “d”

Drawing 102A-1457, 102A-1513, 102A-2147, 102A-2148

IECEX DNV GL

Explosion Proof (IECEX PRE 18.0031X)

Ex db IIC T6 Gb

Ta -20 °C to +60 °C

Options: IP66/68W or IP66/68

Special Conditions for Safe Use

Repairs of the flameproof joints must be made in compliance with the structural specifications provided by the manufacturer. Repairs must not be made on the basis of values specified in tables 1 and 2 of EN/IEC 60079-1.

The Essential Health and Safety Requirements are assured by compliance with:

IEC 60079-0:2017 General Requirements

IEC 60079-1:2014-06 Equipment protection by flameproof enclosures “d”

Drawing 102A-2105, 102A-2106, 102A-2182, 102A-2183

ATEX DEKRA

Intrinsic Safety (DMT 01 ATEX E 059)

Ex I M1 Ex ia I Ma

Ex II 1/2 G Ex ia IIC T4/T5/T6 Ga/Gb

Supply and signal circuit intended for the connection to an intrinsically safe 4-20 mA current loop

Ui = 28 Vdc, Ii = 93 mA, Ci ≤ 5 nF, Li = Neg

Ambient Temperature: -40°C ≤ Ta ≤ + 85°C

Maximum Permissible power:

Max. Ambient temperature Ta	Temperature Class	Power Pi
85°C	T4	700mW
75°C	T4	760mW
44°C	T5	760mW
50°C	T5	700mW
55°C	T5	650mW
60°C	T5	575mW
65°C	T5	500mW
70°C	T5	425mW
40°C	T6	575mW

The Essential Health and Safety Requirements are assured by compliance with:

EN 60079-0:2018 General Requirements

EN 60079-11:2012 Intrinsic Safety "i"

EN 60079-26:2015 Equipment with equipment protection level (EPL) Ga

Drawing 102A-1457, 102A-1513, 102A-2147, 102A-2148, 102A-1454, 102A-1510

IECEx DEKRA

Intrinsic Safety (IECEx BVS 19.0015)

Ex ia I Ma

Ex ia IIC T4/T5/T6 Ga/Gb

Supply and signal circuit intended for the connection to an intrinsically safe 4-20 mA current loop

Ui = 28 Vdc, Ii = 93 mA, Ci ≤ 5 nF, Li = Neg

Ambient Temperature: -40°C ≤ Ta ≤ + 85°C

Maximum Permissible power:

Max. Ambient temperature Ta	Temperature Class	Power Pi
85°C	T4	700 mW
50°C	T5	700 mW
55°C	T5	650 mW
60°C	T5	575 mW
65°C	T5	500 mW
70°C	T5	425 mW
40°C	T6	575 mW

The Essential Health and Safety Requirements are assured by compliance with:

IEC 60079-0:2017 General Requirements

IEC 60079-11:2011 Intrinsic Safety "i"

IEC 60079-26:2014 Equipment with equipment protection level (EPL) Ga

Drawing 102A-2105, 102A-2106, 102A-2136, 102A-2137, 102A-2182, 102A-2183

INMETRO NCC

Segurança Intrínseca (NCC 24.0161X)

Ex ia IIC T5 Ga

Ex ia IIIC T200 100 °C Da

Ui = 30 V Ii = 100 mA Pi = 0,7 W Ci = 6,40 nF Li = desp

Tamb: -20 °C a +50 °C

IP66 ou IP66W

Prova de Explosão (NCC 24.0164)

Ex db IIC T6 Ga/Gb

Ex tb IIIC T85 °C Da/Db

Tamb: -20 °C a +40 °C

IP66 ou IP66W

Observações:

O número do certificado é finalizado pela letra "X": Para indicar que para a versão do Transmissor de pressão, intrinsecamente seguro, modelos: LD290, LD291 e LD301 equipado com invólucro fabricado em liga de alumínio, somente pode ser instalado em localização que exigem o "EPL Ga", se durante a instalação for excluído o risco de ocorrer impacto ou fricção entre o invólucro e peças de ferro/aço.

O produto adicionalmente marcado com a letra suplementar "W" indica que o equipamento foi ensaiado em uma solução saturada a 5% de NaCl p/p, à 35 °C, pelo tempo de 200 h e foi aprovado para uso em atmosferas salinas,

condicionado à utilização de acessórios de instalação no mesmo material do equipamento e de bujões de aço inoxidável ASTM-A240, para fechamento das entradas roscadas não utilizadas.

Os planos de pintura P1 são permitidos apenas para equipamento fornecido com plaqueta de identificação com marcação para grupo de gás IIB.

O grau de proteção IP68 só é garantido se nas entradas roscadas de ½" NPT for utilizado vedante não endurecível à base de silicone.

O segundo numeral oito indica que o equipamento foi ensaiado para uma condição de submersão de dez metros por vinte e quatro horas. O acessório deve ser instalado em equipamentos com grau de proteção equivalente.

É responsabilidade do fabricante assegurar que todos os transformadores da placa analógica tenham sido submetidos com sucesso aos ensaios de rotina de 1500 V durante um minuto.

Este certificado é válido apenas para os produtos dos modelos avaliados. Qualquer modificação nos projetos, bem como a utilização de componentes ou materiais diferentes daqueles definidos pela documentação descritiva dos produtos, sem a prévia autorização, invalidará este certificado.

As atividades de instalação, inspeção, manutenção, reparo, revisão e recuperação dos equipamentos são de responsabilidade dos usuários e devem ser executadas de acordo com os requisitos das normas técnicas vigentes e com as recomendações do fabricante.

Normas Aplicáveis:

ABNT NBR IEC 60079-0:2020 Atmosferas explosivas - Parte 0: Equipamentos – Requisitos gerais

ABNT NBR IEC 60079-1:2016 Atmosferas explosivas - Parte 1: Proteção de equipamento por invólucro à prova de explosão "d"

ABNT NBR IEC 60079-11:2013 Atmosferas explosivas - Parte 11: Proteção de equipamento por segurança intrínseca "i"

ABNT NBR IEC 60079-26:2022 Atmosferas explosivas - Parte 26: Equipamentos com elementos de separação ou níveis de proteção combinados

ABNT NBR IEC 60079-31:2022 Atmosferas explosivas - Parte 31: Proteção de equipamentos contra ignição de poeira por invólucros "t"

ABNT NBR IEC 60529:2017 Graus de proteção providos por invólucros (Código IP)

Desenhos 102A1371, 102A1251, 102A2026, 102A2025, 102A2085

Identification Plate

FM Approvals

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Temp. Class: T4A
Tamb: 60°C max.
Vmax: 30 VDC
I max: 110 mA
Pi: 825 mW
Ci= 5 nF Li= neg

XP CL I, DIV 1, GP A,B,C,D
DIP CL II, DIV 1, GP E,F,G.
IS CL I,II,III, DIV 1, GP A,B,C,D,E,F,G.
NI CL I, DIV 2, GP A,B,C,D.
Per inst. dwg 38A2075. Pmax= 3600 psi.

Type 4X/6P

FM APPROVED

"The apparatus enclosure may contain aluminum which is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction."

0000000 - 0000

HART

CE

121301

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Temp. Class: T4A
Tamb: 60°C max.
Vmax: 30 VDC
I max: 110 mA
Pi: 825 mW
Ci= 5 nF Li= neg

XP CL I, DIV 1, GP A,B,C,D
DIP CL II, DIV 1, GP E,F,G.
IS CL I,II,III, DIV 1, GP A,B,C,D,E,F,G.
NI CL I, DIV 2, GP A,B,C,D.
Per inst. dwg 38A2075. Pmax= 3600 psi.

Type 4/6P

FM APPROVED

"The apparatus enclosure may contain aluminum which is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction."

0000000 - 0000

HART

CE

133601

ATEX/ IECEx

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Ex II 1/2G Ex ia IIC T4/T5/T6 Ga/Gb DMT 01 ATEX E 059 ()
Pi= 760 mW (T4, Ta= 75°C) -40°C ≤ Ta ≤ +85°C
700 mW (T4, Ta= 85°C) Ui= 28 VDC li= 93 mA
575 mW (T5, Ta= 60°C) Li= neg Ci ≤ 5 nF
575 mW (T6, Ta= 40°C)

IP66
IP68 10m/24h

Ex II 2G Ex db IIC T6 Gb PRESAFE 18 ATEX 12410X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

0470

145704

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Ex II 1/2G Ex ia IIC T4/T5/T6 Ga/Gb DMT 01 ATEX E 059 ()
Pi= 760 mW (T4, Ta= 75°C) -40°C ≤ Ta ≤ +85°C
700 mW (T4, Ta= 85°C) Ui= 28 VDC li= 93 mA
575 mW (T5, Ta= 60°C) Li= neg Ci ≤ 5 nF
575 mW (T6, Ta= 40°C)

IP66W
IP68W 10m/24h

Ex II 2G Ex db IIC T6 Gb PRESAFE 18 ATEX 12410X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

0470

151304

smar ~~BALDOTA~~ LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480 Brazil
Final Assembly is completed in Navi Mumbai IND

Ex II 1/2G Ex ia IIC T4/T5/T6 Ga/Gb DMT 01 ATEX E 059 ()
Pi= 760 mW (T4, Ta= 75°C) -40°C ≤ Ta ≤ +85°C
700 mW (T4, Ta= 85°C) Ui= 28 VDC li= 93 mA
575 mW (T5, Ta= 60°C) Li= neg Ci ≤ 5 nF
575 mW (T6, Ta= 40°C)

IP66
IP68 10m/24h

Ex II 2G Ex db IIC T6 Gb PRESAFE 18 ATEX 12410X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

0470

214700

smar ~~BALDOTA~~ LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480 Brazil
Final Assembly is completed in Navi Mumbai IND

Ex II 1/2G Ex ia IIC T4/T5/T6 Ga/Gb DMT 01 ATEX E 059 ()
Pi= 760 mW (T4, Ta= 75°C) -40°C ≤ Ta ≤ +85°C
700 mW (T4, Ta= 85°C) Ui= 28 VDC li= 93 mA
575 mW (T5, Ta= 60°C) Li= neg Ci ≤ 5 nF
575 mW (T6, Ta= 40°C)

IP66W
IP68W 10m/24h

Ex II 2G Ex db IIC T6 Gb PRESAFE 18 ATEX 12410X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

0470

214800

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Ex ia IIC T4/T5/T6 Ga/Gb IECEx BVS 19.0015 ()
Pi= 700 mW (T4, Ta= 85°C) -40°C ≤ Ta ≤ +85°C
575 mW (T5, Ta= 60°C) Ui= 28 VDC li= 93 mA
575 mW (T6, Ta= 40°C) Li= neg Ci ≤ 5 nF

IP66
IP68 10m/24h

Ex db IIC T6 Gb IECEx PRE 18.0031X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

210502

smar LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480
Brazil

Ex ia IIC T4/T5/T6 Ga/Gb IECEx BVS 19.0015 ()
Pi= 700 mW (T4, Ta= 85°C) -40°C ≤ Ta ≤ +85°C
575 mW (T5, Ta= 60°C) Ui= 28 VDC li= 93 mA
575 mW (T6, Ta= 40°C) Li= neg Ci ≤ 5 nF

IP66W
IP68W 10m/24h

Ex db IIC T6 Gb IECEx PRE 18.0031X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

210602

smar ~~BALDOTA~~ LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480 Brazil
Final Assembly is completed in Navi Mumbai IND

Ex ia IIC T4/T5/T6 Ga/Gb IECEx BVS 19.0015 ()
Pi= 700 mW (T4, Ta= 85°C) -40°C ≤ Ta ≤ +85°C
575 mW (T5, Ta= 60°C) Ui= 28 VDC li= 93 mA
575 mW (T6, Ta= 40°C) Li= neg Ci ≤ 5 nF

IP66
IP68 10m/24h

Ex db IIC T6 Gb IECEx PRE 18.0031X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

218200

smar ~~BALDOTA~~ LD291 Pressure Transmitter

Nova Smar S/A
Av. Dr Antônio Furlan Jr, 1028
Sertãozinho-SP 14170-480 Brazil
Final Assembly is completed in Navi Mumbai IND

Ex ia IIC T4/T5/T6 Ga/Gb IECEx BVS 19.0015 ()
Pi= 700 mW (T4, Ta= 85°C) -40°C ≤ Ta ≤ +85°C
575 mW (T5, Ta= 60°C) Ui= 28 VDC li= 93 mA
575 mW (T6, Ta= 40°C) Li= neg Ci ≤ 5 nF

IP66W
IP68W 10m/24h

Ex db IIC T6 Gb IECEx PRE 18.0031X ()
Tamb = -20°C to 60°C U= 28 VDC

0000000 - 0000

HART

CE

218300

smar LD291 Pressure Transmitter
 Nova Smar S/A
 Av. Dr. Antônio Furlan Jr.
 1028 Sertãozinho-SP
 14170-480
 Brazil

Ex I M1 Ex ia I Ma DMT 01 ATEX E 059
 $-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$
 $P_i = 700 \text{ mW}$ ($T_a = 85^{\circ}\text{C}$)
 $U_i = 28 \text{ VDC}$ $I_i = 93 \text{ mA}$ $L_i = \text{neg}$ $C_i \leq 5 \text{ nF}$

IP 66

0000000 - 0000 HART CE 0470 **145402**

smar LD291 Pressure Transmitter
 Nova Smar S/A
 Av. Dr. Antônio Furlan Jr.
 1028 Sertãozinho-SP
 14170-480
 Brazil

Ex I M1 Ex ia I Ma DMT 01 ATEX E 059
 $-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$
 $P_i = 700 \text{ mW}$ ($T_a = 85^{\circ}\text{C}$)
 $U_i = 28 \text{ VDC}$ $I_i = 93 \text{ mA}$ $L_i = \text{neg}$ $C_i \leq 5 \text{ nF}$

IP 66W

0000000 - 0000 HART CE 0470 **151002**

smar LD291 Pressure Transmitter
 Nova Smar S/A
 Av. Dr. Antônio Furlan Jr.
 1028 Sertãozinho-SP
 14170-480
 Brazil

Ex ia I Ma IECEx BVS 19.0015
 $-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$
 $P_i = 700 \text{ mW}$ ($T_a = 85^{\circ}\text{C}$)
 $U_i = 28 \text{ VDC}$ $I_i = 93 \text{ mA}$ $L_i = \text{neg}$ $C_i \leq 5 \text{ nF}$

IP 66

0000000 - 0000 HART IEC Ex **213600**

smar LD291 Pressure Transmitter
 Nova Smar S/A
 Av. Dr. Antônio Furlan Jr.
 1028 Sertãozinho-SP
 14170-480
 Brazil

Ex ia I Ma IECEx BVS 19.0015
 $-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$
 $P_i = 700 \text{ mW}$ ($T_a = 85^{\circ}\text{C}$)
 $U_i = 28 \text{ VDC}$ $I_i = 93 \text{ mA}$ $L_i = \text{neg}$ $C_i \leq 5 \text{ nF}$

IP 66W

0000000 - 0000 HART IEC Ex **213700**

INMETRO NCC

smar LD291 Transmissor de Pressão
 Nova Smar SA Av. Dr. Antônio Furlan Jr, 1028 | Sertãozinho - SP - Brasil | 14170-480

Segurança
 OCP-0004 INMETRO

Ex db IIC T6 Ga/Gb NCC 24.0164 ()
 Ex ia IIC T5 Ga NCC 24.0161 X ()
 Tamb= -20° a 50°C
 $U_i = 30\text{V}$ $I_i = 100\text{mA}$ $P_i = 0,7\text{W}$ $C_i = 6,4\text{nF}$ $L_i = \text{desp}$

IP66

0000000 - 0000 HART CE **137104**

smar LD291 Transmissor de Pressão
 Nova Smar SA Av. Dr. Antônio Furlan Jr, 1028 | Sertãozinho - SP - Brasil | 14170-480

Segurança
 OCP-0004 INMETRO

Ex db IIC T6 Ga/Gb NCC 24.0164 ()
 Ex ia IIC T5 Ga NCC 24.0161 X ()
 Tamb= -20° a 50°C
 $U_i = 30\text{V}$ $I_i = 100\text{mA}$ $P_i = 0,7\text{W}$ $C_i = 6,4\text{nF}$ $L_i = \text{desp}$

IP66W

0000000 - 0000 HART CE **125104**

smar LD291 Transmissor de Pressão
 Nova Smar SA Av. Dr. Antônio Furlan Jr, 1028 | Sertãozinho - SP - Brasil | 14170-480

Segurança
 OCP-0004 INMETRO

Ex db IIB T6 Ga/Gb NCC 24.0164 ()
 Ex ia IIB T5 Ga NCC 24.0161 X ()
 Tamb= -20° a 50°C
 $U_i = 30\text{V}$ $I_i = 100\text{mA}$ $P_i = 0,7\text{W}$ $C_i = 6,4\text{nF}$ $L_i = \text{desp}$

P1/P2 Pintura IP66

0000000 - 0000 HART CE **202603**

smar LD291 Transmissor de Pressão
 Nova Smar SA Av. Dr. Antônio Furlan Jr, 1028 | Sertãozinho - SP - Brasil | 14170-480

Segurança
 OCP-0004 INMETRO

Ex db IIB T6 Ga/Gb NCC 24.0164 ()
 Ex ia IIB T5 Ga NCC 24.0161 X ()
 Tamb= -20° a 50°C
 $U_i = 30\text{V}$ $I_i = 100\text{mA}$ $P_i = 0,7\text{W}$ $C_i = 6,4\text{nF}$ $L_i = \text{desp}$

P1/P2 Pintura IP66W

0000000 - 0000 HART CE **202503**

smar LD291 Transmissor de Pressão
 Nova Smar SA Av. Dr. Antônio Furlan Jr, 1028 | Sertãozinho - SP - Brasil | 14170-480

Segurança
 OCP-0004 INMETRO

Ex tb IIIC T85°C Db NCC 24.0164 ()
 Ex ia IIIC T₂₀₀100°C Da NCC 24.0161 X ()
 Tamb= -20° a 50°C
 $U_i = 30\text{V}$ $I_i = 100\text{mA}$ $P_i = 0,7\text{W}$ $C_i = 6,4\text{nF}$ $L_i = \text{desp}$

IP66

0000000 - 0000 HART CE **208503**

FM Approvals

UNCLASSIFIED LOCATION

SAFE AREA APPARATUS

CONTROL EQUIPMENT CONNECTED TO ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250VRMS OR VDC.

DUST-TIGHT CONDUIT SEAL MUST BE USED WHEN INSTALLED IN CLASS II AND CLASS III ENVIRONMENTS.

POWER SUPPLY

SIGNAL

R_{min} 250 Ω

THE ASSOCIATED APPARATUS MUST BE FM APPROVED

OPTIONAL SHIELDING


BARRIER

BUS GROUND

HAZARDOUS AREA

REQUIREMENTS:
1 – INSTALLATION SHOULD BE IN ACCORDANCE WITH ANSI/ISA RP12.06.01 "INSTALLATION OF INTRINSICALLY SAFE SYSTEMS FOR HAZARDOUS (CLASSIFIED) LOCATIONS" AND THE NATIONAL ELECTRICAL CODE (ANSI/NFPA 70).
2 – ASSOCIATED APPARATUS GROUND BUS MUST BE INSULATED FROM HAZARDOUS AREAS GROUND BUS.
3 – RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 1.0 OHM.
4 – WIRES: TWISTED PAIR, 22AWG OR LARGER.
5 – SHIELD IS OPTIONAL AND IF USED, BE SURE TO INSULATE THE END NOT GROUNDED.
6 – CABLE CAPACITANCE AND INDUCTANCE PLUS C_i AND L_i MUST BE SMALLER THAN C_a AND L_a OF THE ASSOCIATED APPARATUS.
INTRINSICALLY SAFE APPARATUS
THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS WITH ASSOCIATED APPARATUS WHEN THE FOLLOWING IS TRUE:
 V_{max} OR $U_i \geq V_{oc}$, V_t OR U_o ; I_{max} OR $I_i \geq I_{sc}$, I_t OR I_o ;
 P_{max} OR $P_i \geq P_o$; $C_a \geq C_i + C_{cable}$; $L_a \geq L_i + L_{cable}$;
ENTITY PARAMETERS:
 $P_i=825mW$ $C_i=5nF$ $L_i=NEGLIGIBLE$ $V_{max}=30VDC$ $I_{max}=110mA$
CLASS I,II,III DIV.1, GROUPS A,B,C,D,E,F & G
MODEL LD290, LD291 and LD301 PRESSURE TRANSMITTER.

COMPONENTS CAN NOT BE SUBSTITUTED WITHOUT PREVIOUS MANUFACTURER APPROVAL.

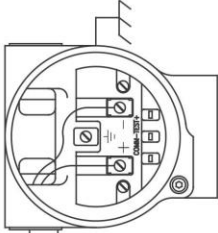

NO REVISION TO DRAWING WITHOUT FM APPROVAL.
WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
WARNING: TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT POWER BEFORE SERVICING.
WARNING: TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, READ, UNDERSTAND AND ADHERE TO THE MANUFACTURE'S LIVE MAINTENANCE PROCEDURES.
WARNING: THE APPARATUS ENCLOSURE CONTAINS ALUMINUM AND IS CONSIDERED TO CONSTITUTE A POTENTIAL RISK OF IGNITION BY IMPACT OR FRICTION. CARE MUST BE TAKEN INTO ACCOUNT DURING INSTALLATION AND USE TO PREVENT IMPACT OR FRICTION.

ENTITY PARAMETERS FOR ASSOCIATED APPARATUS
CLASS I,II,III DIV.1, GROUPS A,B,C,D,E,F & G
 $C_a \geq 5nF$ + CABLE CAPACITANCE
 $L_a \geq L_i$ + CABLE INDUCTANCE
 $V \leq 30V$
 $I \leq 110mA$
THE FM APPROVED ASSOCIATED APPARATUS MUST BE A LINEAR OUTPUT DEVICE.
ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.

FM

APPROVED

APPROVAL CONTROLLED BY WEBCONTDOC				DRAWN	CHECKED	PROJECT	APPROVAL
7	MARCIAL 20/11/20	ENIO 20/11/20	ALT 0794/20	DITO 3/12/92	DITO 3/12/92	BASÍLIO 3/12/92	BASÍLIO 3/12/92
6	MARCIAL 23/03/20	ENIO 23/03/20	ALT 0758/20	EQUIPMENT: LD290 / LD291 / LD301 CONTROL DRAWING			
5	MELONI 12/09/18	ENIO 12/09/18	ALT 0674/18				
REV	BY	APPROVAL	DOC				

smar


CONTROLLED BY DIGITAL MEDIA

NUMBER
38A207507

SCALE - SHEET
01/01

A.8

Appendix B

		SRF – Service Request Form Pressure Transmitters				Proposal No.:	
Company:				Unit:		Invoice:	
COMMERCIAL CONTACT				TECHNICAL CONTACT			
Full Name:				Full Name:			
Function:				Function:			
Phone:		Extension:		Phone:		Extension:	
Fax:				Fax:			
Email:				Email:			
EQUIPMENT DATA							
Model:				Serial Number:		Sensor Number:	
Technology: () 4-20 mA () HART® () FOUNDATION fieldbus™ () PROFIBUS PA						Version Firmware:	
PROCESS DATA							
Process Fluid:							
Calibration Range		Ambient Temperature (°F)		Process Temperature (°F)		Process Pressure	
Min.:	Max.:	Min.:	Max.:	Min.:	Max.:	Min.:	Max.:
Static Pressure		Vacuum					
Min.:	Max.:	Min.:	Max.:				
Normal Operation Time:				Failure Date:			
FAILURE DESCRIPTION (Please, describe the failure. Can the error be reproduced? Is it repetitive?)							
OBSERVATIONS							
USER INFORMATION							
Company: Contact: _____ Title: _____ Section: _____ Phone: _____ Extension: _____ E-mail: _____ Date: _____ Signature: _____							
For warranty or non-warranty repair, please contact your representative. Further information about address and contacts can be found on www.smar.com.br/en/contact-us							

